
 


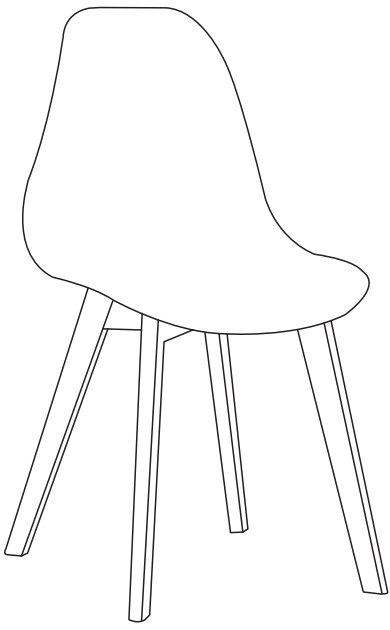

Ax1 	Bx1 	Cx1 	Dx5  M6X45
Ex5  M6X14X2	Fx1 	Gx4 	

SPARE (Ersatzteile)

Dx1 	Ex1 	Gx1 	
--	--	--	--

