 


# USER MANUAL

EZRA

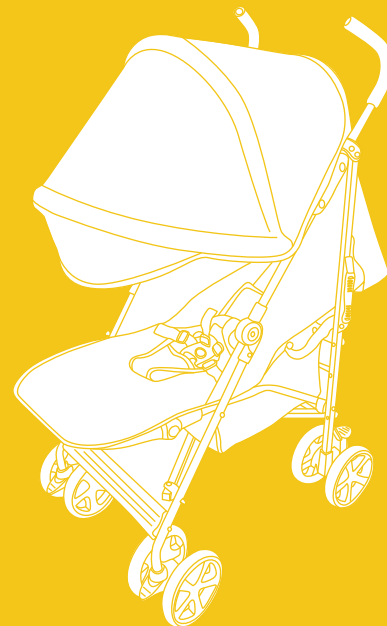

Joyful Kids · Joyful Trip



[www.jovikids.com](http://www.jovikids.com)



[jovikids\\_global](https://www.instagram.com/jovikids_global)



[service@jovikids.com](mailto:service@jovikids.com)

24V1.0

## Model JKST002

All rights reserved ©2024 JOVIKIDS. JOVIKIDS and all associated logos are trademarks.

All product specifications are correct at time of print.

JOVIKIDS reserves the right to change anything at any time without prior notice.

Color representation is as close as processes allow.

Approx.

**0-22Kg**

IMPORTANT, RETAIN FOR FUTURE  
REFERENCE: READ CAREFULLY

# 1. Warranty

## IMPORTANT- READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Remove all packaging and non-permanent labels and dispose of safely before using this product.

The safety of the child could be put at risk if you do not follow these instructions.

This stroller is designed for 1 child from 0 months up to a weight of 22 kg.

**WARNING!** Never leave the child unattended.

**WARNING!** Uneven or excessive loading of items in the stroller may cause it to become unstable, potentially leading to injury.

**WARNING!** Maximum intended weight within the shopping basket is 3kg.

**WARNING!** Ensure that all the locking devices are engaged before use.

**WARNING!** To avoid injury ensure that the child is kept away when unfolding and folding this stroller.

**WARNING!** Do not let the child play with this product.

**WARNING!** Always use the restraint system.

**WARNING!** Check that the stroller body is correctly engaged before use.

**WARNING!** Do not put hot drinks or liquids in the cup holder.

**WARNING!** This product is not suitable for running or skating.

**WARNING!** Do not insert any additional mattresses into the stroller.

**WARNING!** Accessories which are not approved by the manufacturer shall not be used.

**WARNING!** This pushchair has been designed for one child and shall be used for the transport for only one child!

**WARNING!** Always use the crotch strap in combination with the waist belt.

**WARNING!** This stroller does not replace a cot or a bed, Should your child need to sleep, then it should be placed in a suitable cot or bed.

# 2. Care and Maintenance

**WARNING!** Only replacement parts supplied or recommended by shall be used.

**WARNING!** Any load attached to the handle and on the back of the backrest and on the sides of the stroller will affect the stability of the stroller.

**WARNING!** The parking device shall be engaged when placing and removing the children.

**WARNING!** For a newborn baby, the seat unit should be in the most reclined position.

**WARNING!** Do not use if any part is broken, torn or missing.

**WARNING!** Check that the pram body or seat unit or car seat attachment devices are correctly engaged before use.

**WARNING!** Avoid placing the pushchair near naked heat sources such as electric bar fires, etc. or where a child could gain access to any other kinds of hazards.

EN 1888-1:2018+A1:2022 and EN 1888-2:2018+A1:2022 approved.

## Care and Maintenance

- Please check on a regular basis that the brakes, wheels, latches, connecting elements, belt systems and seams are properly functional.
- Do not expose the stroller to strong sunshine.
- Sponge clean only.
- After use in rain or snow, the wheels should be lubricated and the stroller dried to prevent rust.
- Care for, clean and check this stroller regularly.

### 3. Warranty

#### 1.Warranty

We provide a 1 year warranty against manufacturing or material defects. The warranty period is effective from the day of purchase and applicable to the UK and Ireland.If you made your purchase from an authorised retailer, please return your product to them. We are happy to refund any product if you change your mind about your purchase. As long as you tell us within 30 days of receiving your goods, They must be returned in an unused condition, in the original, undamaged packaging and complete with all original parts and accessories. Proof of purchase is required.

The warranty period begins on the date of purchase. To validate the warranty, please keep the invoice and register your product on [jovikids.com](http://jovikids.com).

#### what is not covered by the Guarantee?

- Failure to follow Jovikids user guide and maintenance instructions.
- Damage caused by non domestic use.
- General wear and tear, for example: worn wheels, damaged rain covers, worn/torn fabric.
- Deliberate damage, misuse or neglect.
- Product which has been modified, undergone an unauthorised repair or used a non approved spare part.
- Cosmetic damage.
- Parts subject to normal wear and tear, foam handles, rubber elements of wheels, signs of fabric wear.
- Loss incurred as a result of not being able to use a product whilst waiting for a spare part or repair.

A repair service is available for any item that sustains accidental damage at any point during its lifespan. If the damages are not covered by our guarantee, we will provide a quote for the repair costs on an individual basis. If you find yourself in need of spare parts that are not covered by the warranty, you can purchase each spare part on our website (subject to availability).

**For warranty claims, please contact your retailer directly. They will provide the necessary advice and support.**

 
**When processing claims, product-specific depreciation rates will be applied. Please refer to our General Terms and Conditions, which are available from your retailer.**

### 4. Components



- |            |                   |                 |                            |
|------------|-------------------|-----------------|----------------------------|
| 1. Canopy  | 3. Storage basket | 5. Carry handle | 7. Rear wheel              |
| 2. Harness | 4. Handle bar     | 6. Brake lever  | 8. Swivel lock front wheel |

**What's in the box**




Frame With Fabric

Front Wheels

Raincover

Cup Holder

## 5. Assembly Instructions

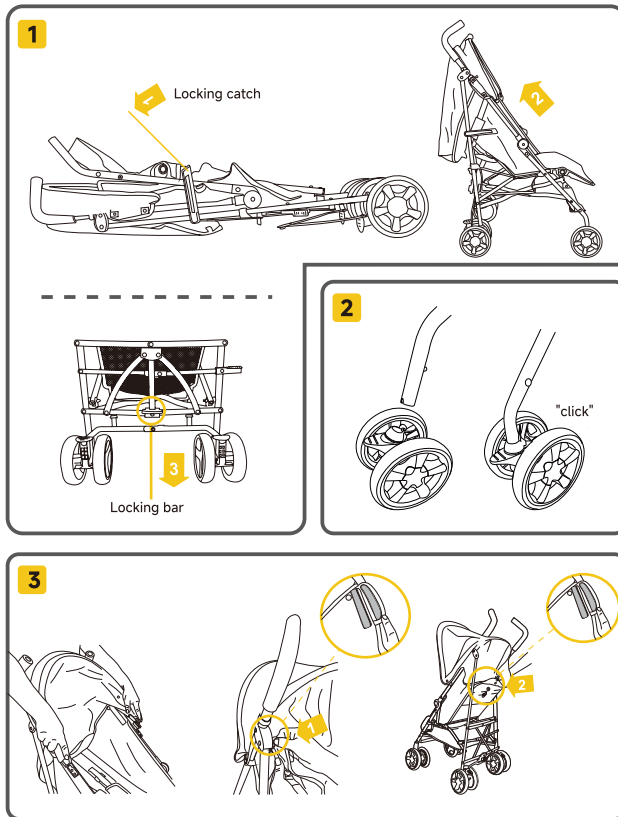 

## 5. Assembly Instructions

### 1 Unfold Frame

Locate the locking catch on the side of the stroller and lift to release from the locking stud.

Unfold the pushchair using both hands. Press the locking bar until it "clicks" into place.

### 2 Assemble the front wheels

Assemble the front wheels by pressing down the lock pin on the front tube.

Insert the front tube into the adaptor on the front wheel until the lock pin is fully engaged in the plastic hole.





Pull on the front wheels to ensure they are locked on.

### 3 Fit the canopy

Slide the plastic component of the canopy onto the corresponding part on the frame.

Attach velcro to both sides of the seat fabric and the rear of the backrest.

## 5. Assembly Instructions

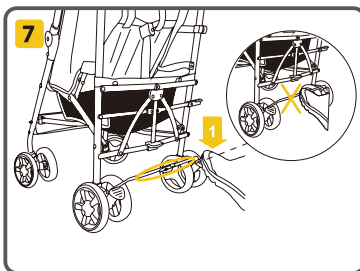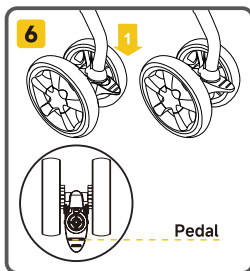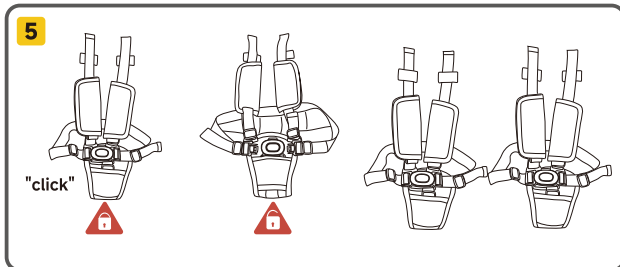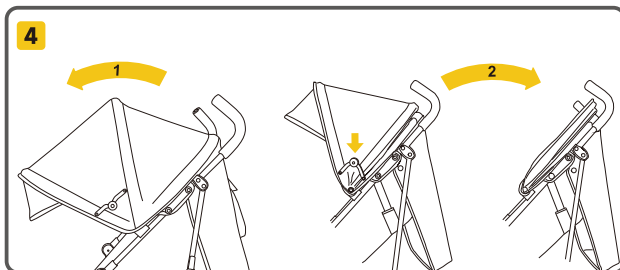

## 5. Assembly Instructions

### 4 Adjust the Canopy

Pull the canopy away from the backrest to open (Arrow 1).  
Push the canopy towards the backrest to close (Arrow 2).

### 5 Harness & Buckle

**To fasten the waist harness:** Insert both buckle clips into each side of the buckle until a "click" is audible.

**To release the harness:** Squeeze the buckles and pull apart.

**To adjust the buckle:** Adjust the shoulder straps by moving the slides as shown.

**Note:** Thread the shoulder straps through the loops to reduce the shoulder strap height if required.



### 6 Adjust lock swivel wheels

Your stroller has front locking swivel wheels. To lock, rotate the wheel so that the pedal is facing forward. Press the pedal down with your foot and you should hear a "click". Further minor rotation may be required, To release the locked swivel wheels simply lift the pedal with your foot.

### 7 To operate brakes



Your stroller has a linked parking brake. To engage brakes simply press down with your foot on the pedal located on the rear wheels. To release brakes simply lift the pedal located on the rear wheels with your foot.

### WARNING:

Do not step on the steel bar to apply the brakes.

Roll back and forth to make sure the brakes are engaged before letting go.

## 5. Assembly Instructions

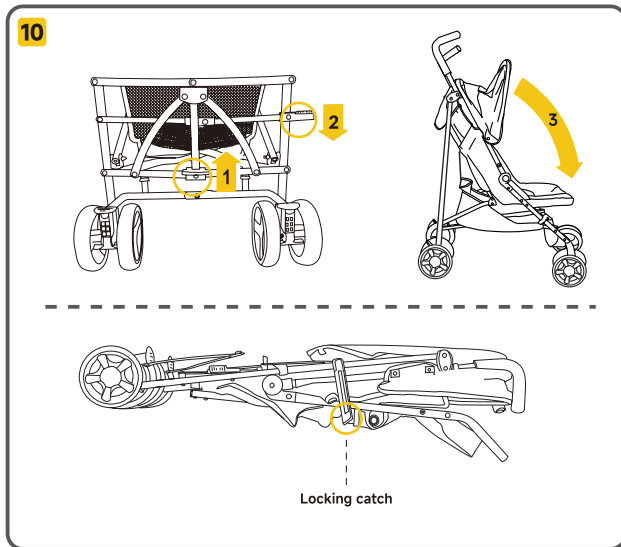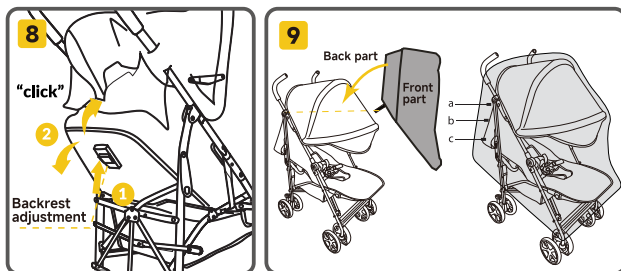

## 5. Assembly Instructions

### 8 To recline backrest

The backrest has 3 positions, upright, semi-reclined and fully reclined. Squeeze and hold the seat backrest adjustment lever and move the seatunit upwards or downwards. Release the lever once the desired position has been achieved and a "click" noise is heard. Check the backrest is secure before placing the child into the pushchair.

### 9 To fit the raincover

Place the raincover over the hood and then cover the stroller. Fasten the touch fasteners to the stroller in positions A, B & C on both sides.

### 10 Folding the stroller

Lift the rear locking catch upwards with your foot (1), push the second locking clip down with your foot (2). The pushchair will begin to fold at point.

Push the handles over and the pushchair will naturally catch on the locking catch located on the side of the stroller (3).