




User Manual

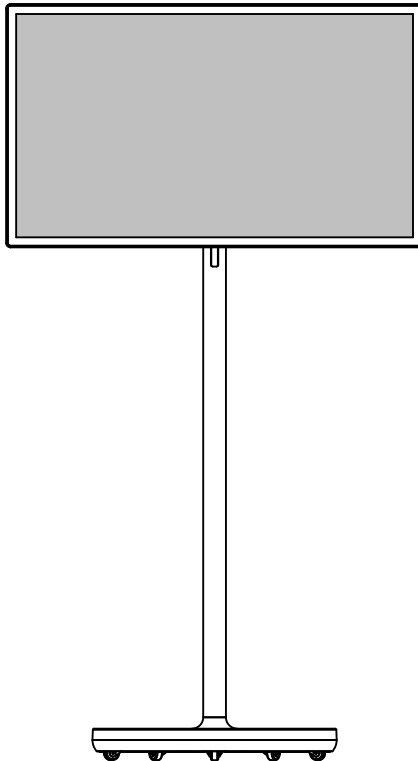

C20P

*Please read this manual carefully before operating your set and retain it for future reference. If you encounter any problems during use, please contact us by email: gpsrhelpdesk@outlook.com

Contents

List of items 2

Safety Warnings and Cautions 3

Product list 8

Angle adjustment 9

Use of built in battery11

Wireless Screen Casting12

HDMI IN Casting Screen13

Voice Assistant Pairing14

Basic operation.....23

Important Notice about Web Services24

Approaches to simple problems24

Product Specification25

Toxic and hazardous substancesin prpducts26

List of items

Please check that the following at tachments contain		
	Name	Quantity
1	Display screen	1
2	Round base	1
3	Rod body	1
4	Power Adapter	1
5	Hexagon socket head cap screws	4
6	Hexagonal Wrench	1

Safety Warnings and Cautions

Thank you very much for purchasing this product, This product comes with 360°wheels,which can follow you anywhere and meet your needs of using it in multiple venues, such as living room, bedroom, office, campground and so on. This product is integrated with advanced touch technology, with fast response speed, high The product is integrated with advanced touch control technology, featuring fast response speed, high positioning accuracy, strong environmental adaptation, accurate operation and other technical characteristics.



This product has been designed to ensure personal safety and has been rigoously tested before leaving the factory, However, incorrect installation and use may lead to electric shock and fire and other hazards, in order to ensure safety and prolong the service life of this product, to ensure that the product's optimal performance can be fully realized, please read and understand all the instrutions and name-plate markings before using this product, carefully observe the following safety precautions,and keep the instruction manual for future use.

Safety Warnings and Cautions



There is a non-insulated "dangerous voltage" in the enclosure of the product, which is strong enough to pose a risk of electric shock.



Warnings

May cause injury or death



This icon indicates behavior that must be prohibited



Note

May cause injury or property damage



This icon indicates an action that must be performed

The product's enclosure contains non-insulation-protected "hazardous voltage" that are strong enough to pose a risk of electrocution.

- Immediately turn off the product, unplug the power adapter from the power outlet, and contact a service professional for prompt service when any of the following occurs.
 1. The product emits abnormal sound or odor, or shows other obvious abnormalities.
 2. The power cord or adapter is damaged or worn out.
 3. The product is damaged due to dropping, knocking, or impact, or any liquid or foreign objects fall into the casing.
- Important Safety Note: In case of gas or other flammable gas leakage, do not plug or unplug the power plug of this product or any other electrical appliances. Instead, immediately close the gas valve and quickly open doors and windows for ventilation.



Warning



- This product can only be used with the type of power adapter shown on its nameplate.
- If you are in doubt about the type of power supply you are using, consult this product's customer support or your local power supply office.
- Do not disassemble the power adapter, as this may result in fire or electric shock.
- Place the power adapter carefully to avoid dropping or being struck.
- Shock may cause damage to the product.
- Place the product on a level surface.
- Do not place the product in an unstable or inclined position, as it may fall and be damaged, or even catch fire, which may result in personal injury and death. Always use the bracket and mounting method provided by the manufacturer of this product.
- Never allow children to climb on this product as this may cause the product to tip over and cause serious injury.
- Keep small accessories out of the reach of children to avoid accidental swallowing or loss.
- Do not sandwich fabric or other materials between this product and the floor.
- Do not place objects on this product.
- Do not place this product on:
 1. direct light, humid, too hot, too cold or dusty environments;
 2. environments where flammable and explosive substances are stored or used;
 3. Environments with flammable or corrosive gases.
 - 4 Bathrooms, kitchens and other high humidity, heat sources, steam or fumes and other work environment or nearby.

Safety Warnings and Cautions

FCC Warning

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) this device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.
- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
- This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
- However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.

Safety Warnings and Cautions



Warnings

- Do not use damaged or unsuitable sockets, and ensure that the plug and socket are in good contact.
- Do not allow dust and metal attachments to adhere to the adapter plug and socket.
- Do not damage the power adapter ;
- Do not modify the adapter ;
- Do not place heavy objects on the power cord ;
- Keep the power cord away from heat sources
- Do not pull the power cord when unplugging the power adapter; instead, hold the power adapter in your hand before unplugging.
- Do not connect too many plugs in parallel to the same outlet , as this may cause a fire due to excessive power consumption .
- Do not place open flames (e. g. , lighted candles) near the product , as this may cause electric shock or fire.
- Do not place containers with water on the product, as this may cause electric shock or fire due to water droplets or splashing.
- Do not allow any sharp objects, metals or liquids to penetrate or touch the signal connector or heat sink, as this may short-circuit the circuit and damage the product, and may also result in the risk of electric shock.
- The openings on the housing are for ventilation and heat dissipation to ensure that the components inside the unit work reliably for a long period of time and to prevent them from overheating. Be careful not to block the openings when placing the product, and always leave at least 4 inches or 10 centimeters of space around the product for ventilation.
- This product has a built-in lithium battery in the base, So use it with caution !
- If the battery leaks liquid, stop using it immediately and avoid contact with your skin and eyes. It may cause blindness or burns if you are not careful . If the part of your body in contact with the liquid shows any unusual symptoms , wash the area with sufficient water and seek medical advice.
- Dispose of the battery in a proper manner. There is a risk of explosion or fire if the battery is not disposed of properly. Battery disposal guidelines vary from country to country and region to region.
- Do not expose the product to 220v-120v power sources (especially lithium batteries) .
- Do not expose it to flames, electric heaters, or direct sunlight. Doing So may cause electric shock, injury, or fire.
- Do not use any power source or circuit other than those specified when charging the battery. otherwise, there is a risk of battery damage or fire.
- Be careful when using lithium batteries as there is a risk of fire or explosion.
- Check the charging port carefully before each charge to ensure that it is free of debris and dirt. If there are any debris or dirt , clean the charging port with a soft cloth. If the charging port is dirty or has foreign objects on it , the battery will not charge properly and may cause a fire.
- If the battery is fully discharged and has not been used for a long period of time, it may not be rechargeable at all , or its battery life may be shortened.
- Do not remove, disconnect, disassemble, or short-circuit the battery. Doing So may cause electric shock, injury, or fire.

Safety Warnings and Cautions



Warnings

- Do not replace the battery pack with an incorrect type, as this may disable the safety protection, Replacing the battery pack with an incorrect model poses a risk of explosion.
- Never put the battery into a fire or furnace, or mechanically crush or cut the battery, as this may cause an explosion.
- Do not expose the battery to extremely high temperatures that could cause the battery to explode or leak flammable liquids or gases.
- Never subject the battery to extremely low air pressure that could cause the battery to explode or leak flammable liquids and gases.
- Do not touch the plug with wet hands as this may cause electric shock.
- Do not use the product during heavy rain, especially when there is lightning, and unplug it promptly to prevent lightning strikes.
- Do not disassemble the product by yourself in any way, as this may cause electric shock or fire, All repairs should be entrusted to professional technicians.



Note

- Always organize the cords and cables connected to this product so that they cannot be tripped over, pulled, or grabbed.
- Ensure that minors do not play, play, chase, play, run, jump, or push, pull, touch, or hit the product in any way in the vicinity of the product to avoid tipping or damaging the product.
- Ensure that pets do not play, chase, chase, play, run, jump, or push, touch, or hit the product in any way that could cause it to fall over or be damaged.
- Do not place the product on carpets or mats.
- Be careful not to get your hands, feet, hair or clothing caught in the wheels.
- Do not push or kick the product.
- Do not ride the product as if it were a footrest.
- Do not rub or knock the LCD with hard objects, or twist or squeeze the LCD with force.
- To clean the product, unplug it from the power supply, wipe it with a soft cloth, do not use industrial chemicals, and take care to prevent foreign objects from entering the interior of the machine, Improper cleaning (e.g., cleaning solution, water, etc.) may result in damage to the product's appearance, erase the printed information on the product, or even penetrate into the interior of the machine and damage the components, rendering the machine unavailable for display and use.
- When it is necessary to move the product, disconnect all electrical connections and move it slowly to prevent it from falling.
- Do not use the product immediately after moving it from a low-temperature place to a high-temperature place, as this may cause condensation inside the product, resulting in malfunction.
- Do not place the product in a place with strong electromagnetic fields, as this may cause it to be disturbed and damaged by electromagnetic waves.
- Do not place the product in front of an air conditioner, as this may cause condensation on the internal panels of the product, resulting in malfunction.

Safety Warnings and Cautions



Note

- If the ICI breaks and the solution splashes on your skin, immediately rinse with water for 15 minutes and consult a doctor.
- When handling the product with bare hands, grasp the corners and hold the bottom, and do not apply pressure to the glass panel.
- If the machine displays the same screen for a long time or if the active screen contains text or icons that remain stationary for a long time, it will leave a "residual image" on the screen that will not disappear for a long time after the machine is turned off, and this undesirable phenomenon is not covered by the warranty.

Healthy viewing of the screen:

1. Please watch the screen in proper lighting conditions, low light or prolonged screen watching may damage your eyesight.
 2. Please adjust the volume to avoid hearing damage from excessive volume.
- If you do not use the product for an extended period, such as when going out for a long time, be sure to turn off the product and unplug the power adapter.
 - When the power plug or appliance coupler is used as a disconnecting device, the disconnecting device should be easy to operate.
 - The power plug should be fully inserted into the power outlet, as a loose connection may cause sparks and result in a fire.
 - All technical specifications in this manual and on the outer packaging are subject to change without notice for improved service. If there is any slight difference between the instruction manual and the actual operation, please refer to the actual operation.

Installation Instructions

Base and Rod Mounting Instructions



Warning


- Ensure that the bracket fixing screws are securely locked during assembly. Dropping the bracket may cause damage to the product or injury to personnel.
- The product is heavy, so ensure that at least two people cooperate in assembling the product when unpacking and installing it.
- Do not apply foreign substances (such as oil or lubricant) to the screws during assembly.
- Do not remove the cable holders and screws after the product has been installed.
- For daily use, hold the center of the bracket and ensure the product is moved in an upright position. Do not tilt the product as there is a risk of it tipping over, which could result in product failure or injury.

Product list


Product list



Display screen X1

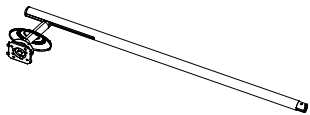

Rod body X1

 

Round base X1



Hexagon socket
head cap screws X4



Hexagonal
Wrench X1



Power Adapter X1



Angle adjustment

Adjust the angle of this product to ensure a comfortable viewing experience.

Note: Some applications may not support vertical display.

Forward Tilt Angle: $20^{\circ} \pm 35^{\circ}$

Rear Tilt Angle: $35^{\circ} \pm 3^{\circ}$

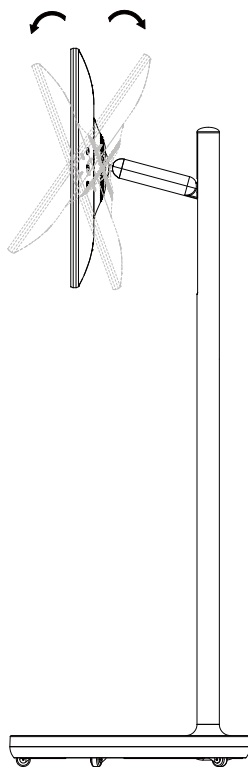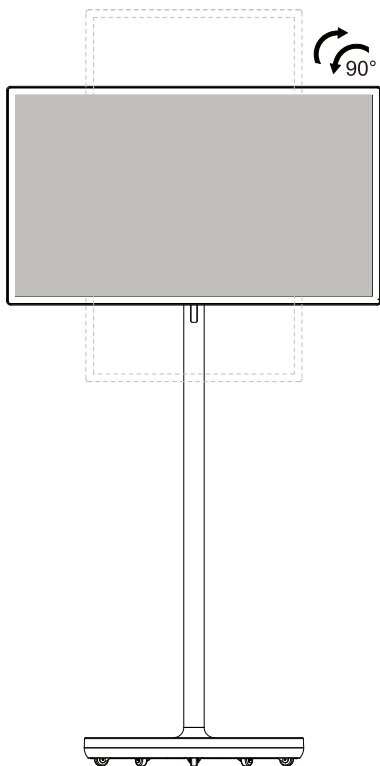

Caution


- Do not rotate the product beyond its designed tilt angle limits or maximum adjustable range.
- Keep your hands and fingers away from the adjustment area of the stand to avoid pinching or injury.

Angle adjustment

Warning

Be sure to disconnect power when plugging and unplugging all interface cables.

Open the interface dust cover and connect the corresponding interface as required.

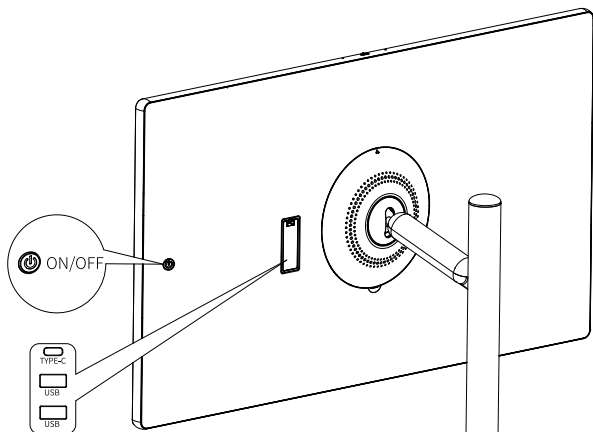

Button Function:

ON/OFF Key: Turns the product on or off.

Interface Functions:


USB: Can be used with a USB storage device, or for a mouse and keyboard receiver.

HDMI IN: 1920*1080

DC-IN: Connect the power adapter.


Caution

When turning on the product for the first time, please connect the power adapter first so that the product can be turned on correctly. Please make sure the product is connected to the power adapter, and then plug the adapter of the product into the power outlet.

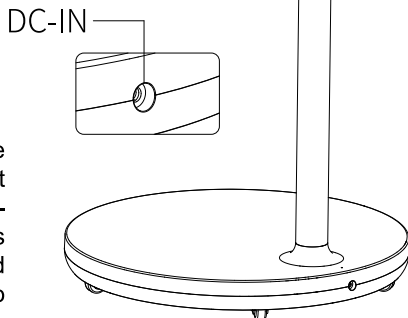

Use of built-in battery

The base of the product contains a built-in battery that can be used for a period of time without connecting to another power source. The remaining battery power can be checked on the screen after powering on the product. During charging, the battery indicator will display three statuses according to the battery level (Green Light Always On/Green Light Blinking/Red Light Blinking).

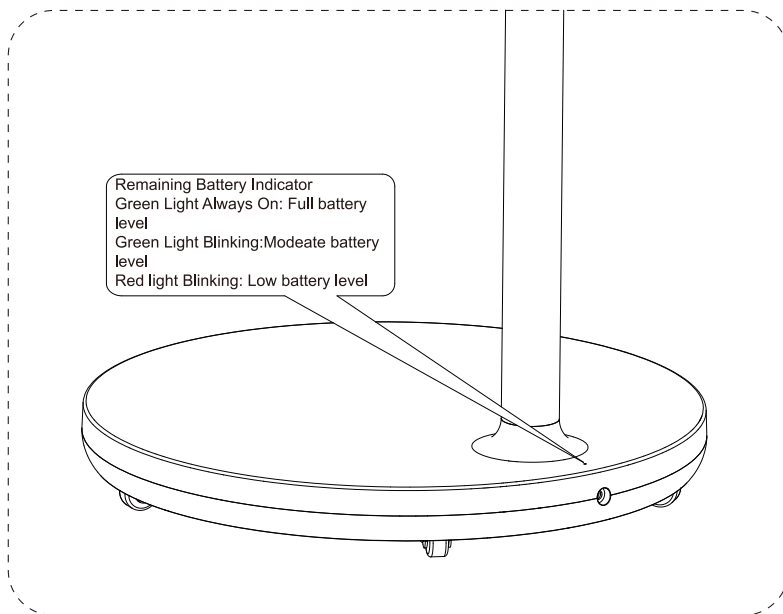

Attention

- Battery life and usage time after charging will decrease proportionally with the length of product usage.
- The battery should not be charged under extreme conditions.
- The remaining battery power will naturally decrease in standby mode.
- To prolong battery life, it is recommended to recharge the battery after a certain period of use rather than keeping the battery fully charged at all times.
- Maintaining the battery at 50% helps to extend battery life.
- Maximum usage time after recharging is 3-4 hours.
- Battery life may vary depending on a variety of factors, such as the connected device, operating temperature, time of use, user settings, etc. Therefore, actual battery life may vary depending on usage.

Wireless Screen Casting



Wireless Screen Casting



Wireless Screen Casting



Turn on your phone, select the wireless casting function
Select Mobile smart screen to mirror


HDMI IN Casting Screen




Plug in the HDMI port and open the
HDMI IN APP  to realize the screen casting.

Google Voice Assistant Pairing Instructions

Sign in to your Google account

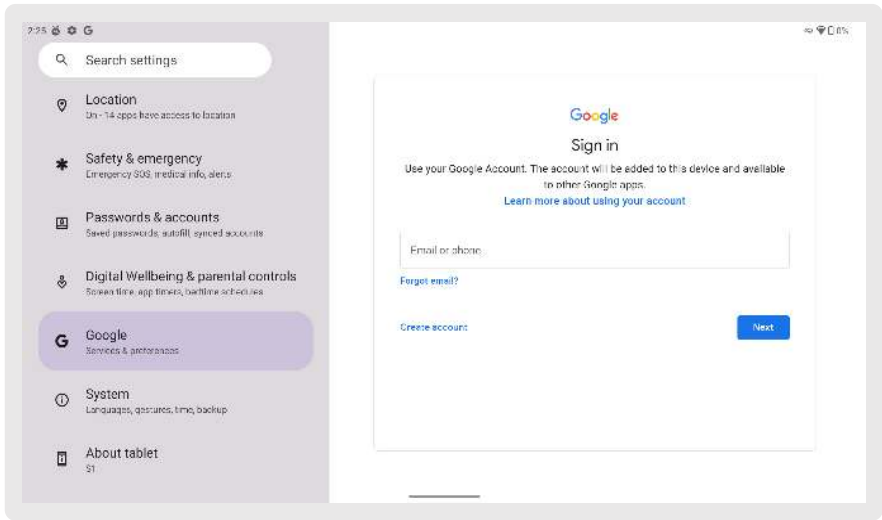



(1) Open Settings and find Google, enter Google account and click sign in.

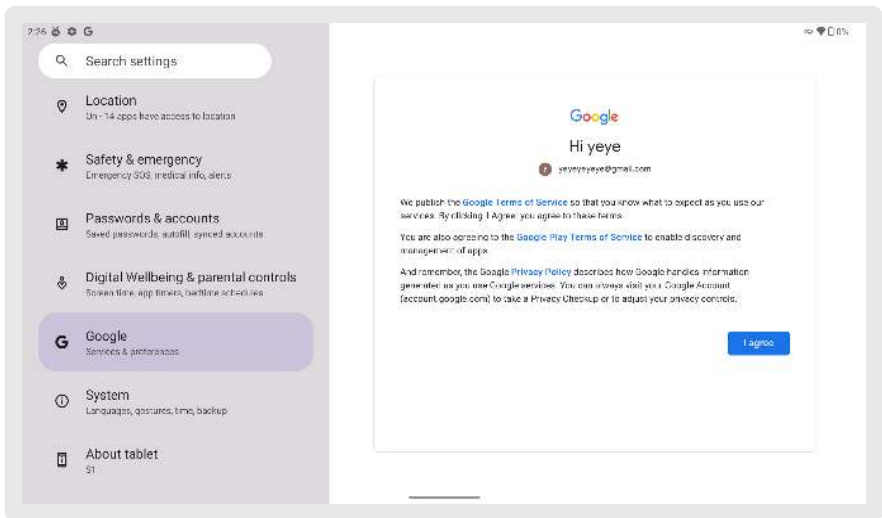


(2) Click to **I agree**

 Google Voice AssistantPairing Instructions

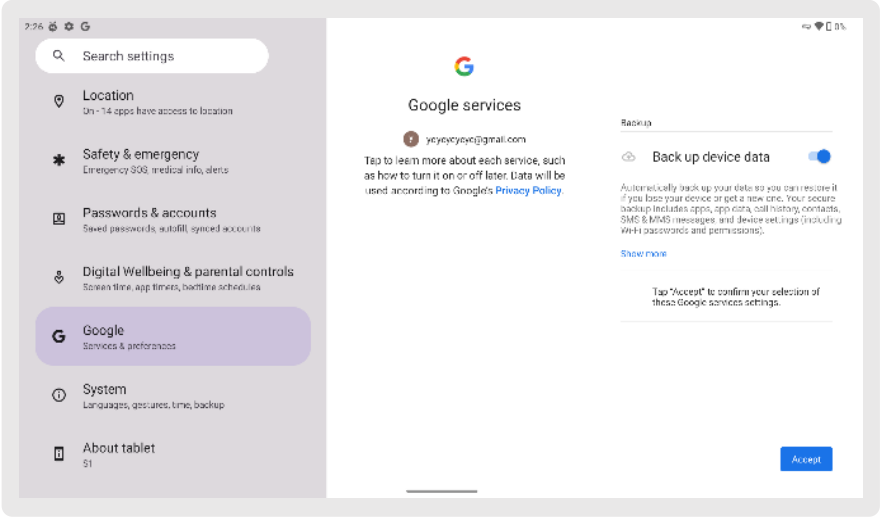


(3)Click to 

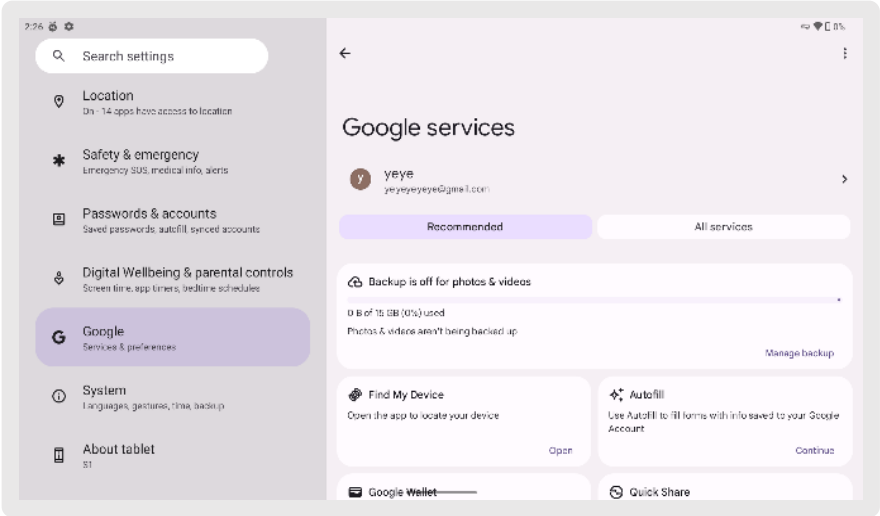


(4)Login Successful

Google Voice AssistantPairing Instructions

Setting up Google Voice

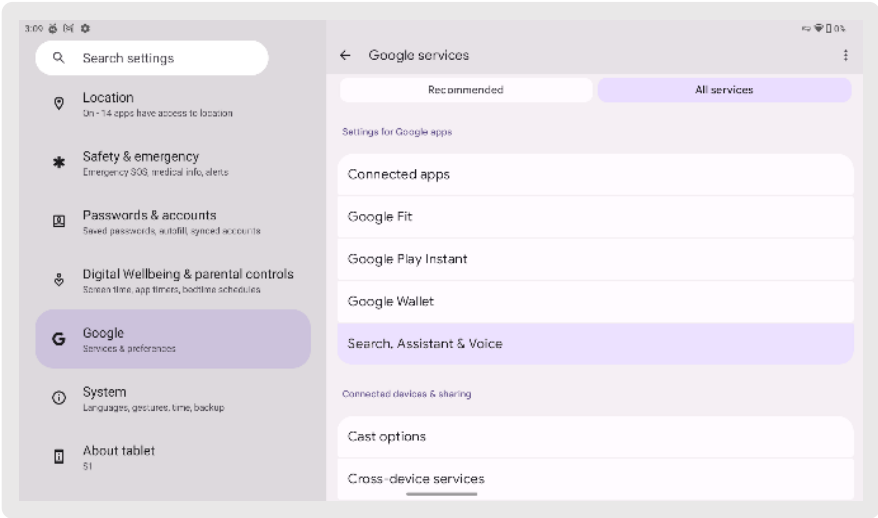


(5)In “All Services”click on“ Search,Assistant & Voice”

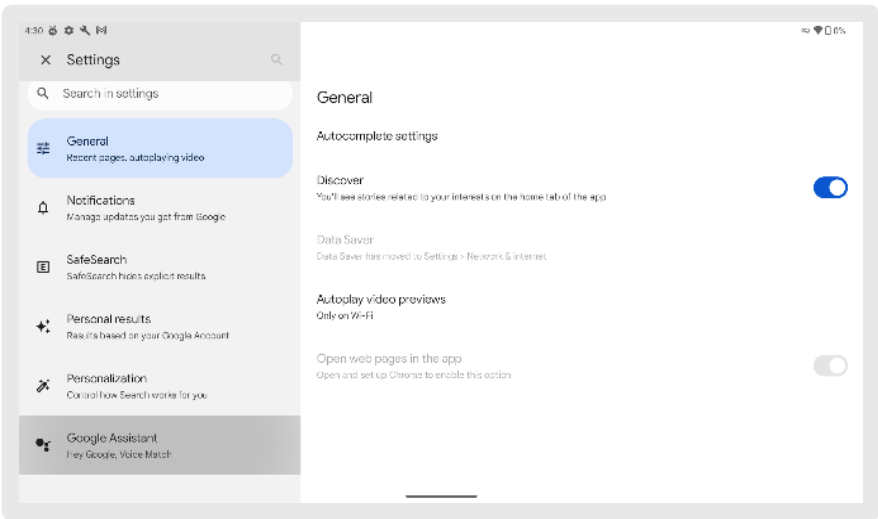


(6)Click on “Google Assistant”

Google Voice AssistantPairing Instructions

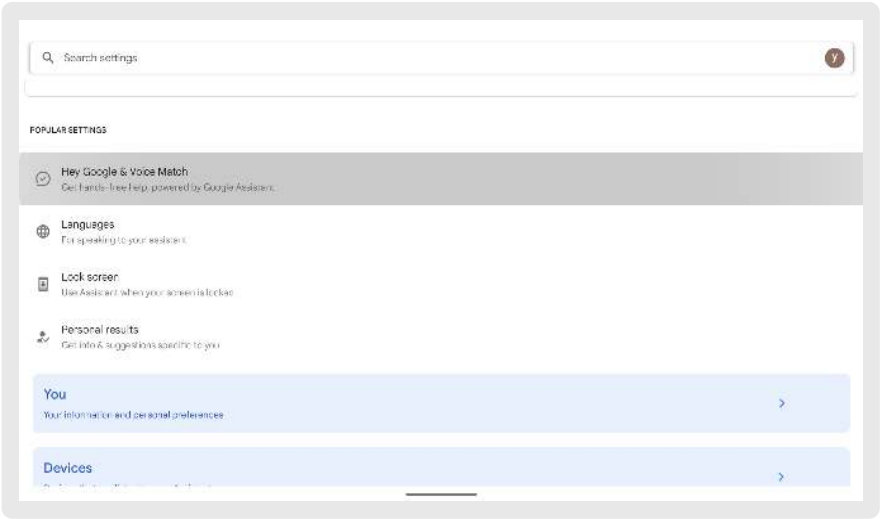


(7)Click on “Hey Google & Voice Match”

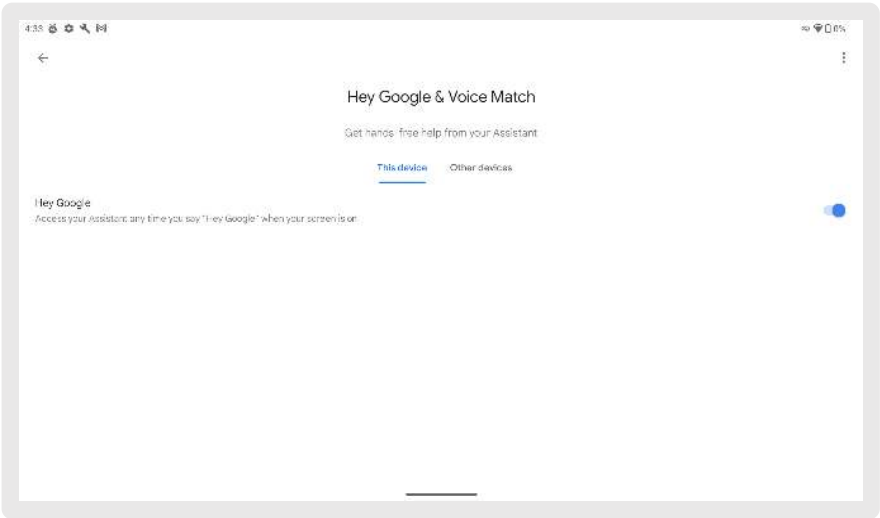


(8)Turn on “Hey Google”

Google Voice AssistantPairing Instructions

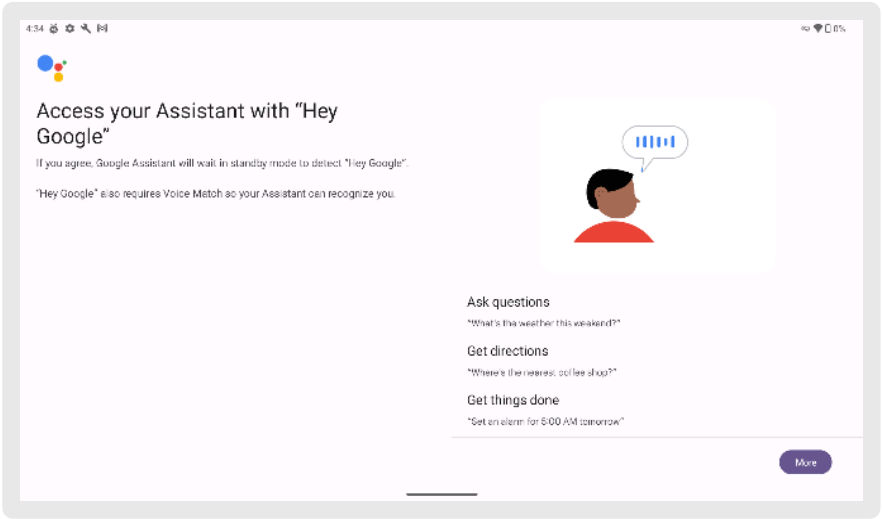


(9)Click“More” and then “I agree”

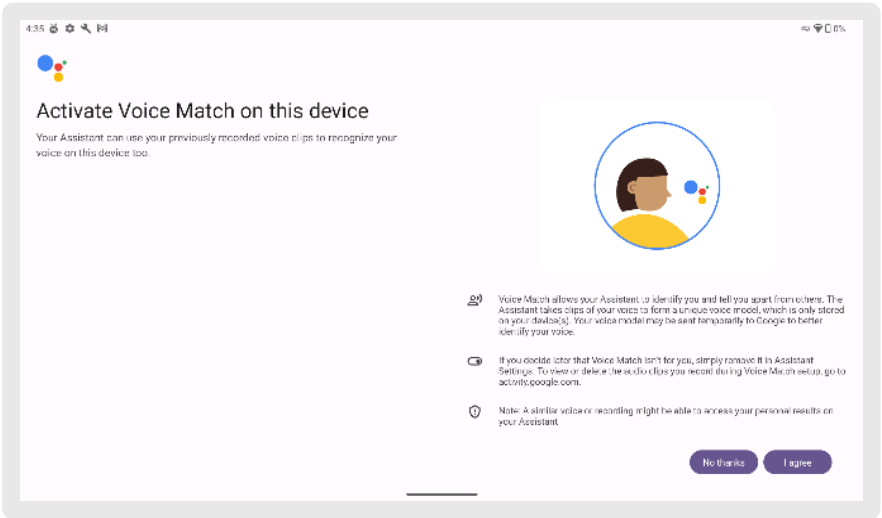


(10)Click “I agree”

Google Voice AssistantPairing Instructions

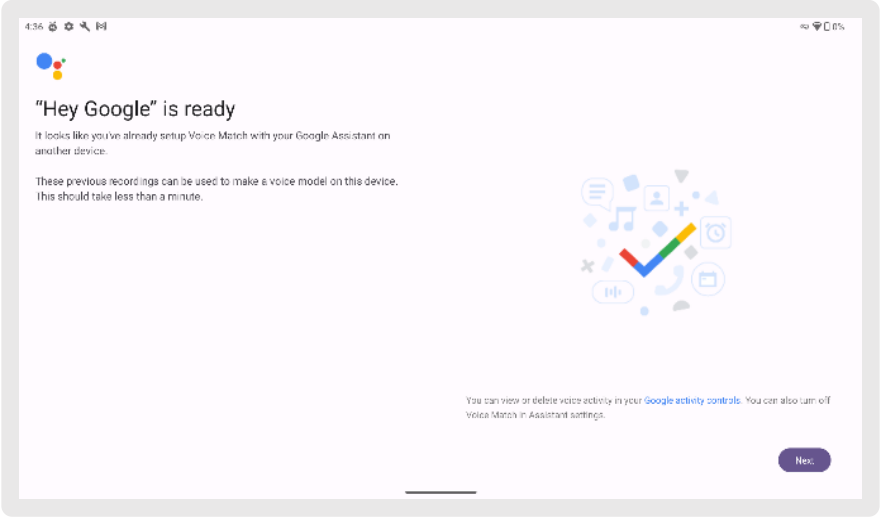


(11)Click "Next"

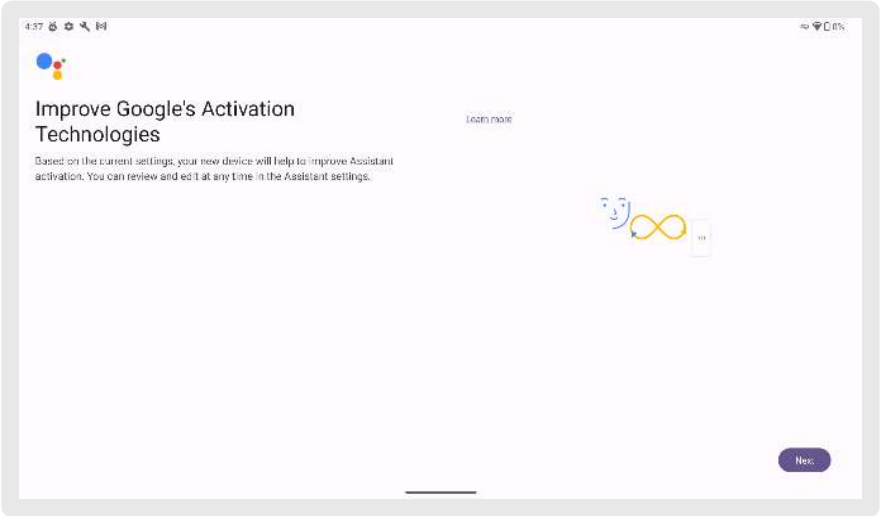


(12)Click "Next"

Google Voice Assistant Pairing Instructions

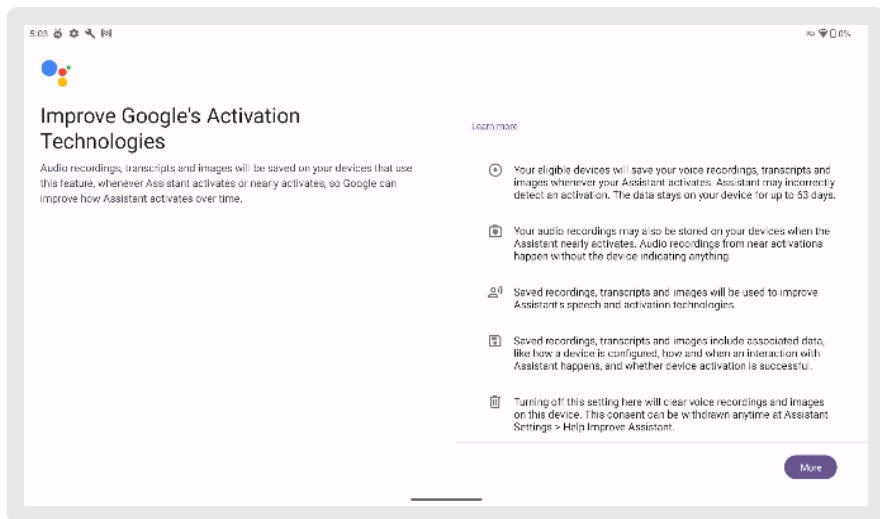


(13)Click “More”

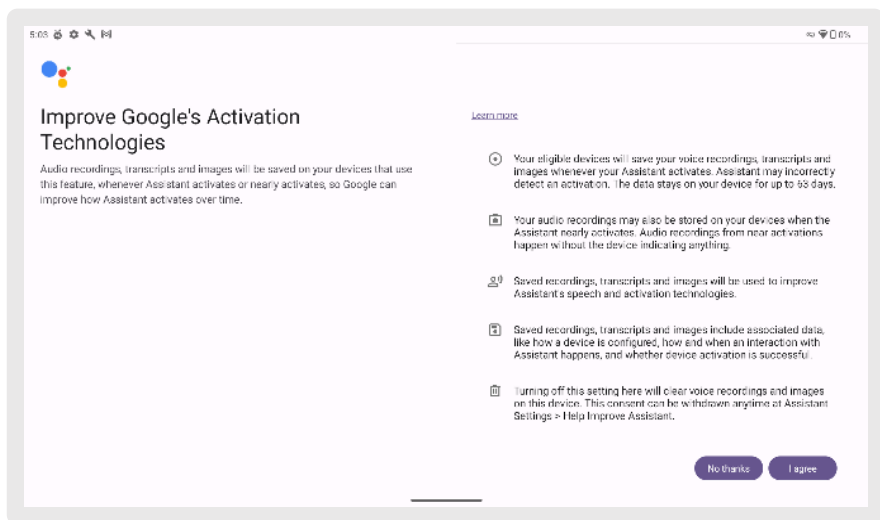

(14)Click “I agree”


Google Voice Assistant Pairing Instructions

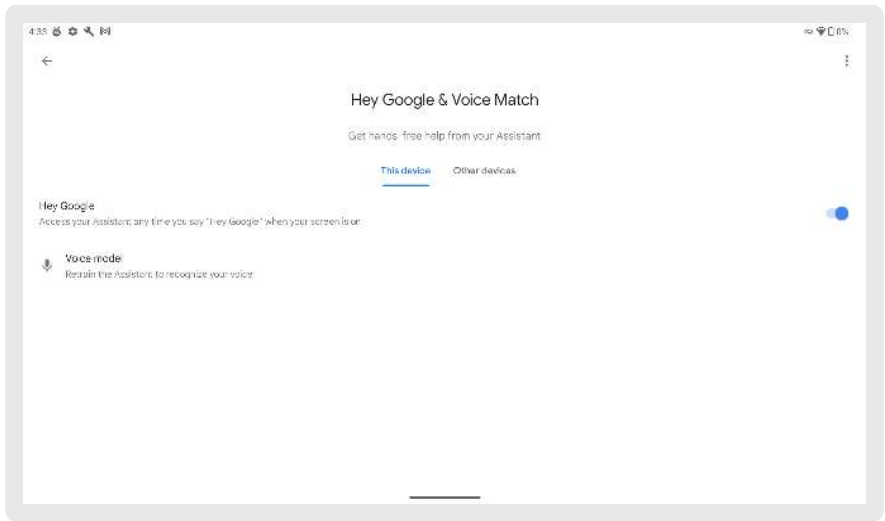


(15) You can go back to the main interface to wake up directly or you can click "Voice mode" to retrain the voice assistant to recognize your voice."

Google Voice Assistant Pairing Instructions

Wake Up Call

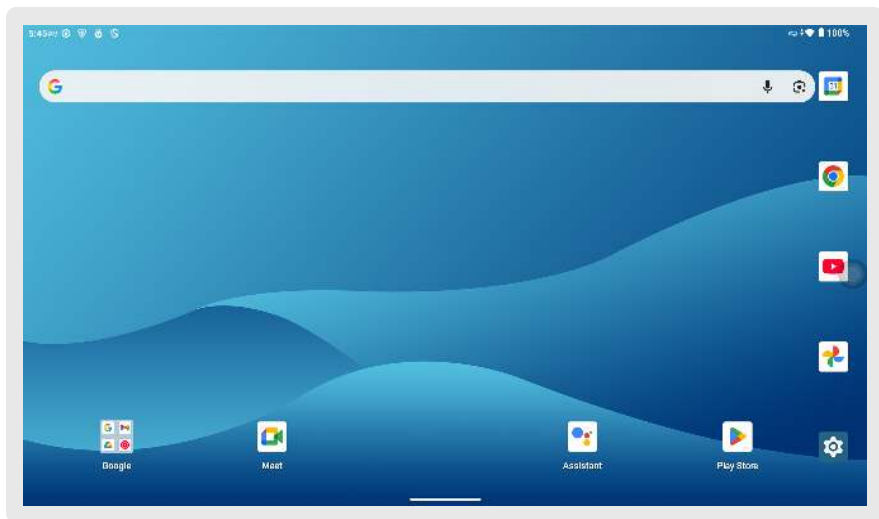

(16)To wake up, say Hey Google or OK Google.

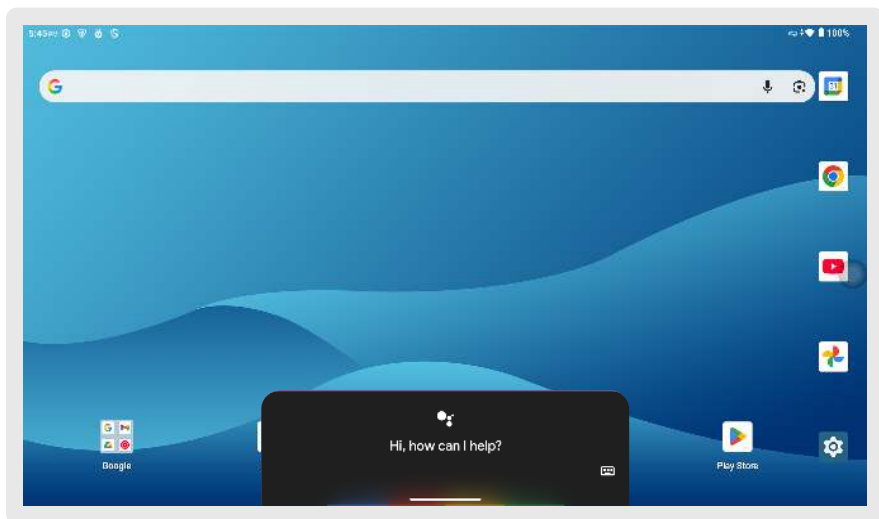

(17)Goole woke up successfully

Basic Operation

Power on/Standby

Connect the power adapter, the indicator on the back of the screen lights up red, long press the  key on the back of the case for 2 seconds, the screen starts up, the indicator lights up green, click the  key, according to the prompt menu to choose standby or shutdown.

Touch Operation

Tap: Tap the screen.

Long press: Tap the screen for 2 seconds or longer.

Slide: Slide the screen up, down, left, or right.

Drag: Tap and hold the target you want to move, such as an application, and slide it to the desired location.

Pinch/Spread: Place two fingers on the screen, then pinch them together or spread them apart to zoom in or out.

Note

Whether or not the display supports the zoom-in/zoom-out function depends on the application, so please operate according to the actual situation.

Avoid pressing hard on the screen, just tap on the desired item with your fingertip if necessary. If you are wearing gloves or touching the screen with your fingernail, this product may not work properly.

If the screen is a little wet or too humid, the touch sensor will not function properly.

Bluetooth Settings

Click "Settings > Bluetooth" and turn on Bluetooth, the system will start to search and list the available Bluetooth devices nearby. Click the name of the device you want to connect to, and follow the system prompts. After successful pairing, you can see the corresponding device name in "Paired Devices".

Wireless Network Connection

Click "Settings > WIAN" and turn on WIAN, the system will start to search and list the available wireless network signals. Click on the network you want to connect to, the network with the icon means it is encrypted and you need to enter the correct password to connect to the network.

The network with the icon means it is encrypted and you need to enter the correct password to connect to the network.

Note: You can add just more system settings in "Settings" as needed.

Screen casting function

Click "Cast Screen". Select the casting method according to the device you are using: cell phone casting, computer casting, or app casting. Please follow the on-screen prompts to complete the screen casting process.

Important Notice about Web Services

All content and services available through this machine are owed by third parties and are protected by copyright, patent, trademark, and or other intellectual property laws and this content and services are intended for your personal, non-commercial use only and you may not use any of the content or services in a manner that is not authorized by the content owner or service provider.

Under no circumstances will the Company be liable for any direct, indirect, incidental loss or damage arising out of or in connection with your or a third party's access to any contentor service or any information or any third party software through this machine.

Third party services may be changed, deleted, or discontinued without prior notice, and the Company makes no representation or warranty that certain services or content will remain available at any time.

We are not responsible for services related to the Services and the Content and will not assume any liability for customer service. For any questions and service requests regarding the Services or the Content, you should contact the appropriate content and service providers directly.

Approaches to simple problems

Fault Phenomenon	Cure
The screen does not show anything there is no sound the indicator light does not light up.	1.Check whether the power socket has electricity. 2.Check if the power adapter is properly connected. 3.Check whether the power cable behind the screen is correctly connected in place
The product suddenly shuts down	1.Possibly the built-in battery power is exhausted, please connect the power adapter for charging. 2.If the battery overheats, the product will automatically shut down and enter a self-protection state.
No sound	Adjust the volume to an appropriate level.
No touch response	1.Check if there is any foreign matter pasted on the screen. 2.Verify that the FlyingMouse remote controls not occupying the touch function, as Flying Mouse and touch cannot be used simul taneously.
The network cannot be connected	1.Contact the network administrator to get the available network IP address and other parameters. 2.Check if the network is connected normally. 3.Consult the network service provider.
Stuck when playing video online	1.Please upgrade your network bandwidth to a higher speed. 2.Please try to change other VO address to get better resources.
Stuck, dead, cannot operate the product	Disconnect the power cable at the back of the screen, wait for 1 to 2 minutes and then turn on the power again. Connect the power cable, and then turn on the computer again.

Product Specification

Product Name	Mobile Smart Screen
Panel Size	31.51in
Resolution	1920*1080
Refresh Rate	60Hz
System	Android 15
Power	≤65W
Power supply	19V  3.42A
Lithium battery	8000mAh
Speaker Power	10W
Product Interface	USB 2.0*2 Type-C*1
Working Temperature	0~40℃
Storage Temperature	0~50℃
Working Humidity	≤65%RH
Storage Humidity	≤60%RH
Dimensions and weight	
Screen Size	741x436x43(mm)
Overall Dimension	741x1290x430(mm)
Packing Size	1150x561x215(mm)
Net Weight	17.5KG ± 1KG
Packing Weight	22KG ± 1KG

Name of toxic and hazardous substances or elements in the product

Component Name	Toxic and harmful substances					
	Pb	Hg	Cd	CR(V1)	PBB	PBDE
Shell	○	○	○	○	○	○
Display	×	○	○	○	○	○
Circuit board assembly*	×	○	○	○	○	○
Power cord / connection cable	×	○	○	○	○	○
Metal parts	×	○	○	○	○	○
Packaging materials *	○	○	○	○	○	○
Remote control	×	○	○	○	○	○
Speaker	×	○	○	○	○	○
Chassis	×	○	○	○	○	○
Annexes*	×	○	○	○	○	○

This form is prepared in accordance with the provisions of SJ/T 11364

★ : Circuit board assembly includes printed circuit boards and their constituent parts such as resistors, capacitors, integrated circuits, connectors, etc;

○ : Indicates that the content of the hazardous substance in all homogeneous materials of the component is below the limit requirements specified in GB/T 26572;

×

It means that the content of the hazardous substance in at least one homogeneous material of the component exceeds the limit requirement specified in GB/T 26572;

Notr: Parts marked with “×” in the table cannot be substituted for hazardous substances due to the limitation of the global technological development level;



The environmental protection use period of this product is 10 years, and the symbol of restricted use of harmful substances is shown on the right. The term of use of the product is valid only when the user uses the product in accordance with the normal conditions of use described in the product manual.