
BEDIENUNGSANLEITUNG

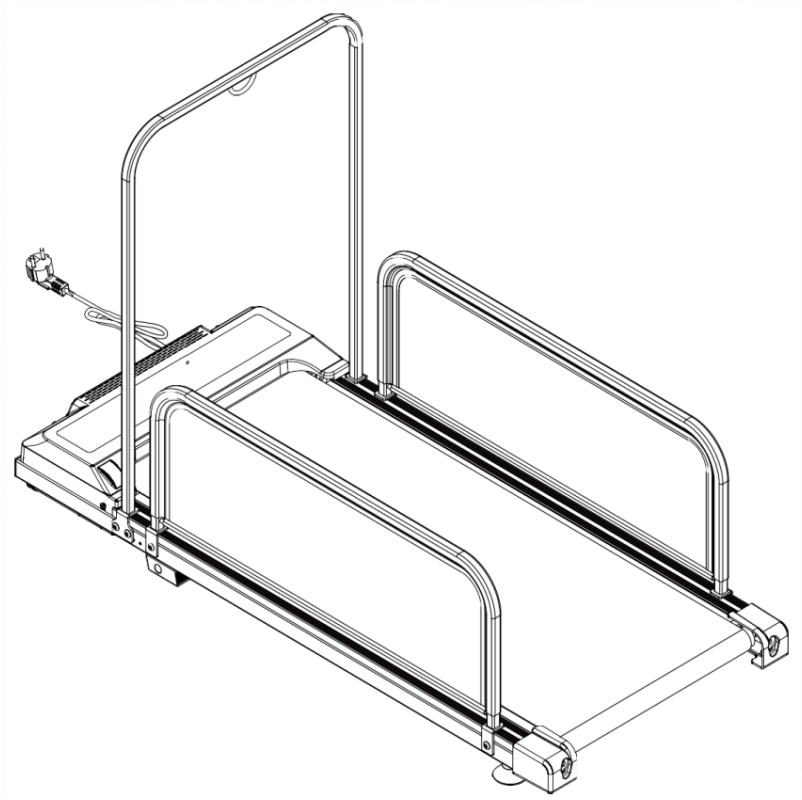

HAUSTIER LAUFBAND

GP30B

Vielen Dank für den Kauf unseres Produkts. Bitte lesen Sie diese Anleitung sorgfältig, bevor Sie das Produkt verwenden, und bewahren Sie das Handbuch an einem geeigneten Ort auf.

PRODUKTEIGENSCHAFTEN

- Rutschfeste Laufbahn-Die speziell gestaltete Oberfläche der Laufbahn ist für verschiedene Pfotentypen geeignet und sorgt für Stabilität und Sicherheit beim Laufen.
- Langsamer Start-Unter Berücksichtigung der Größe und Bewegungsgewohnheiten des Haustiers startet das Laufband mit niedriger Geschwindigkeit und kann allmählich an eine angenehme Geschwindigkeit für das Haustier angepasst werden.
- Sicherheitszaun-Der Zaun hat eine moderate Höhe, um zu verhindern, dass Haustiere herausspringen, ohne ihre Sichtlinie zu behindern.
- Einfaches Bedienfeld-Ein-Knopf-Start und Stopp, bequem für Haustierbesitzer schnell zu steuern.
- Abnehmbares Design-einfach zu reinigen und zu warten, um die Hygiene von Haustieren zu gewährleisten.
- Sicherheitsschlaufe-Die Schlaufe an der Oberseite der Armlehne kann die Haustierleitung sichern und verhindern, dass das Haustier während des Sports entkommt und Verletzungen verursacht.

BENUTZUNGSHINWEISE

- Legen Sie das Laufband auf eine ebene, trockene Oberfläche und stellen Sie sicher, dass es stabil ist und nicht wackelt.
- Für den ersten Gebrauch führen Sie Ihr Haustier mit dem Laufband vertraut. Sie können Spielzeug oder kleine Snacks, die Ihre Haustiere mögen, auf den Laufgurt legen, um ihre Aufmerksamkeit zu erregen.
- Stellen Sie sicher, dass sich Ihr Haustier in der Schutzhülle befindet, bevor Sie das Laufband starten.
- Starten Sie das Laufband mit der niedrigsten Geschwindigkeit, lassen Sie Ihr Haustier sich an die sich bewegende Leine gewöhnen und erhöhen Sie die Geschwindigkeit allmählich auf den komfortablen Laufrhythmus Ihres Haustiers.
- Überwachen Sie Ihr Haustier während des Laufs, seien Sie bereit, die Geschwindigkeit anzupassen oder die Maschine bei Bedarf anzuhalten.
- Nach dem Lauf reduzieren Sie die Geschwindigkeit auf ein Minimum, bevor Sie den Strom ausschalten, um einen reibungslosen Ausstieg des Haustiers zu gewährleisten.

ⓘ SICHERHEITSHINWEISE

· Überprüen Sie vor und nach jeder Nutzung alle Teile des Laufbands, um lockere oder beschädigte Komponenten auszuschließen.

· Reinigen Sie das Laufband regelmäßig, insbesondere den Laufflächenbereich, und halten Sie es trocken und frei von Verschmutzungen.

· Lassen Sie Ihr Haustier während der Nutzung des Laufbands nicht unbeaufsichtigt.

· Passen Sie Laufzeit und Intensität an die Größe und den Gesundheitszustand Ihres Haustieres an.

· Zeigt Ihr Haustier Unbehagen oder Widerwillen, brechen Sie das Training sofort ab und konsultieren Sie einen Tierarzt.




PARAMETERKONFIGURATION

PRODUKTBEZEICHNUNG	Haustier Laufband
MODELL	GP30B
GESCHWINDIGKEIT	1-6 KMH
FREQUENZ	50-60Hz
SPANNUNG	220V

PACKLISTE

Bei fehlenden Komponenten kontaktieren Sie uns bitte umgehend zur Lösung des Problems

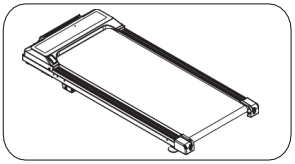

Haustier Laufband * 1



Benutzerhandbuch * 1




Fernbedienung * 1




Handlauf * 1




Schutzabdeckung * 2

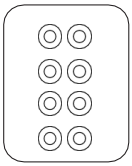


Unterlegscheibe * 8

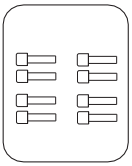


Schraube * 8

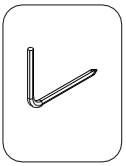


Schlüssel (L-Form) * 1

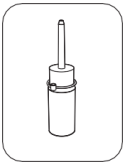

Ölflasche mit Verlängerungsschnabel * 1

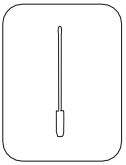



Silikonöl * 1

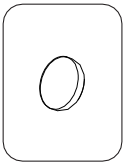


Batterie * 1

DEUTSCHE ÜBERSETZUNG DER HAUPTKOMPONENTEN

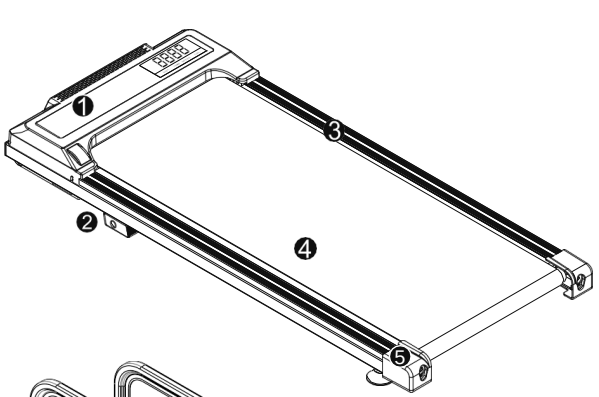

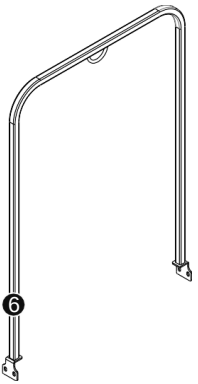


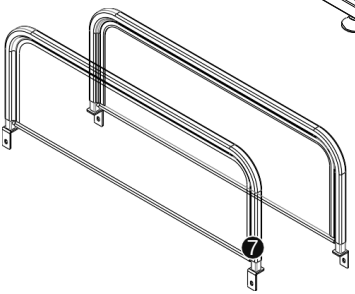

1	Display
2	Zweistufen-Neigungsverstellung
3	Seitenschiene
4	Laufbandgurt
5	Endkappe
6	Handlauf
7	Schutzabdeckung


1

Schritt 1: Bringen Sie den Handlauf am Laufbandrahmen an. Setzen Sie die Schraube mit Unterlegscheibe ein und ziehen Sie diese fest.

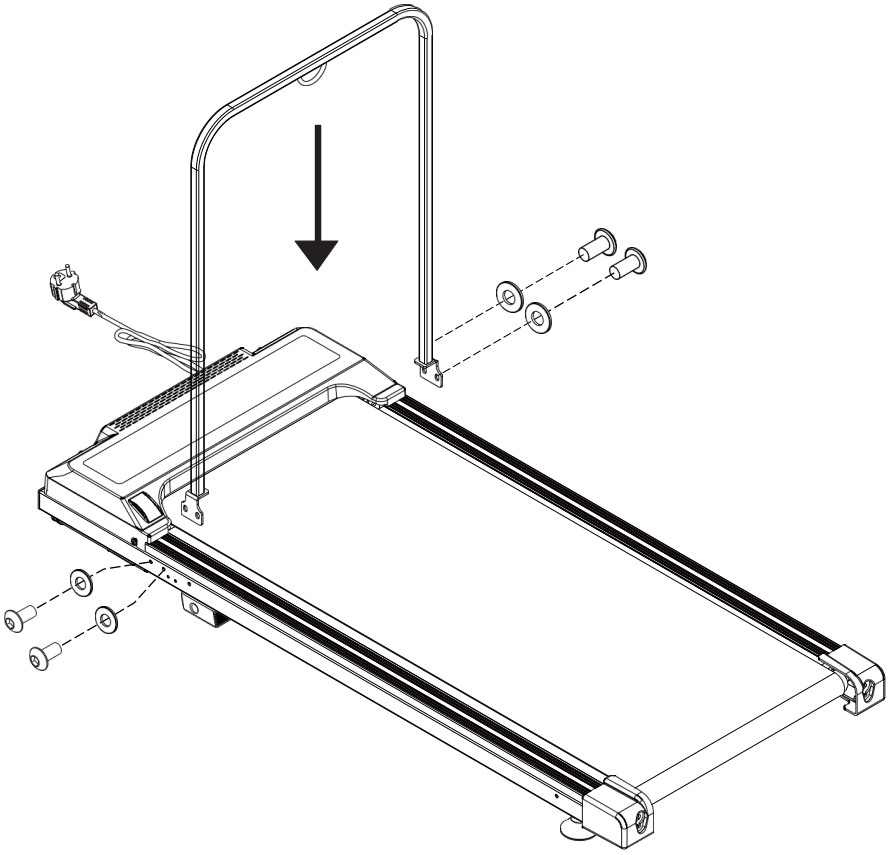


2

Schritt 2: Befestigen Sie die Schutzabdeckung am Laufbandrahmen. Setzen Sie die Schraube mit Unterlegscheibe ein und ziehen Sie sie fest.

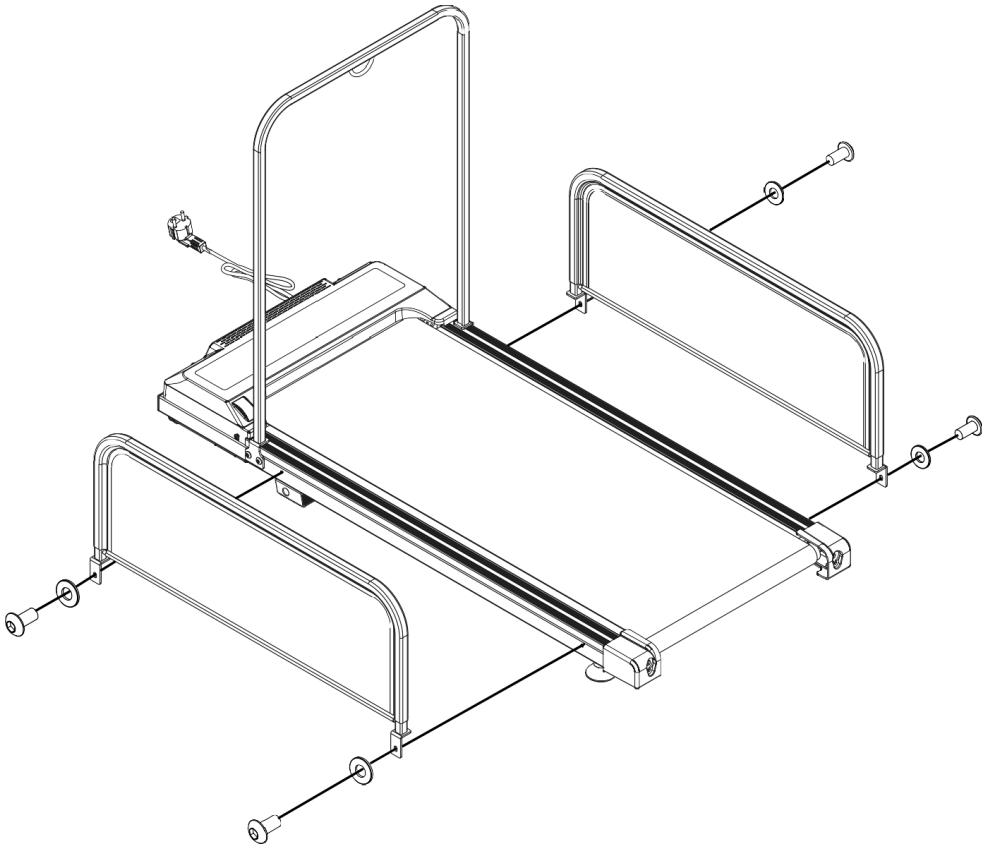


3 Schritt 3: Montage abgeschlossen

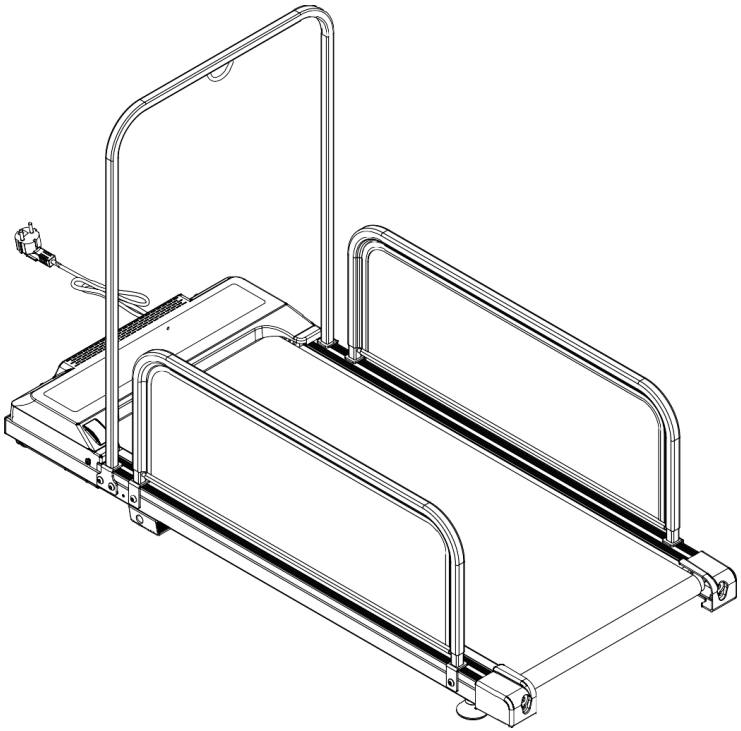


NEIGUNGSEINSTELLUNG

1. Laufband leicht anheben


2. Neigungseinstellblock mit dem Fuß nach unten drücken bis er einrastet

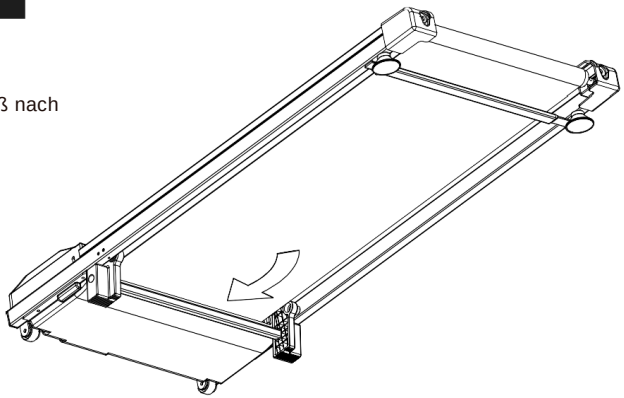

NEIGUNGSREGELUNG

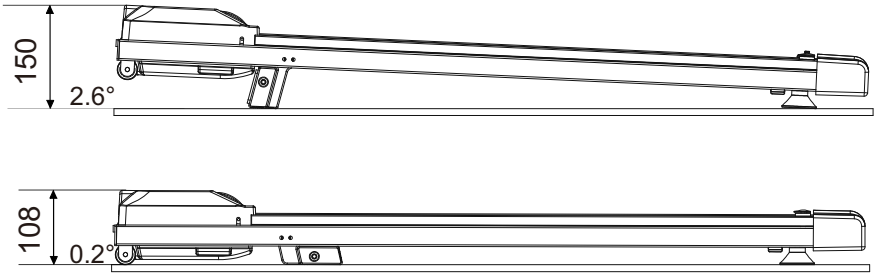


BEDIENKONSOLE

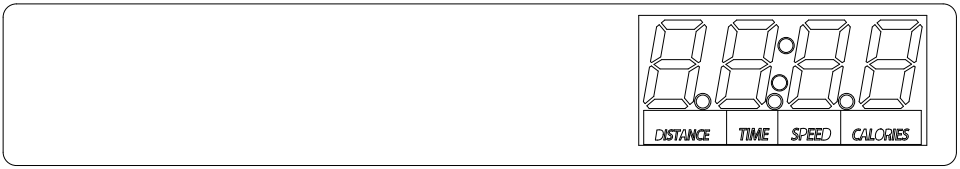

(1). Display

1. **ZEIT :** Zwei Modi:
   - Vorwärtszählen: 0:00 - 99:59 Minuten
   - Countdown: Voreingestellte Zeit (5:00-99:00) 0:00 "end" + 5s Standby
2. **DISTANZ**: Zwei Modi:
   - Vorwärtszählen: 0.0 → 99.9 (automatischer Reset)
   - Countdown:Voreingestellter Wert (1.00-99.00) → 0.00 → "end" + 5s Standby
3. **KALORIEN**: Zwei Modi:
   - Vorwärtszählen:0 → 9999 (automatischer Reset)
   - Countdown:Voreingestellter Wert (20-9990) → 0 → "end" + 5s Standby
4. **GESCHWINDIGKEIT:**
   - Bereich: 1-6 km/h (±0.1 pro Tastendruck)
   - Voreingestellte Programme: P1-P12 (Automatikmodus)
5. **ANZEIGESTEUERUNG**: M-Tasteumschalten zwischen:
   - Zyklischer Modus (Distanz ↔ Kalorien)
   - Einzelparameter-Anzeige

FERNBEDIENUNGSANLEITUNG

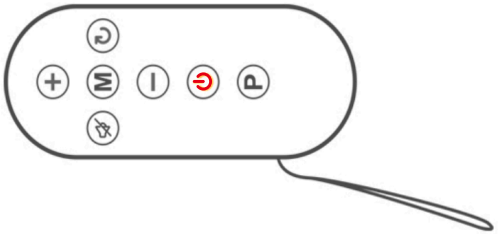

1. Funktionsübersicht

1.1 ⏻

- **Standby/Countdown-Modus**: ⏻ drücken zum Starten (Vorgabe: 0.1 km/h)
- **Programmstart**: ⏻ drücken für voreingestellte Geschwindigkeitsprofile

1.2 "+"/"-"

+/-Tastenfunktion:

- **Kurzdruck**: ±0.1 km/h-Schritte
- **Langdruck** (>0.5s): Kontinuierliche Änderung

1.3 "M"

- **Standby**: Mzyklisch durch Zeit/Distanz/Kalorien-Modi schalten
- **Betrieb**: Mzwischen Mehrfach- und Einzelanzeige umschalten

1.4 "P"

- Pdrücken für 12 voreingestellte Programme (P1-P12) im Standby-Modus

1.5

- Schaltet Bestätigungstöne ("Bi") an/aus

1.6 ⏻

- Nach Gebrauch die ⏻ -Taste drücken: Das Laufband stoppt langsam, behält alle Daten bis zum vollständigen Ausschalten bei und nimmt beim nächsten Start die vorherige Geschwindigkeit automatisch wieder auf.

1.7 ↻

- ↻ im Standby-Modus drücken für Werkseinstellungen


HINWEIS: BEI JEDEM GÜLTIGEN TASTENDRUCK GIBT DAS LAUFBAND EIN "BI"-GERÄUSCH VON SICH

TÄGLICHE WARTUNG


1. Vor Wartung/Reinigung stets Stecker ziehen
2. Laufgurt & Konsole nach Nutzung reinigen (wöchentliche Grundreinigung)
3. Alle Schrauben an Haltepunkten überprüfen
4. Keine Gegenstände am Gerät aufhängen


LAUFGURT-SCHMIERUNG


- Silikonöl auftragen auf:
  Gurtunterseite
  Laufflächenoberfläche
- Laufband 3 Min. bei 1-2 km/h laufen lassen
- Intervall: Alle 30 Betriebsstunden
- Dosierung: 15 ml pro Anwendung

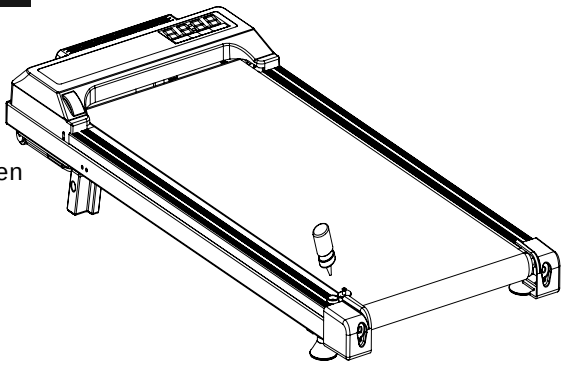

LAUFGURT-AUSRICHTUNG

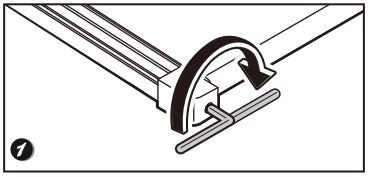

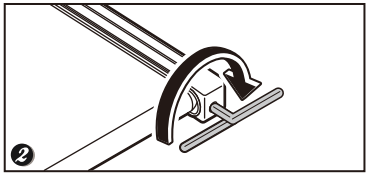

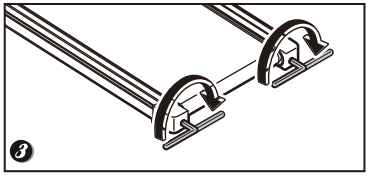

LAUFGURT-AUSRICHTUNG

1. Unbelastet mit 1-2 km/h starten
2. Einstellschraube 1/4 Umdrehung im Uhrzeigersinn (Abb.1)
3. 1-2 Min. laufen bis Zentrierung

RECHTSABWEICHUNG

1. Unbelastet mit 1-2 km/h starten
2. Einstellschraube 1/4 Umdrehung im Uhrzeigersinn (Abb.2)
3. 1-2 Min. laufen bis Zentrierung

BLOCKIERUNG

Schraube bei Blockierung 1/2 Umdrehung links-rechtsabwechselnd drehen (Abb.3)


FEHLERBEHEBUNG

Fehlercode	Lösung
Err	· Motorabdeckung entfernen und Kabelverbindungen prüfen
------	· Lockere/beschädigte Kabelverbindung zur Steuerplatine
E5	· Laufgurt schmieren und Motorfunktion überprüfen · Defekte Steuerplatine/Motor ersetzen
E6	· Motorkabel auf Beschädigung prüfen · Steuerplatine austauschen
E7	· Motorabdeckung entfernen · Alle Kabelverbindungen überprüfen
E8	· Motor austauschen · Kabelverbindungen systematisch prüfen

Falls Sie sich nicht sicher sind, wie dies durchzuführen ist, kontaktieren Sie bitte unseren Kundendienst und wir werden die beste Lösung für Sie bereitstellen.

MADE IN CHINA

USER MANUAL

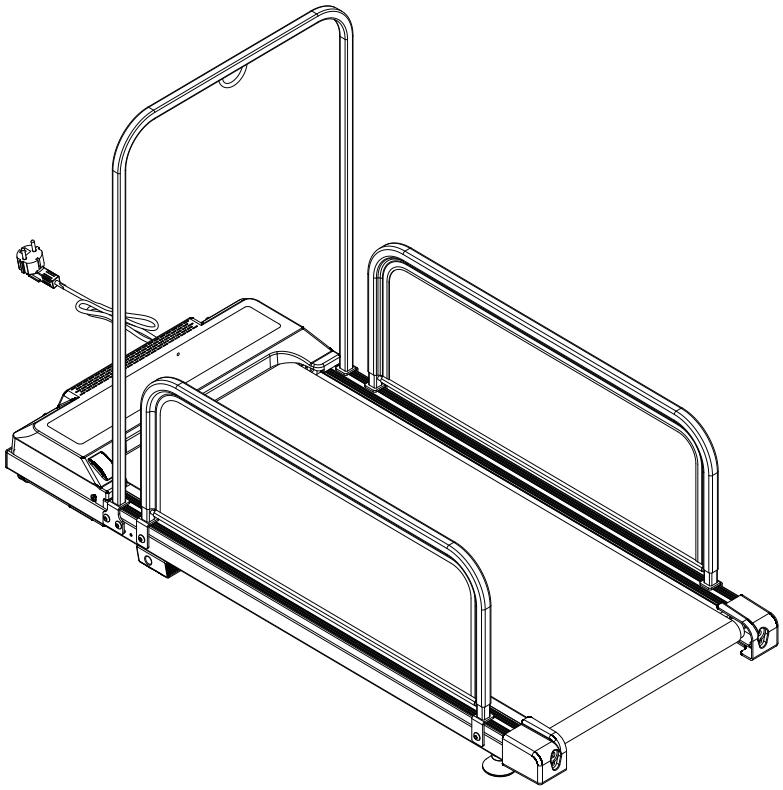

WALKING PAD
PET TREADMILL

GP30B

Thank you very much for purchasing our product. Please read this manual carefully before useing it and keep the manual at the proper place.

PRODUCT FEATURES


- Non-slip running track - The specially designed surface of the track is suitable for various pet paw types, ensuring stability and safety during running.
- Slow start - Considering the size and exercise habits of pets, the treadmill starts at a low speed and can be gradually adjusted to a comfortable speed for pets.
- Safety fence - The fence is of moderate height, which can prevent pets from jumping out without obstructing their view.
- Simple operation panel - One-button start and stop for easy and quick control by pet owners.
- Detachable design - Easy to clean and maintain, ensuring hygiene for pet use.
- Safety Loop - The loop at the top of the handrail can secure a pet leash to prevent pets from running off and causing harm during exercise.

USAGE NOTICE

- Place the treadmill on a flat, dry surface and ensure it is stable and does not wobble.
- For first-time use, guide your pet to familiarize themselves with the treadmill. You can place your pet's favorite toys or small treats on the running belt to attract their attention.
- Before starting the treadmill, ensure your pet is inside the protective cover.
- Start the treadmill at the lowest speed to allow your pet to adapt to the moving belt, gradually increasing the speed to a comfortable running rhythm for your pet.
- Supervise your pet during the running process, ready to adjust the speed or stop the machine if necessary.
- After running, reduce the speed to the minimum before turning off the power to ensure your pet exits smoothly.

ⓘ PRECAUTIONS

- Check all parts of the treadmill before and after each use to ensure there are no loose or damaged parts.
- Regularly clean the treadmill, especially the running belt area, keeping it dry and free of debris.
- Do not leave your pet unattended while using the treadmill.
- Adjust the running time and intensity according to your pet's size and health condition.
- If your pet shows discomfort or reluctance to use the treadmill, stop the training immediately and consult a veterinarian.

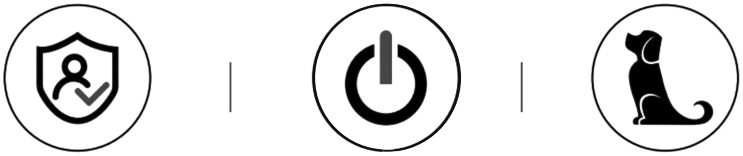


PARAMETER CONFIGURATION

Product name	Pet Treadmill
Model	GP30B
Speed	1-6KMH
Frequency	50-60Hz
Voltage	220V

PACKING LIST

Should you discover any missing components, please do not hesitate to contact us for prompt resolution.

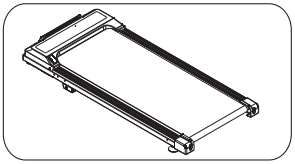

Pet Treadmill ×1



User Manual ×1


Remote Control ×1



Handrail ×1



Protective Cover ×2

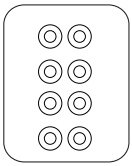

Flat Washer ×8

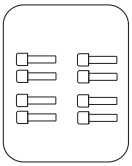
Bolt ×8



L Wrench ×1

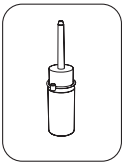
Silicone Oil ×1

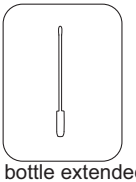
Oil bottle extended spout × 1

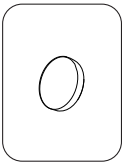
Battery ×1


PRODUCTS MAIN PARTS

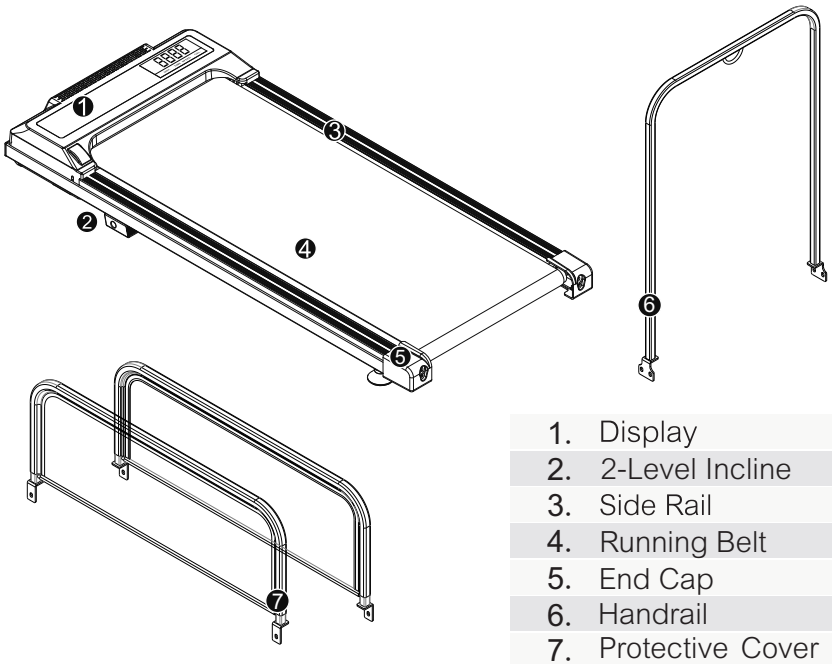

1. Display
2. 2-Level Incline
3. Side Rail
4. Running Belt
5. End Cap
6. Handrail
7. Protective Cover


PRODUCT ASSEMBLY

1 Step 1: Attach the handrail to the treadmill frame. Insert bolt with flat washer and tighten them.

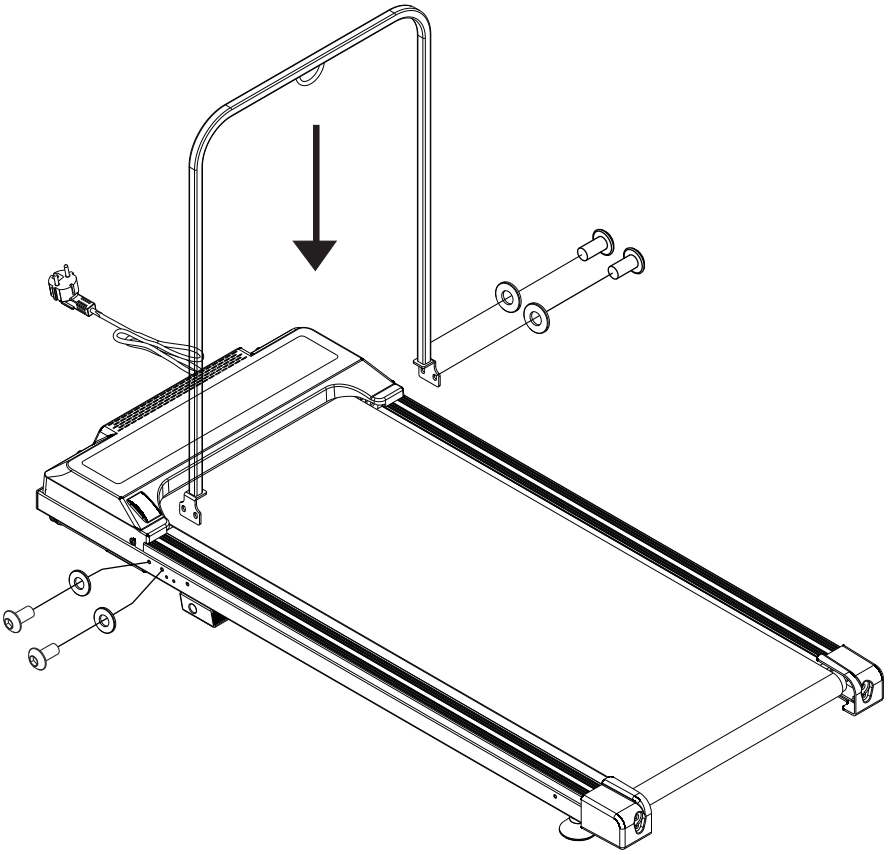


2

Step 2: Attach the protective cover to the treadmill frame.
Insert bolt with flat washer and tighten them.

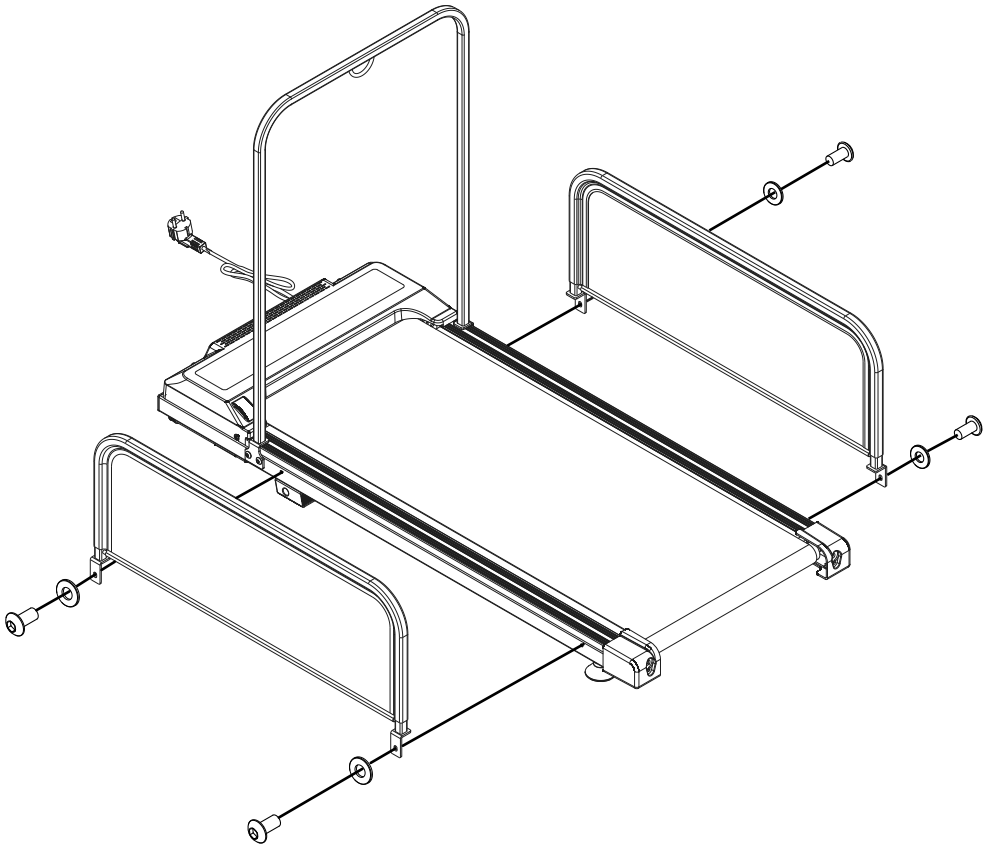


3 Step 3: Assembly finished

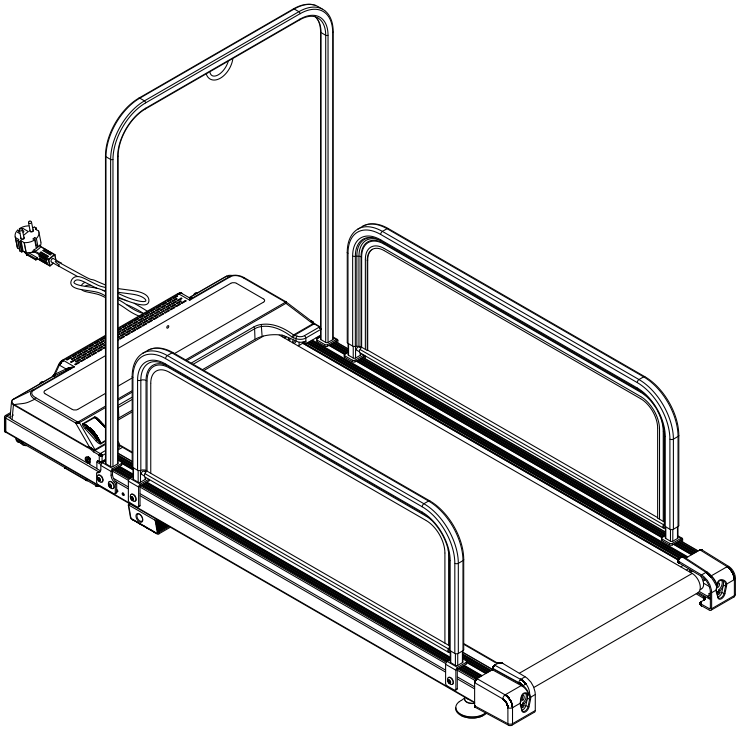


INCLINE ADJUST

Raise the treadmill and kick the incline adjustment block down with your foot to secure it.

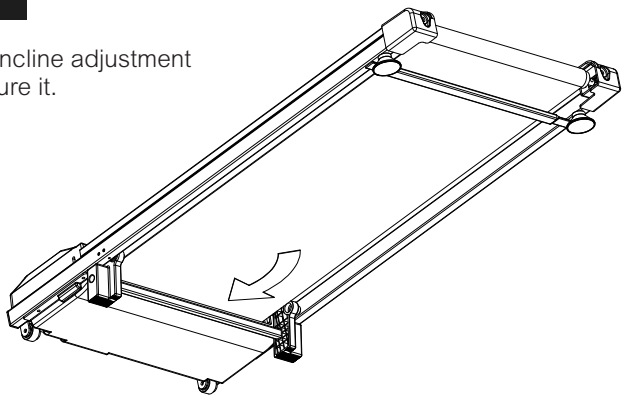

INSTRUCTIONS FOR INCLINE

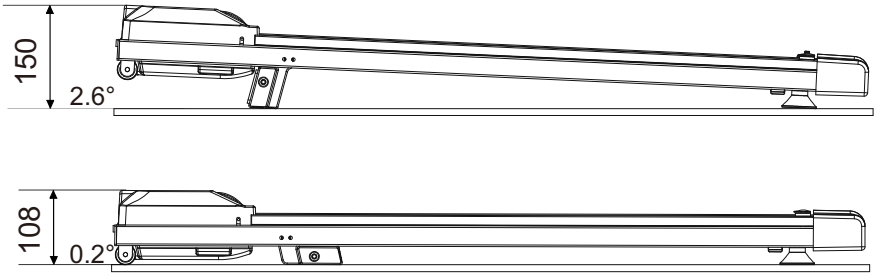

CONSOLE INSTRUCTION



(1). Display

·1.1 "TiME" window features two modes that display the elapsed time. The first mode counts up from 0:00 to 99:59 minutes, while the second mode counts down from a set time (within the range of 5:00 to 99:00 minutes). When the countdown reaches 0:00, the machine will gradually stop and display "end." After five seconds, it will enter standby mode.


·1.2 "DISTANCE"window also has two modes that showcase the current movement distance. In the forward counting mode, the distance increases from 0.0 to 99.9; if it reaches the maximum, it will restart the count. In the distance countdown mode, the distance decreases from a set value (ranging from 1.00 to 99.00) to 0. Once the countdown ends at 0:00, the machine slowly stops and displays "end," followed by entering standby mode after five seconds.

·1.3 "CALORIES"window presents two modes for tracking calories burned. The forward mode counts from 0 to 9999, resetting once it reaches the peak. The countdown mode starts from a preset calorie value (ranging from 20 to 9990) and counts down to 0. Upon reaching 0:00, the machine slows down and displays "end," then transitions to standby mode after five seconds.

Please note: The display alternates between "DISTANCE" and "CALORIES" in a cyclical manner. You can press the 'M' button to toggle between this cyclic display mode and a singular display

·1.4 "SPEED" window indicates the current running speed, with a setting range of 1-6 KMH. Each click of the "+/-" button adjusts the speed by +/- 0.1 KMH. Settings P1 through P12 are displayed as part of an automatic selection feature.

REMOTE CONTROL INSTRUCTION

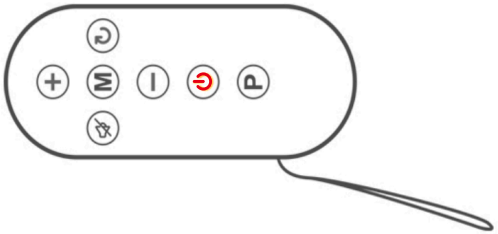

1. Function of the Remote Control

1.1

- (1) In standby or countdown mode: Pressing" ⏻ " button to start the machine. Please note that the default speed in 1 KMH
- (2) Choose the preset program: Pressing " ⏻ "to start the machine and the speed will changes according to the preset speed.
- (3) In running state: Pressing" ⏻ ", then the treadmill will stop slowly and back to standby state.

1.2 "+"/"-"

- "+"/"—"button is to adjust speed. Keep pressing "+"/ "-" over 0.5 seconds, the speed will keep increasing or decreasing. Please note the speed will change by 0.1 KMH

1.3 "M"

- (1) in standby mode: it can switch from different mode, including Time, Distance and Calories. Choose one of modes, and then press + or - button to set target. After setting the target, press start button to start treadmill.
- (2) in running mode: press "M" button will switch display mode between cyclic display mode and single display mode.

1.4 "P"

- "P": There are P01-P12, totally 12 presef programs you can choose when in standby mode.

1.5

- Press the " 🔇 " button to mute the treadmill (no sound "Bi"); press it again to resume the beep sound.

1.6

- After using, press " ⏻ " button, the treadmill will stop slowly and it will retain its data untilpower off. It will resume the previous speed when it starts again.

1.7 ↻

- Press the " ↻ " button, the data will be reset to its default data. It only works when the treadmill is in standby mode.

※*REMARK: Any valid pressing, the treadmill will make a sound "Bi"*

DAILY MAINTENANCE


- To ensure your safety, kindly disconnect the power source before performing any inspection or cleaning of the machine.
- For maintenance purposes, it is recommended to clean the belt and dial plate after each use, with a thorough cleaning at least once a week.
- Periodically check and tighten all screws and spines located at the fixing points to prevent any loose parts that could compromise the machine's functionality.
- Avoid hanging clothes or any other objects on the machine, as this can cause damage or affect its performance.

RUNNING BELT LUBRICATION


1. Before using the treadmill, apply silicone oil to the underside of the running belt and the running deck.


2. After lubrication, run the treadmill for 3 minutes to ensure even oil distribution. Repeat this process every 30 operating hours to maintain peak performance and extend the machine's lifespan.


3.Set the treadmill to run at a speed of 1-2 mph, open the oil cap, add silicone oil, and then close the cap. It is recommended to add 15mL of oil each time.

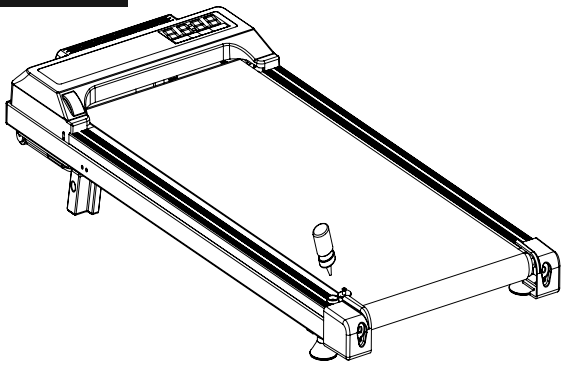

RUNNING BELT ADJUSTMENT

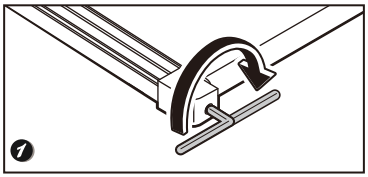

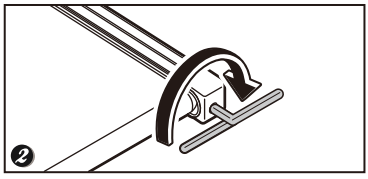

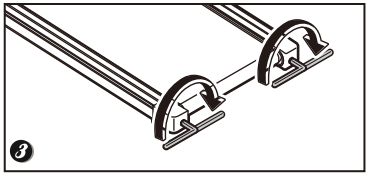

RUNNING BELT DEVIATE TO LEFT

1. Start the machine by speed at 1-2 KMH without lloading, use Allen wrench to turn the screw 1/4 circle clockwise (see fig 1)
2. Then make the machine running without loading 1-2 minutes. Please adjust like this to make the belt till to mid place

RUNNING BELT DEVIATE TO RIGHT

1. Start the machine by speed at 1-2 KMH without lloading, use Allen wrench to turn the screw 1/4 circle clockwise (see fig 2)
2. Then make the machine running without loading 1-2 minutes. Please adjust like this to make the belt till to mid place

RUNNING BELT LOGJAM

1. If the running belt is in dead condition, use Allen wrench to make the screw 1/2 circle both left and right till this logjam solved.

TROUBLESHOOTING

Error Code	Solution
Err	Remove motor cover and check cable connections
	Loose/damaged cable connection to control board
E5	Lubricate running belt and check motor function
E6	Replace damaged control board/motor
E7	Check motor cables for damage
	Replace control board
E8	Remove motor cover
	Check all cable connections
	Replace motor
	Systematically check cable connections

If you are unsure how to perform these steps, please contact our customer service and we will provide the best solution for you.

MADE IN CHINA