

ASSEMBLY INSTRUCTION


Item Number : WF299850AAG / WF299850AAS
WF299851AAG / WF299851AAS

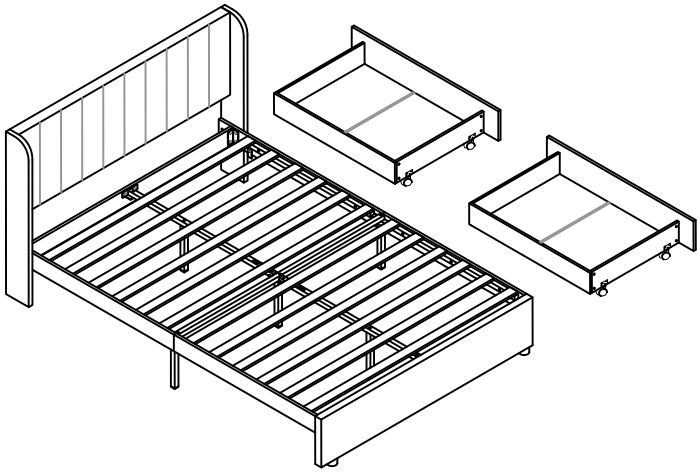

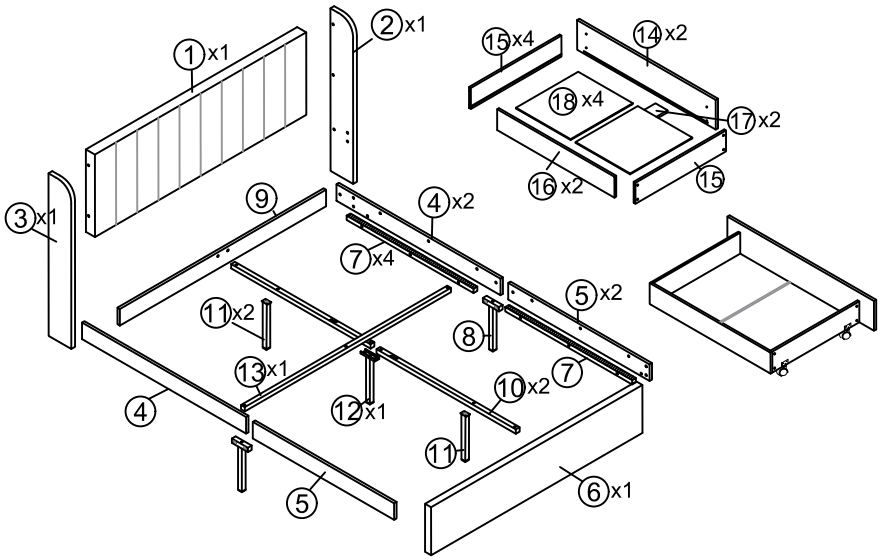

TIPS

1. Please read the instructions fully before assembly. These instructions include important information which could ensure correct assembly. We have been working on providing high quality products for you. However, in the rare instance that your product is defective, missing parts or there are some issues, please don't hesitate to contact our customer service to submit parts requirements, assembly suggestion, or warranty claims, and we will give the best solution as soon as possible. If necessary, we need you to provide some more clear pictures of the issue.
2. Insert the screws in holes and tighten the screws, but not too tight, 70%~80% is ok, finally tighten all the screws. If some issues happened that some screws can not target to the hole or some parts are difficult to install, please adjust the tightness of the screws.
3. 2 people are recommended to finish




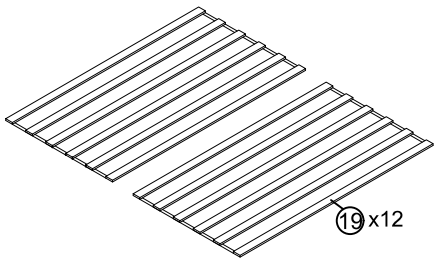


Parts List		
NO	ITEM	QTY
1	Head board	1
2	Side head board	1
3	Side head board	1
4	Siderails	2
5	Siderails	2
6	Foot board	1
7	Side rails support bar	4
8	Side rails support legs	2
9	Cross board	1
10	Center support bar	2
11	Middle support leg	2
12	Connected support leg	1
13	Cross bar	1
14	Drawer outer board	2
15	Drawer board	4
16	Drawer board	2
17	Drawer support bar	2
18	Drawer bottom board	4
19	Slats	12






Hardware List		
NO	ITEM	QTY
A	Allen Key	1
B	Bolts (M8x40mm)	35
C	Washer	10
D	Bolts (M8x18mm)	18
E	Nails (M4x50mm)	2
F	Bed legs	2
G	"7" Connector	4
H	Center support bar fittings	2
I	Drawer fittings	24
J	Drawer fittings	24
K	Nails (M3x12mm)	24
L	Drawer wheel	8
M	Stopper	2
N	Seal strip	2

Part List

WF299850AAG / WF299850AAS

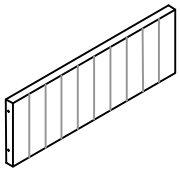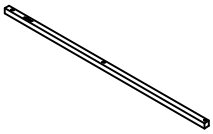1  Head board-1pc	10  Center support bar-2pcs	14  Drawer outer board-2pcs
15  Drawer board-4pcs	16  Drawer board-2pcs	17  Drawer support bar-2pcs
18  Drawer bottom board-4pcs		


Hardware List+WF299851AAG / WF299851AAS

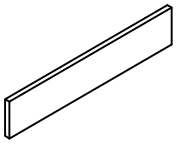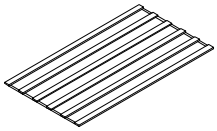2  Side head board -1pc	3  Side head board -1pc	4  Side rails-2pcs
5  Side rails-2pcs	6  Foot board -1pc	7  Side rails support bar-4pcs
8  Side rails support legs-2pcs	9  Cross board-1pc	11  Middle support leg-2pcs
12  Connected support leg-1pc	13  Cross bar-1pc	19  Slats-12pcs

Attention: Do not tighten the screws before completing the entire installation. If you have any difficulty with the installation process, please feel free to contact us.

Step 1 x2


Fix the side side headboard ② and ③ To the headboard ① With bolts B and Washers C by using Allen key A

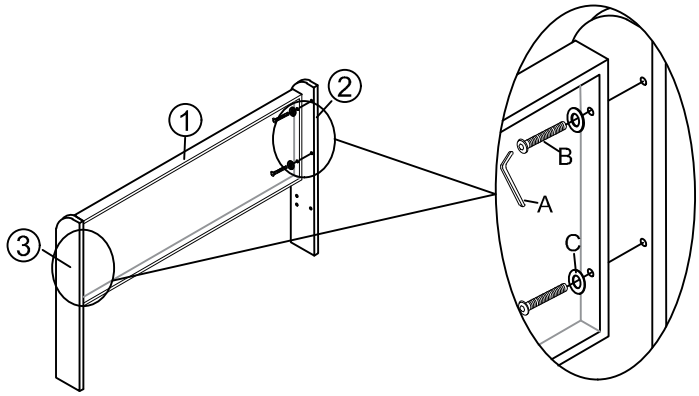

A Allen Key x 1	B Bolts x 4	C Washer x 4
	M8X40mm	

Step 2 x2


Connect to Siderail support bar ⑦ Siderails ④ and ⑤ with Bolts D by using Allen key A.

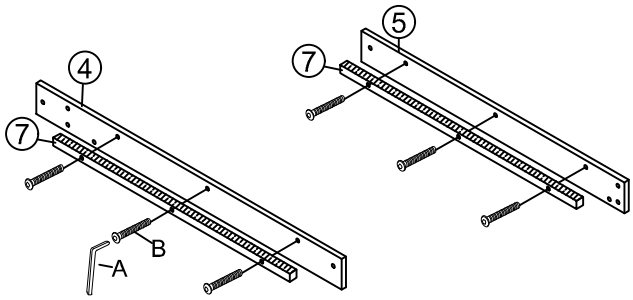

B Bolts x 12	Allen Key
M8X40mm	

Step 3 x2


Fix the side rails support leg ⑧ to the assembled side rail With bolts B and Washer C by using Allen key A

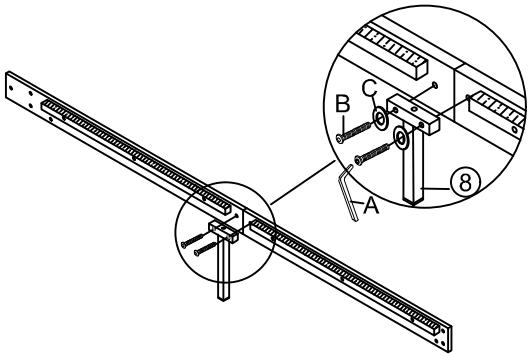

Allen Key	B Bolts x 4	C Washer x 4
	M8X40mm	

Step 4 x2


Fix the legs F To the foot board ⑥ With Nails E by using electric drill or screw driver

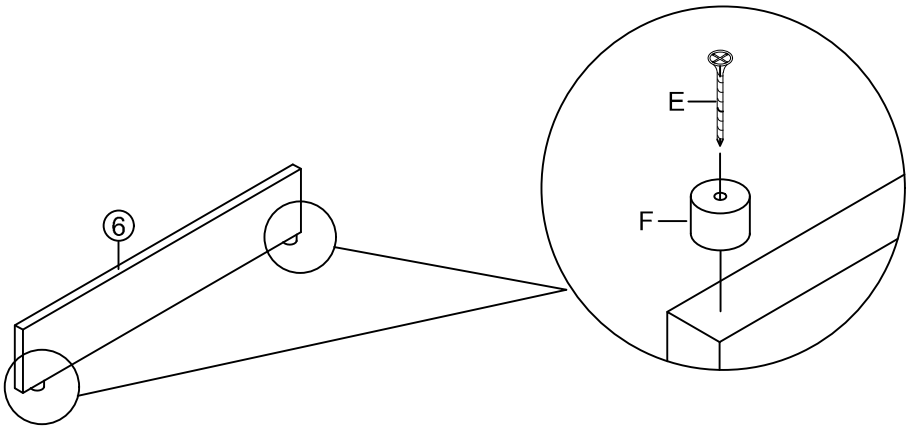

E Nails x2	F Bed legs x2
M4X50mm	

Step 5 x2


Fix the assembled side rail to the side headboard ② and ③ with "7"Connector G,Bolts B and Washer C by using Allen Key A.

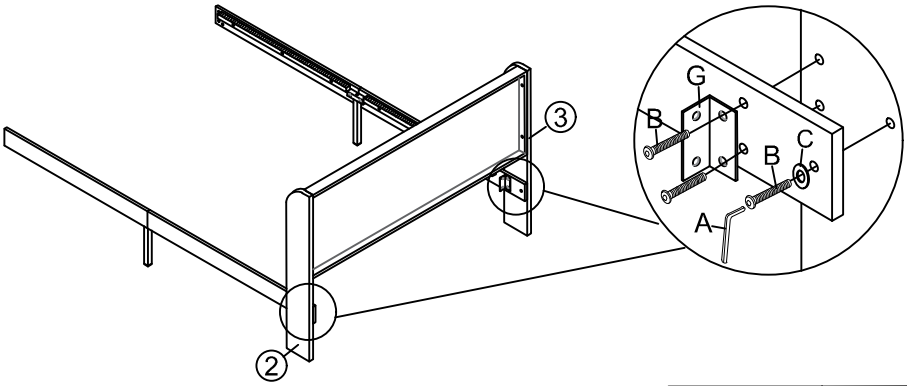

Allen Key	B Bolts x 6	C Washer x 2	G "7" Connectorx 2
	M8X40mm		

Step 6 x2


Fix the Cross board ⑨ to the side headboard ② and ③ with "7"Connector G and Bolts D, by using Allen Key A.

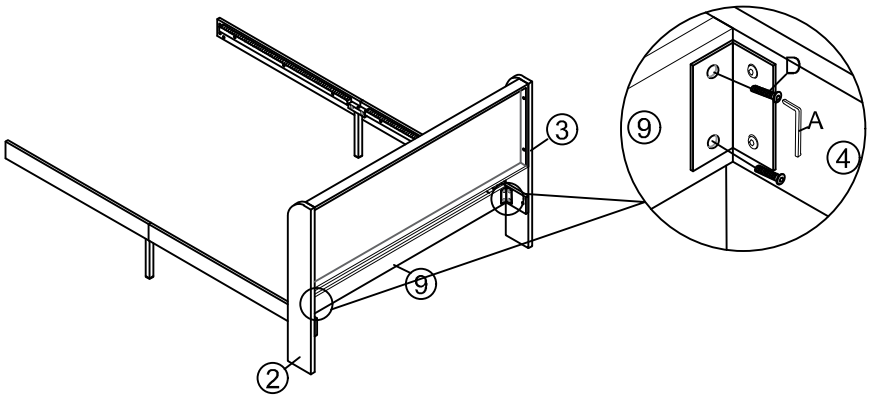

Allen Key	D Bolts x 4
	M8X18mm

Step 7


Fix the assembled side rail to the foot board ⑥ With bolts D and "7" Connector G by using Allen key A

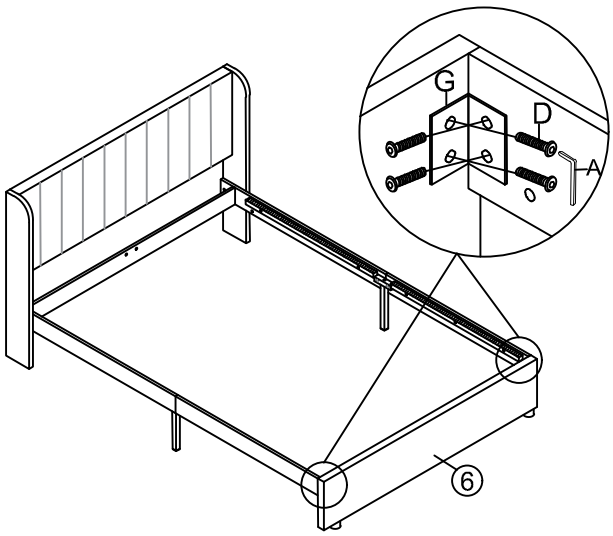

Allen Key	D Bolts x 8 M8X18mm	G "7" Connectorx 2

Step 8


Fix the middle support leg ⑪ to the center support bar ⑩ With bolts B by using Allen key A.Fix the connected support leg ⑫ to the center support bar With bolts B by using Allen key A

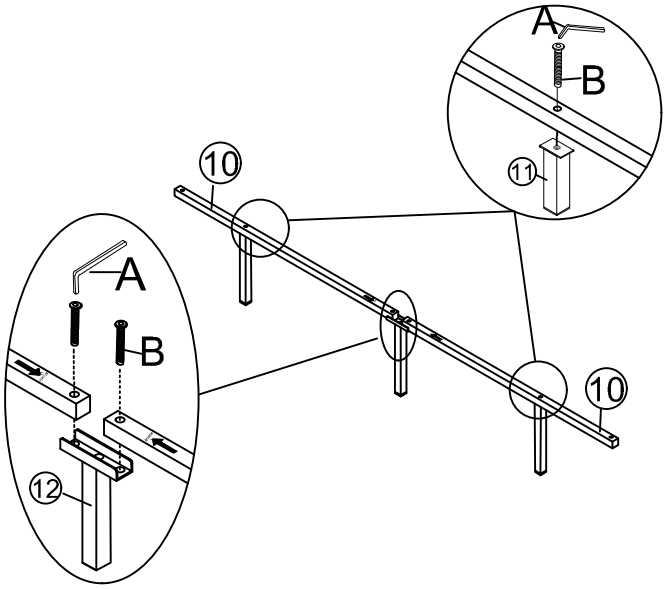

Allen Key	B Bolts x 4 M8X40mm

Step 9


Fix the Center support bar fittings H to the Headboard cross bar ⑨ and foot boart ⑥ with Bolts D by using Allen key A

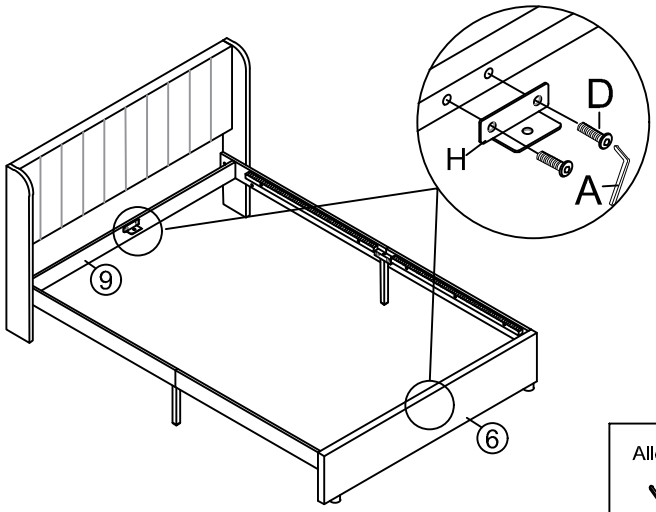

Allen Key	D Bolts x 4 M8X18mm	H Center support bar fittings x2

Step 10


Fix the Center support bar ⑩ to the headboard cross bar ⑨ and foot board ⑥ with Bolts B by using Allen key A

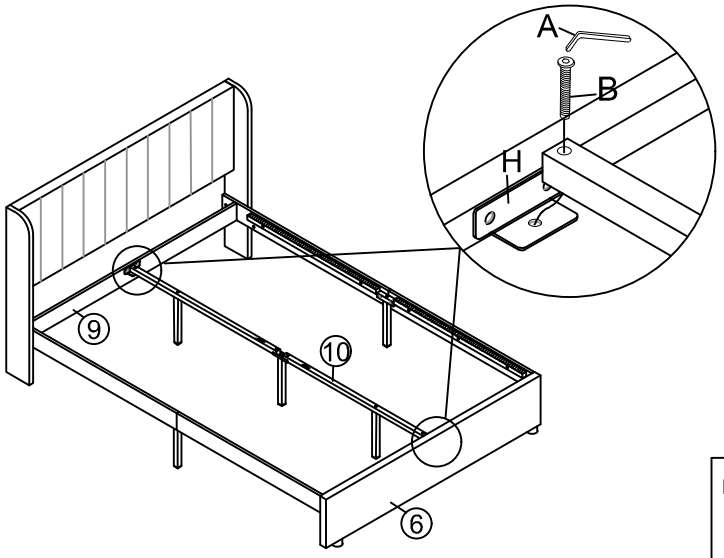

B Bolts x 2	Allen Key
M8X40mm	

Step 11


Fix the cross bar ⑬ to the side rails support legs ⑧ and Connected support legs ⑫ with Bolts B by using Allen key A

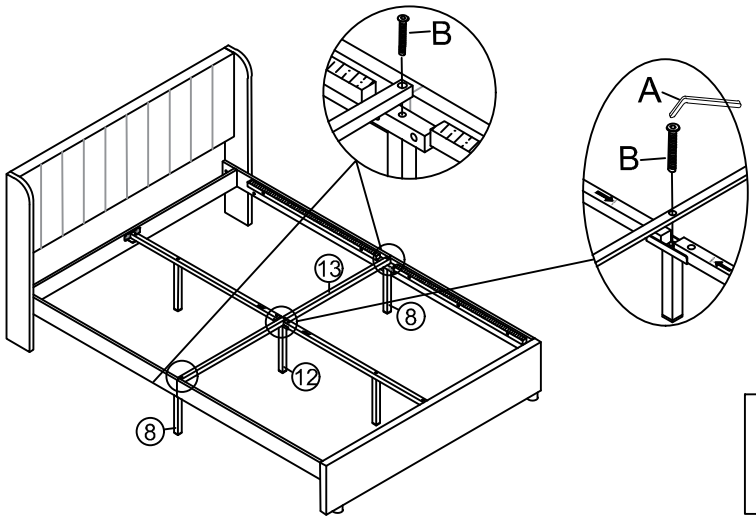

B Bolts x 3	Allen Key
M8X40mm	

Step 12


Fix the stopper M To the Siderails with Bolts D by using Allen key A,you can chose right side or left side according to your requirements.

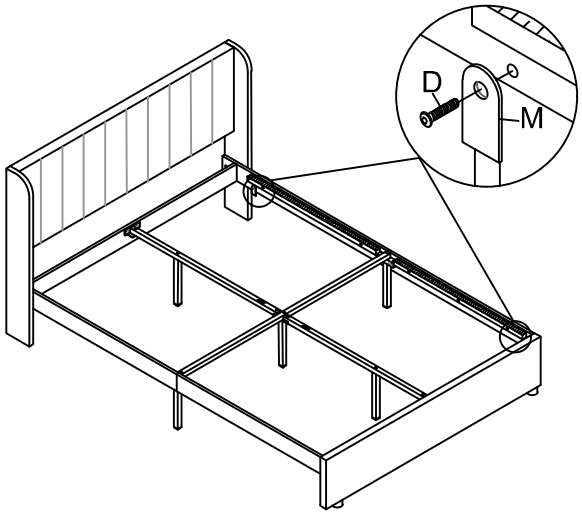

Allen Key	D Bolts x 2	M Stopper x2
	M8X18mm	


Step 13

Fix the slats ⑲ to the side support bar ⑦

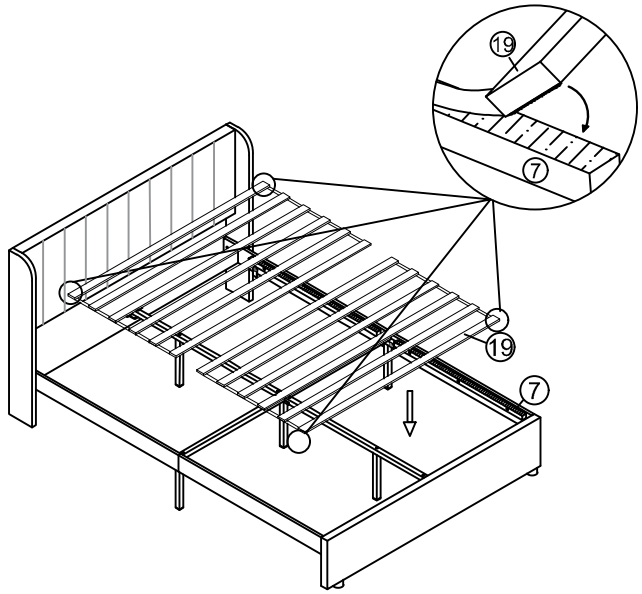

Step 14 x2

Assembled the drawer with drawer fittings I and J,Connect to the Drawer bottom board ⑱ with Seal strip N, fix the drawer wheel L with nails K by using electric drill or screw driver

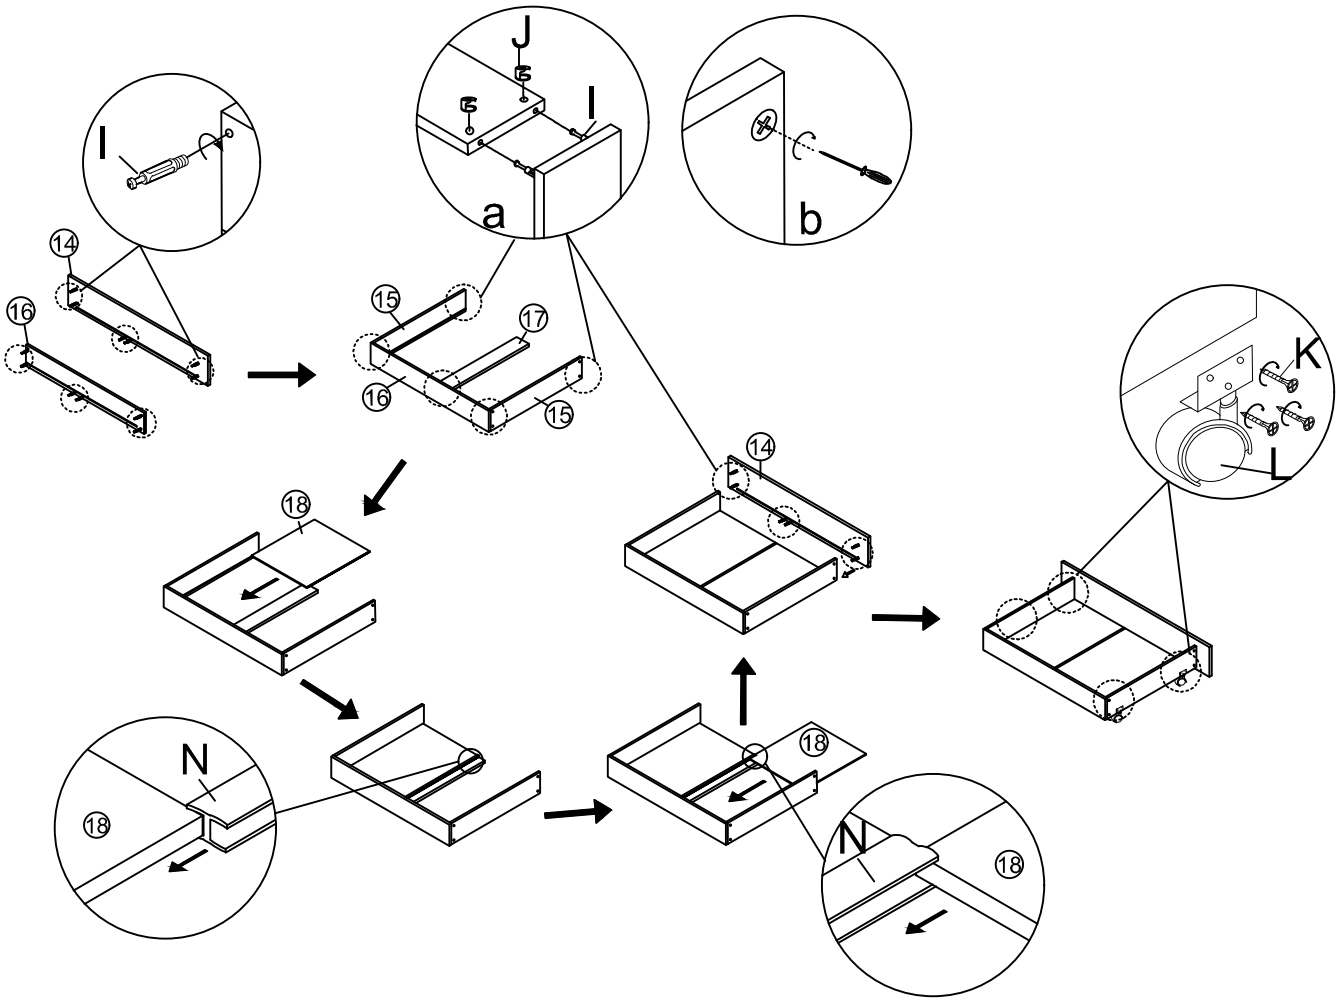

I Drawer fittings x 24	J Drawer fittings x 24	K Nails x 24	L Drawer wheel x 8	N Seal strip x2
		 M3X12mm		

Step 15

Push the two drawers into the bed then assembled is finished, now please tighten all hard ware and enjoy the bed

