
Importeur	Decobus Handel GmbH
Adresse	Innungsstraβe 9,21244 Buchholz,Deutschland
URL	https://www.decobusgroup.de
Hersteller	ZHANGZHOU XINZUOBIAO INDUSTRY & TRADE CO.,LTD.
Adresse	BeidoulIndustrial Zone,ZhangzhouCity, Fujian Province, China
Email/URL	2092167066@qq.com
Hergestellt in	China
EC REP	Decobus Handel GmbH Innungsstraβe 9,21244 Buchholz,Deutschland https://www.decobusgroup.de

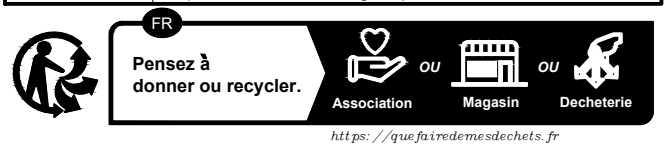


https://quefairedemesdechets.fr


SKU N635P524261+N635P524262

Our product will be delivered to you in 2 packages. Thedelivery times of these 2 packages may differ,pleasebe patient and thank you for your understanding.

Unser Produkt wird Ihnen in 2 Paketen geliefert. DieLieferzeiten dieser 2 Pakete können abweichen, bittehaben Sie etwas Geduld und vielen Dank für IhrVerständnis.

Notre produit vous sera livré en 2 colis. Les délais delivraison de ces 2 colis peuvent différer, soyez patientet merci de votre compréhension.

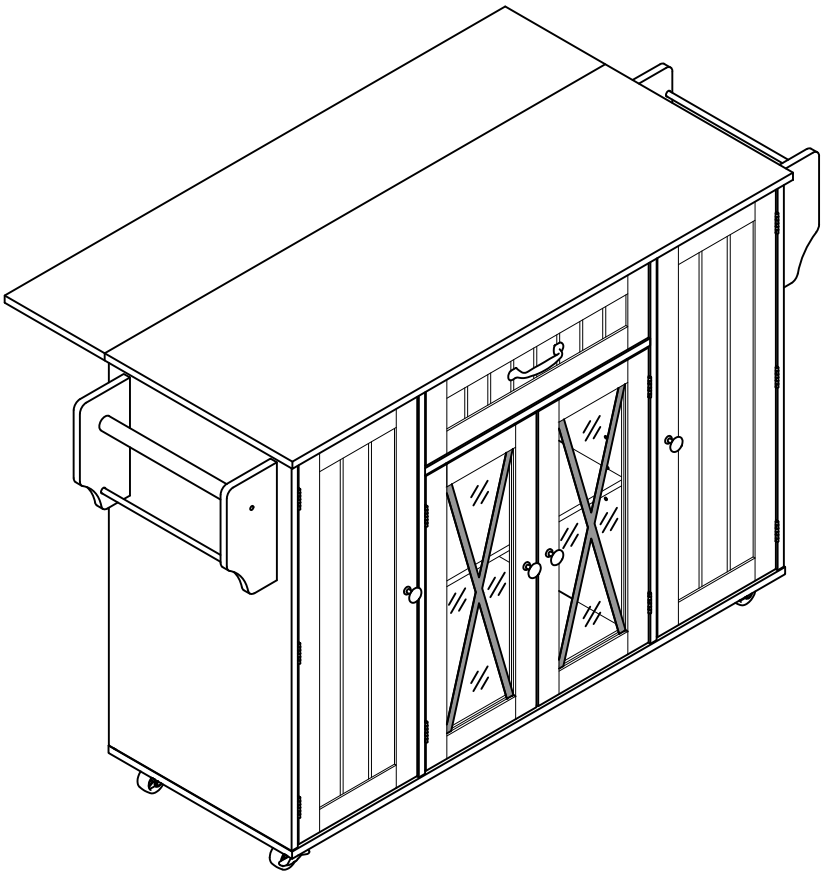

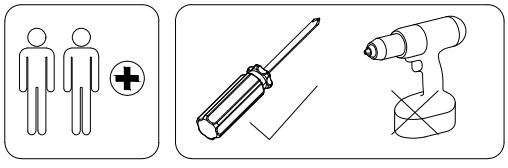

EN_IMPORTANT,RETAIN FOR FUTURE REFERENCE;READ CAREFULLY.
FR_IMPORTANT:A LIRE ATTENTIVEMENT ET ACONSERVER POUR CONSULTATION ULTERIEURE.
ES_IMPORTANTE,LEA Y GUARDE PARA FUTURAS REFEREBCUAS.
DE_,,WICHTIG!SORGEALTIG LESEN UND FUR SPATER NACHSCHLAGEN AUFBEWAHREN."
IT_IMPORTANTE! CONSERVARE IL PRESENTE MANUALE PER FUTURO RIFERIMENTO E LEGGERLO ATTENTAMENTE.

Version: 1.0

EN

Dear customer,
Thank you for purchasing this product.So that your appliance serves you well,please read all the instructions in this user's manual.If you have any quetions,please contact our customer care center.

FR

Cher client,
Nous vous remercions d'avoir achete ce produit.Afin que vous puissiez profiter pleinement de votre appareil,veuillez lire toutes les instructions de ce manuel d'utilisation.Si vous avez la moindre question,veuillez contacter notre centre d'assistance a la clientele.

DE


Sehr geehrter Kunde,
Vielen Dank,dass Sie dieses Produkt erworben haben.Damit Ihr Gerat Ihnen gute Dienste leistet,lesen Sie bitte alle Hinweise in diesem Benutzerhandbuch.Wenn Sie Fragen haben,wenden Sie sich bitte an unser Kundendienstzentrm.

ES


Queridos clientes,
Gracias por comprar este producto.Para que su electrodomestico le sirva mejor,lea todas las instrucciones de este manual del usuario.Si tiene alguna pregunta, comuniquese con nuestro Centro de Atencion al Cliente.

IT


Caro Cliente,
Grazie per aver acquistato questo prodotto,Per servirti meglio con questo apparecchio ti prego di leggere tutte le istruzioni in presente manuale utente. In caso didubbio,si prega di contattare il nostro centro assistenza clienti.

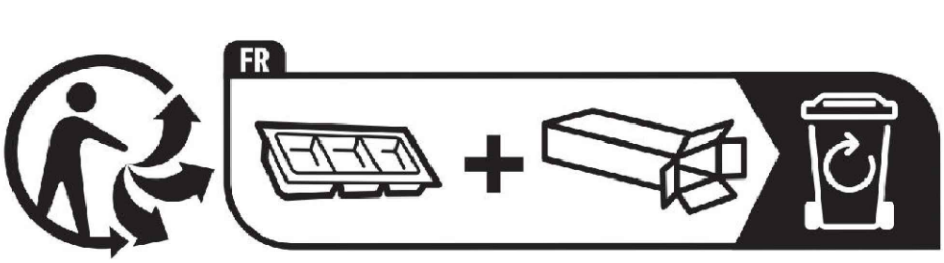




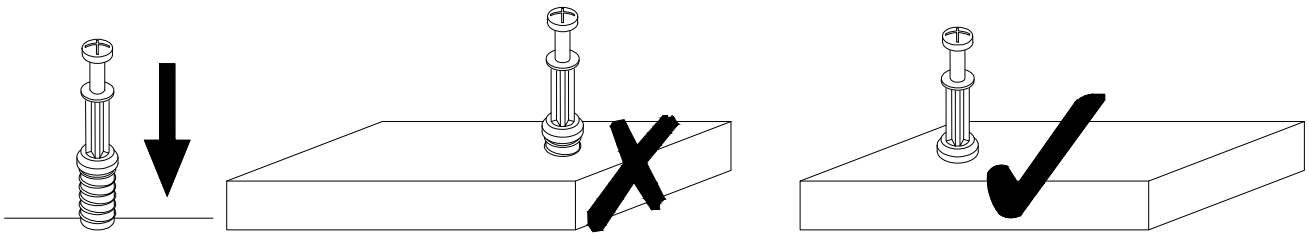


EN_QUICKFIT:Tighten quickfit until shoulder is flush with panel.Do not overtighten or undertighten.
FR_RACCORD RAPIDE:Faites serrer le raccord rapide jusqu'a ce que l'epaulement soit parfaitement encstre dans le panneau.Il ne faut ni trop serrer ni insuffisamment serrer.
ES_QUICKFIT:Apriete quickfit hasta que el hombre se descargue con el panel.NO lo sobreapriete ni lo apriete poco.
DE_QUICKFIT:Ziehen Sie den quickfit fest,bis die Schulter mit der Platte bundig ist. Bitte nicht zu fest oder zu schwach anziehen.
IT_MONTAGGIO RAPIDO:Stringere il montaggio rapido fino aquando la spalla e a filo con il pannello,non stringere troppo o troppo poco.

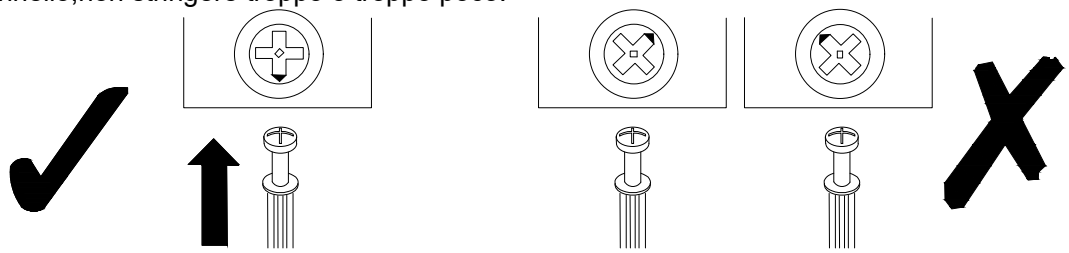


EN_CAM LOCK:When fitting cam lock,ensure starting position is correct before you insert connecting quickfit.
FR_SERRURE BATTEUSE:Avant d'inserer la serrure batteuse,veillez a la bonne orientation avant d'inserer le raccord rapide,
ES_CIERRE DE LA CAMARA:Cuando instale el cierre de la camara,asegurese de que la posicion de inicio es correcta antes de que inserte el quickfit conector,
De_CAM-LOCK:Achten Sie bei der Montage des Cam-locks auf die richtige Ausgangsposition,bevor Sie den Quickfit einsetzen.
IT_BLOCCAGGIO A CAMMA:Quando si monta il bloccaggio a camma,assicurarsi che la possizione iniziale sia corretta prima di inserire il montaggio rapido di collegamento.

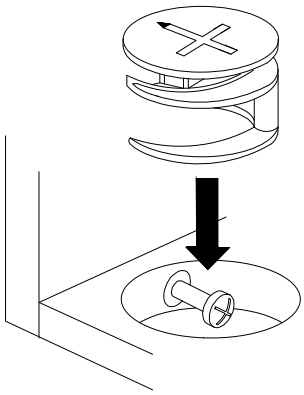



















EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.
FR_Lorsque les deux panneaux sont assembles,la tete du raccord rapide doit reposer au centre de la serrure batteuse.
Il faut inserer la serrure batteuse avant le raccord rapide.
ES_EL cabezal del quickfit debe estar en el centro del cierre de la camara cuando se unan los dos paneles.
Se debe insertar el cierre de la camara antes que el quickfit.
DE_Der Quickfit-Kopf sollte sich in der Mitte des Cam-locks befinden,wenn die beiden Platten zusammengefugt sind.
Der Cam-lock sollte vor dem Quickfit eingesetzt werden.
IT_La testa del montaggio rapido deve trova rsi al centro del bloccaggio a camma quando i due pannelli sono uniti.
Il Bloccaggio a Camma deve essere inserito prima del montaggio rapido.

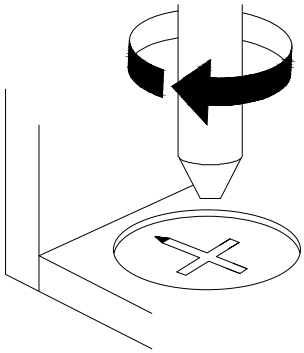







EN_Turn cam lock clockwise to tighten.
FR_Faites tourner la serrure batteuse dans le sens des aiguilles d'une montre pour la resserrer.
ES_Gire el cierre de la camara en sentido horario para apretarlo.
DE_Drehen Sie den Cam-Lock im Uhrzeigersinn,um ihn festzuziehen.
IT_Rutotare il bloccaggio a camma in senso oragio per stringere.

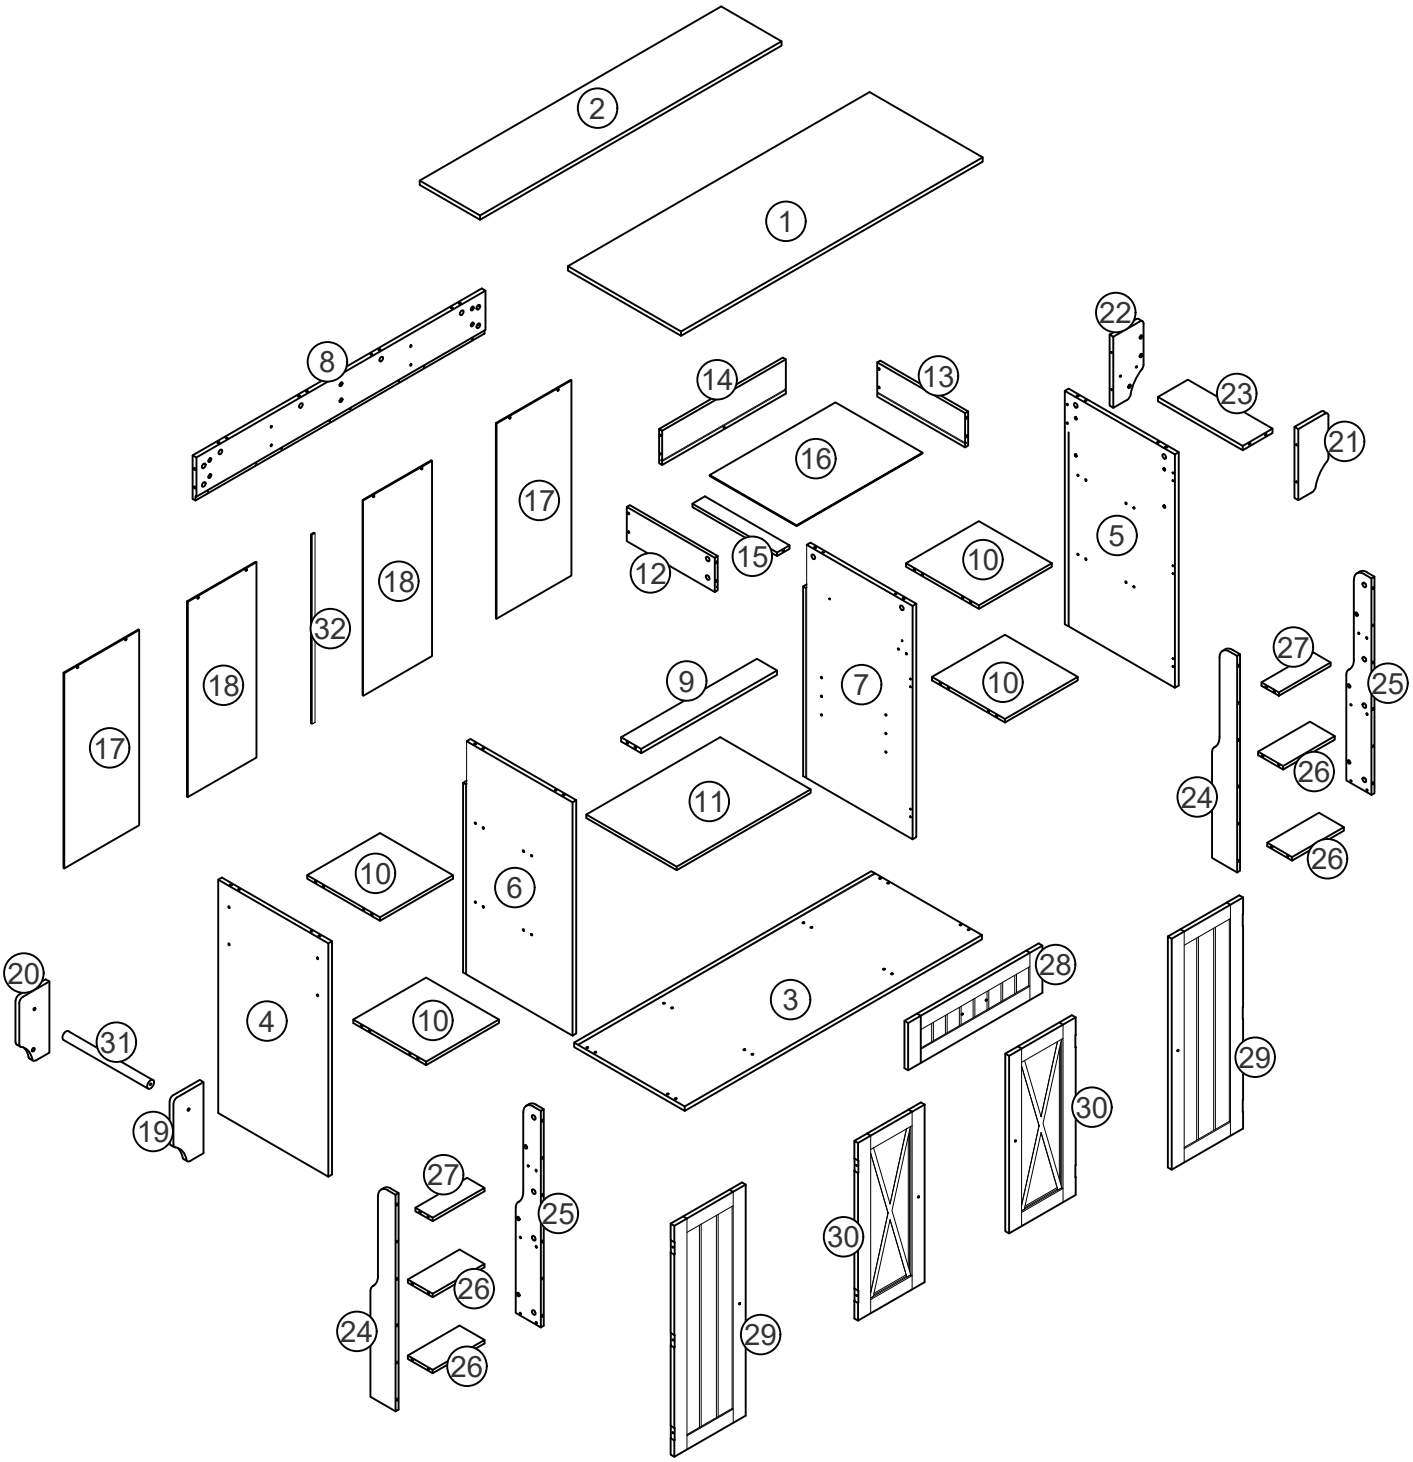
2
1
8
22
14
13
23
21
16
17
5
15
12
10
32
18
9
7
10
27
25
18
17
11
26
24
10
6
26
20
28
10
3
4
31
29
30
19
27
25
26
24
30
29
26










BOX-1/2 SKU N635P524262

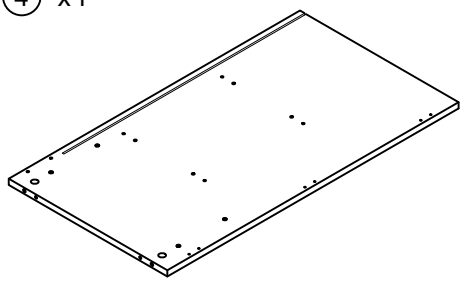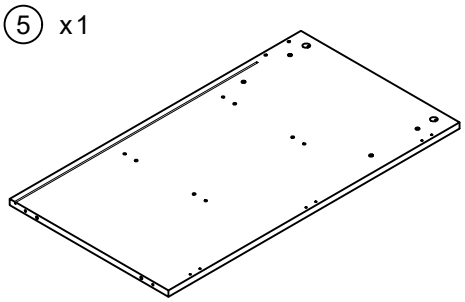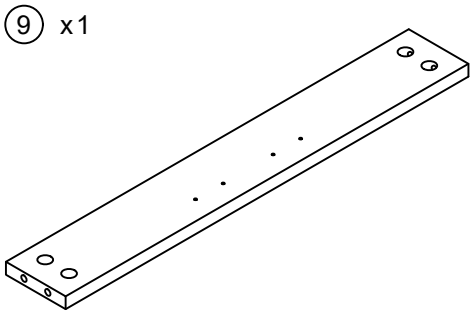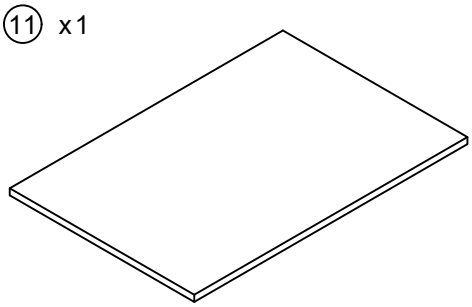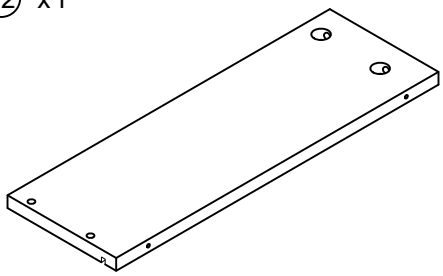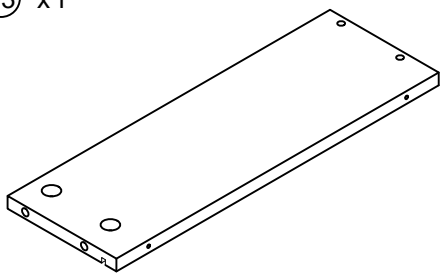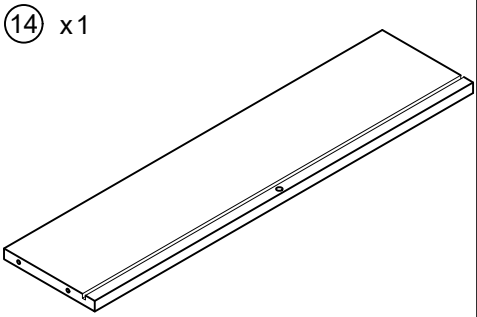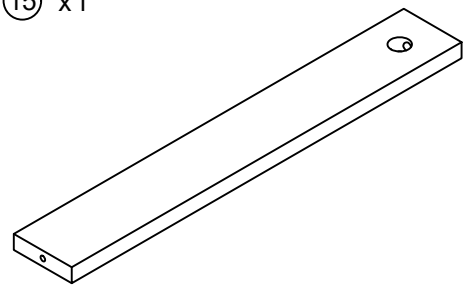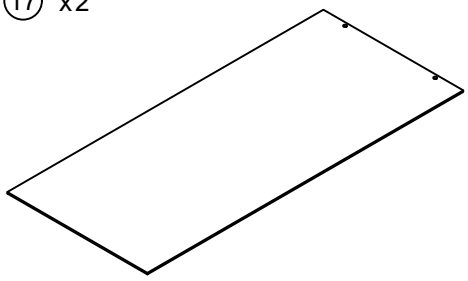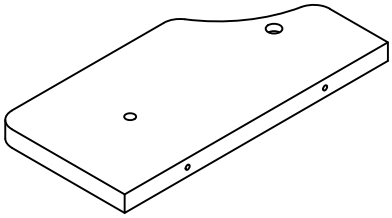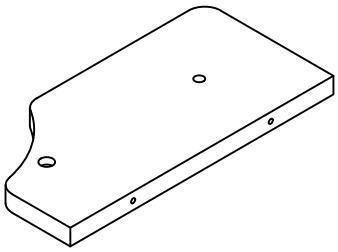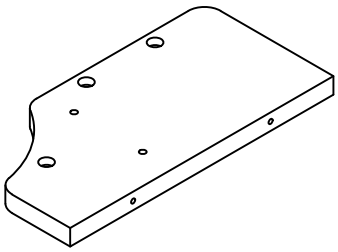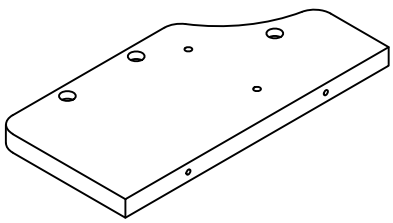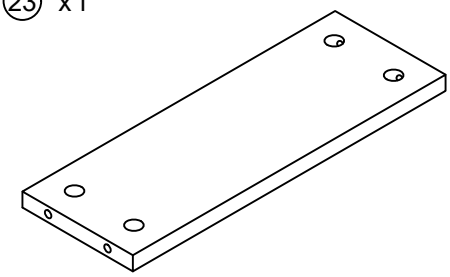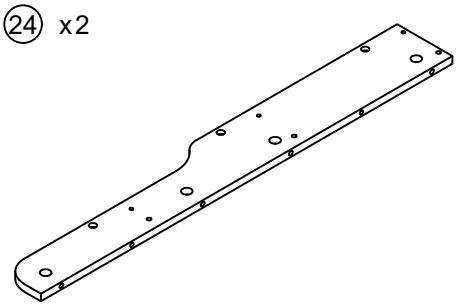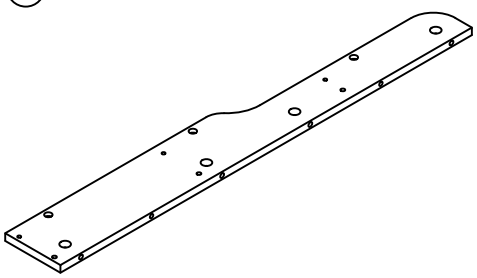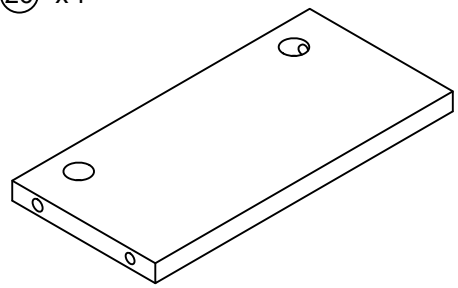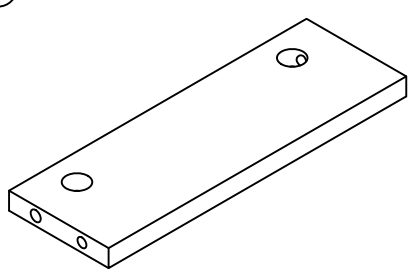④ x1 	⑤ x1 	⑨ x1 
⑪ x1 	⑫ x1 	⑬ x1 
⑭ x1 	⑮ x1 	⑰ x2 
⑲ x1 	⑳ x1 	㉑ x1 
㉒ x1 	㉓ x1 	㉔ x2 
㉕ x2 	㉖ x4 	㉗ x2 


























BOX-1/2 SKU N635P524262

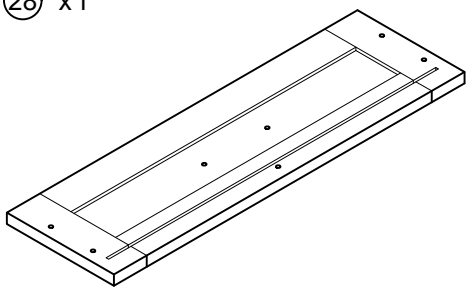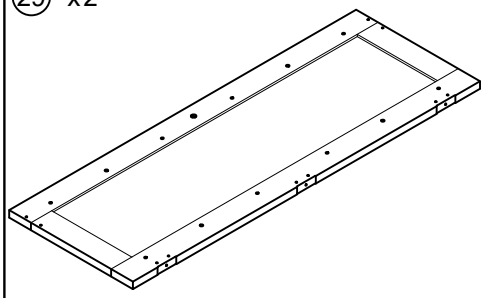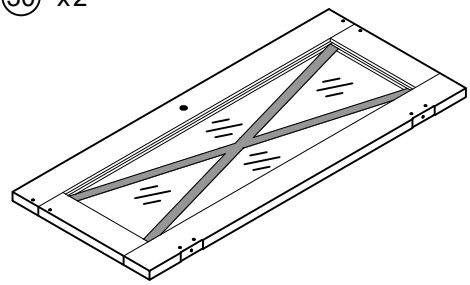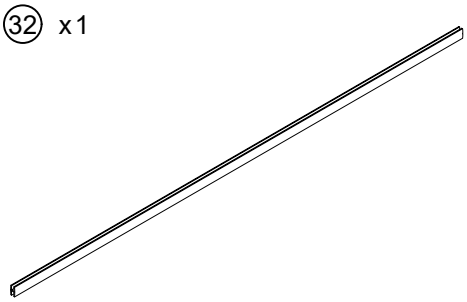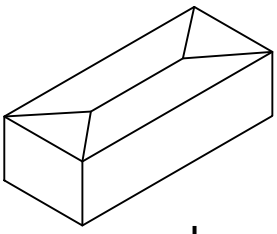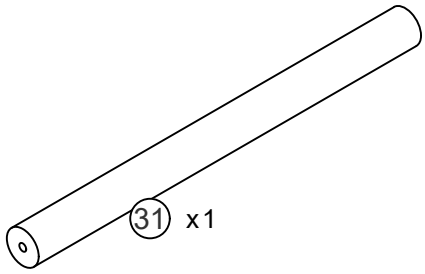
(28) x1 	(29) x2 	(30) x2 
(32) x1 	 Accessory box	 (31) x1

BOX-2/2 SKU N635P524261

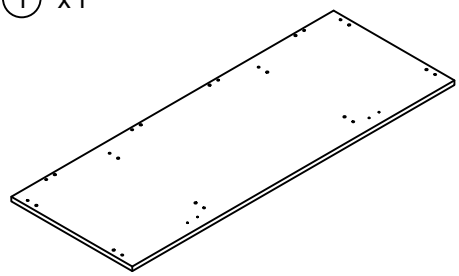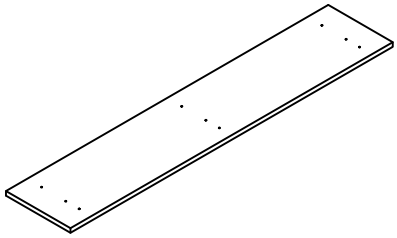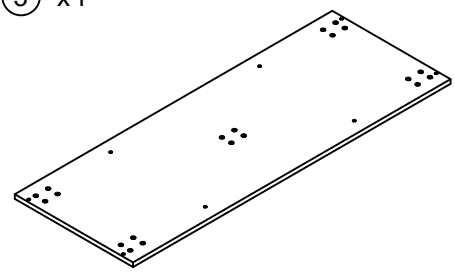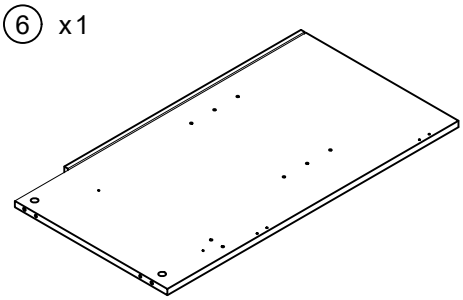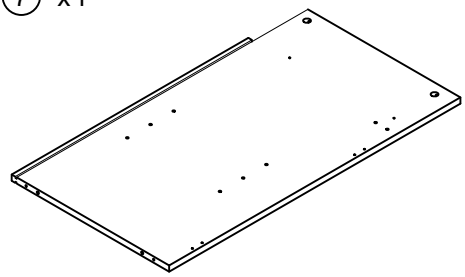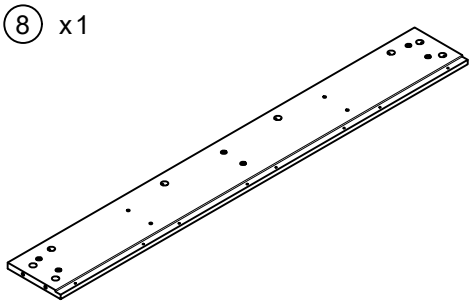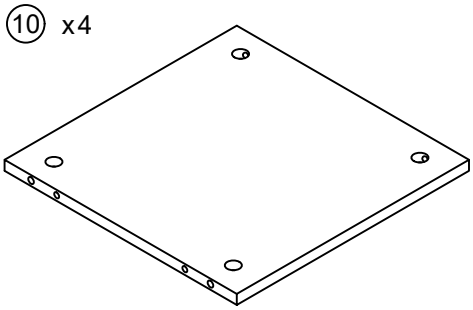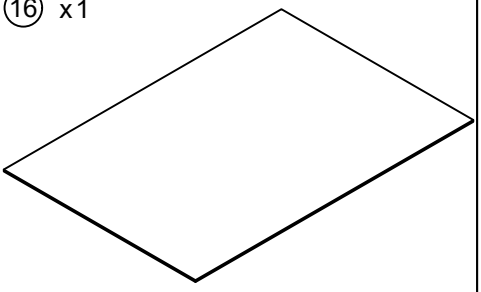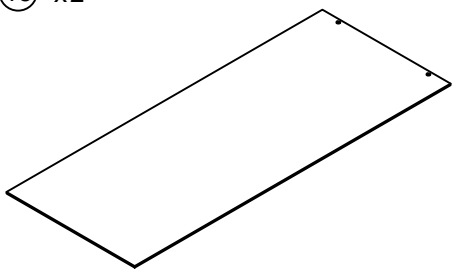① x1 	② x1 	③ x1 
⑥ x1 	⑦ x1 	⑧ x1 
⑩ x4 	⑯ x1 	⑱ x2 

SKU N635P524262

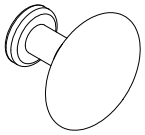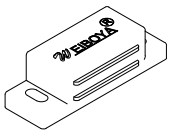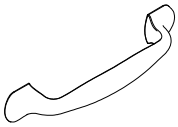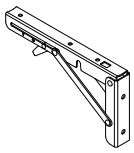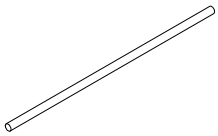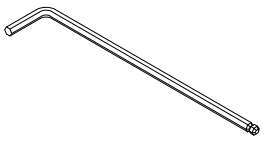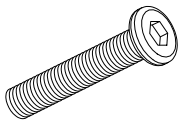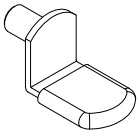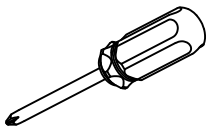
A x73+5 Ø6x35mm 	**B** x73+5 Ø15x10mm 	**C** x56+4 Ø6x30mm 	**D** x25+3 Ø5x38mm 	**E** x2+1 M4x8mm 
F x10 	**G** x4 	**H** x4 	**I** x4 	**J** x66+6 Ø6xØ3x12mm 
K x8+1 Ø6xØ3x14mm 	**L** x1 	**M** x4+1 M4x14mm 	**N** x3 	**O** x2 
P x3 	**Q** x4 Ø10x348mm 	**R** x6 Ø10x217mm 	**S** x9+1 Ø8xØ4x16mm 	**T** x20+2 Ø6xØ3x16mm 
U x1 4mm 	**V** x55+5 Ø20mm 	**W** x8+1 Ø7xØ3.5x12mm 	**X** x26+2 M6x12mm 	**Y** x2+1 M6x30mm 
Z x4+1 				




L=350mm



L=350mm




































L=350mm





L=350mm

x1

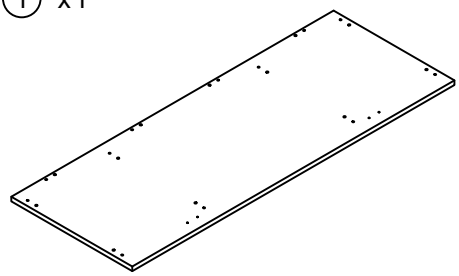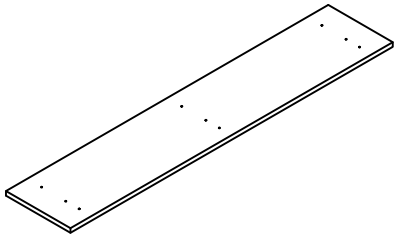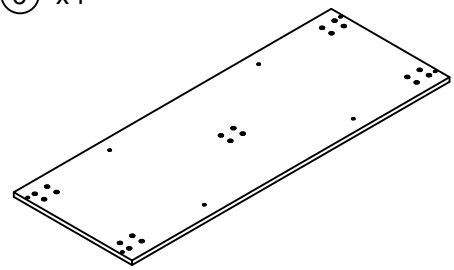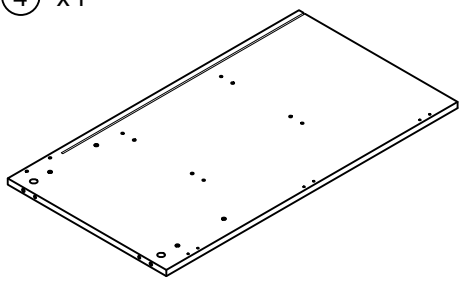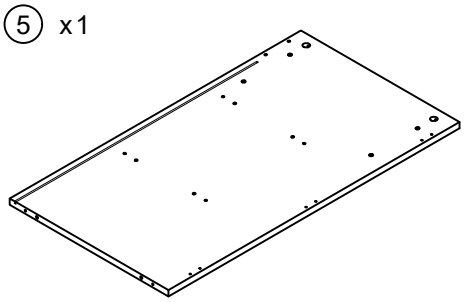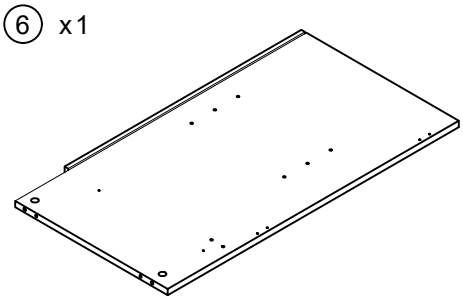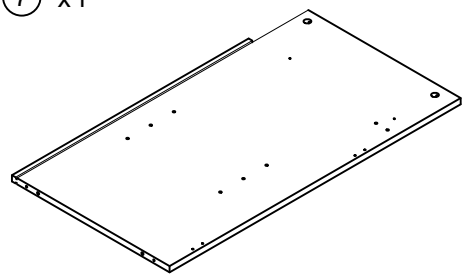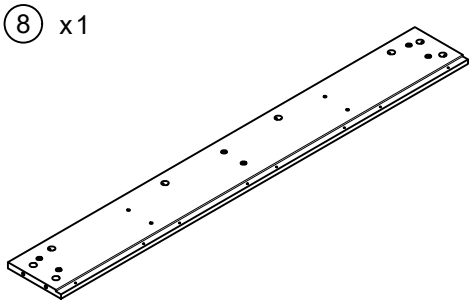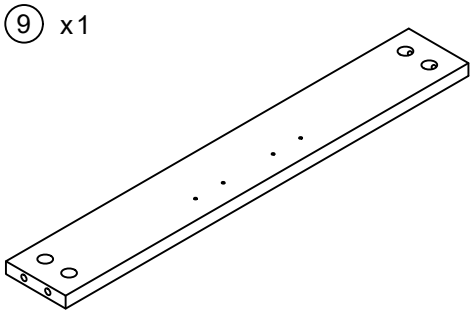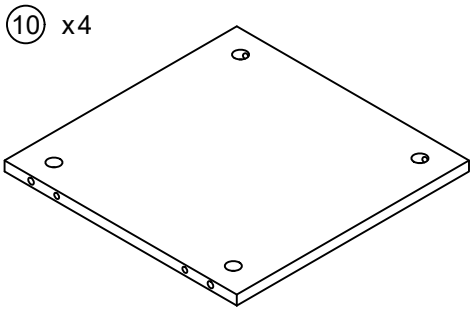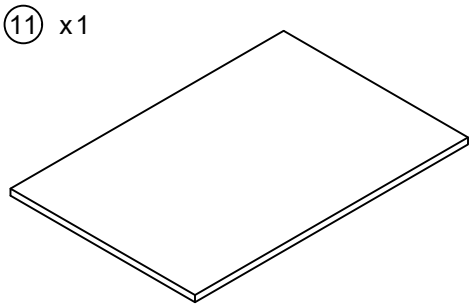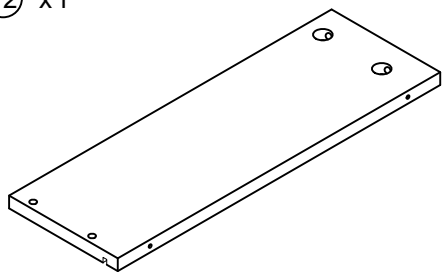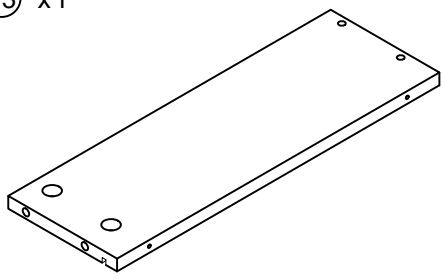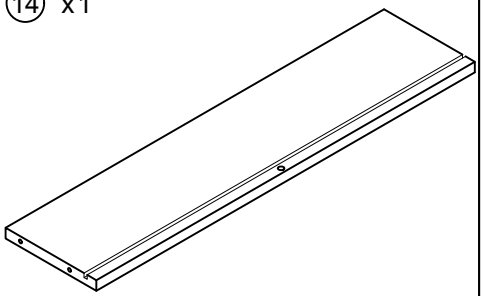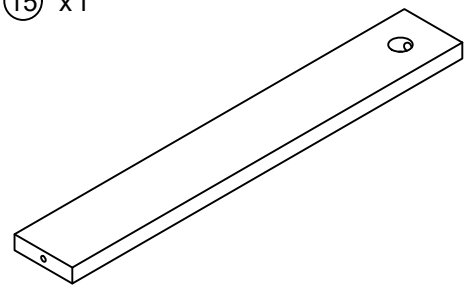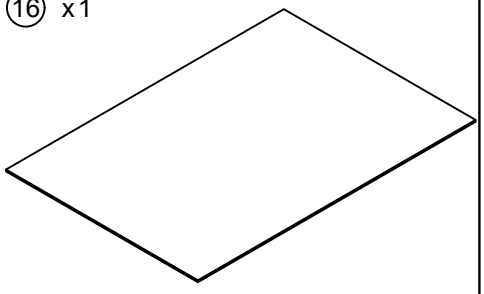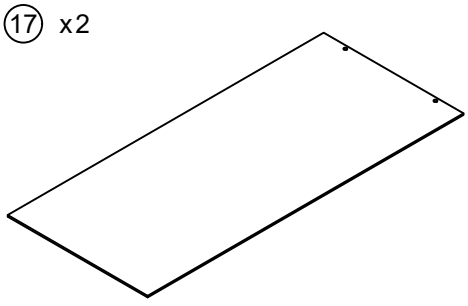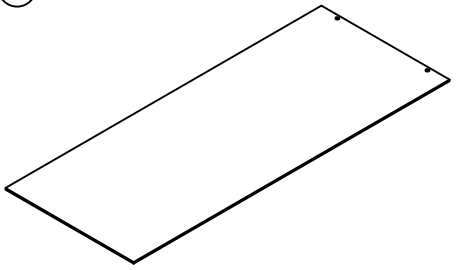① x1 	② x1 	③ x1 
④ x1 	⑤ x1 	⑥ x1 
⑦ x1 	⑧ x1 	⑨ x1 
⑩ x4 	⑪ x1 	⑫ x1 
⑬ x1 	⑭ x1 	⑮ x1 
⑯ x1 	⑰ x2 	⑱ x2 

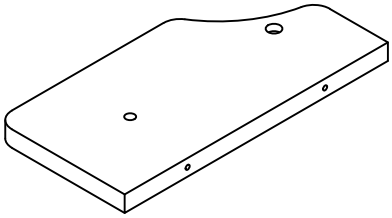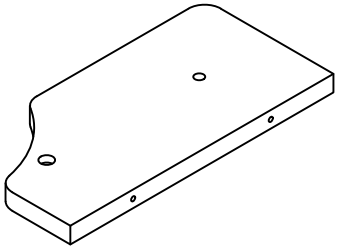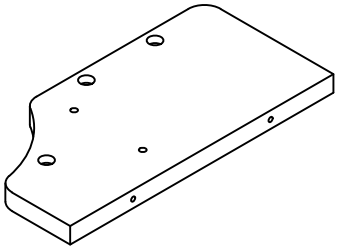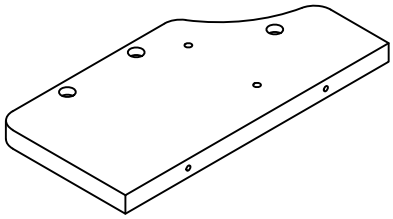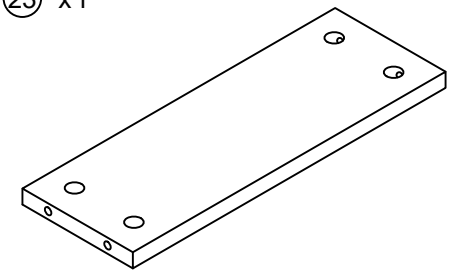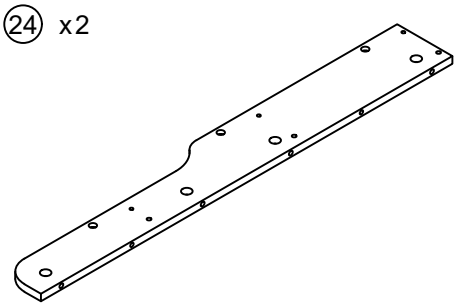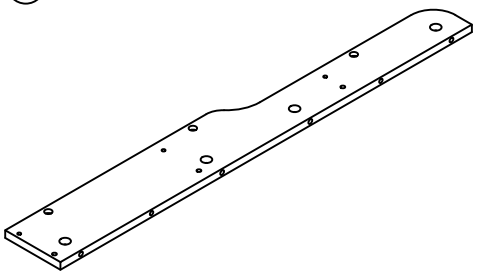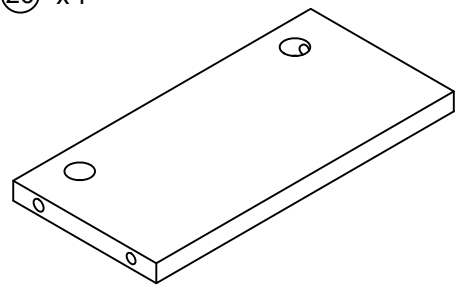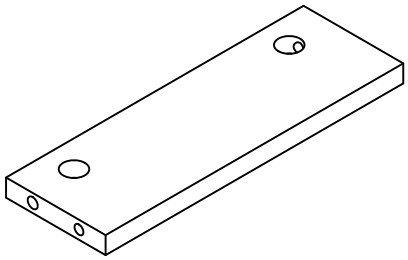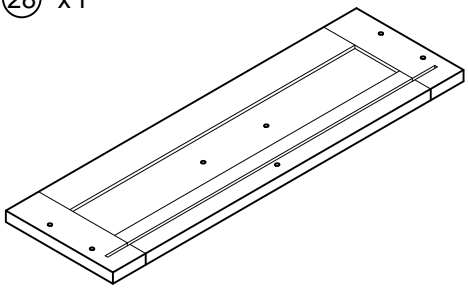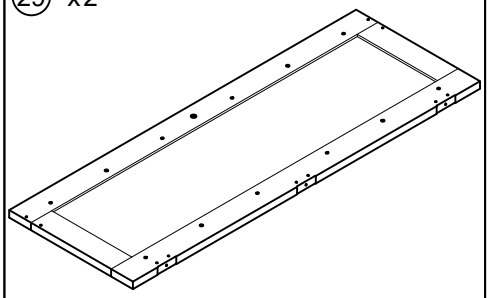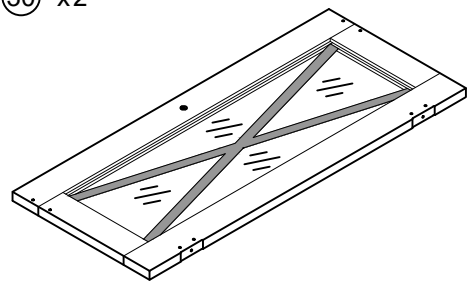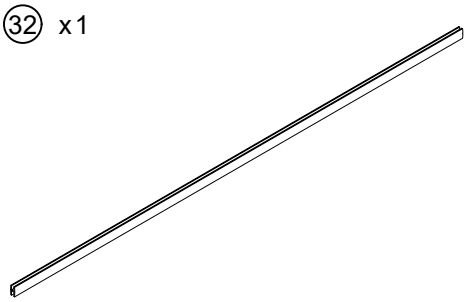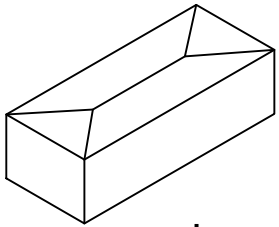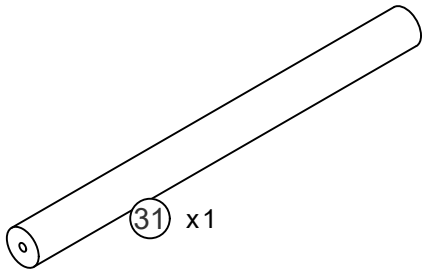(19) x1 	(20) x1 	(21) x1 
(22) x1 	(23) x1 	(24) x2 
(25) x2 	(26) x4 	(27) x2 
(28) x1 	(29) x2 	(30) x2 
(32) x1 	 Accessory box	 (31) x1

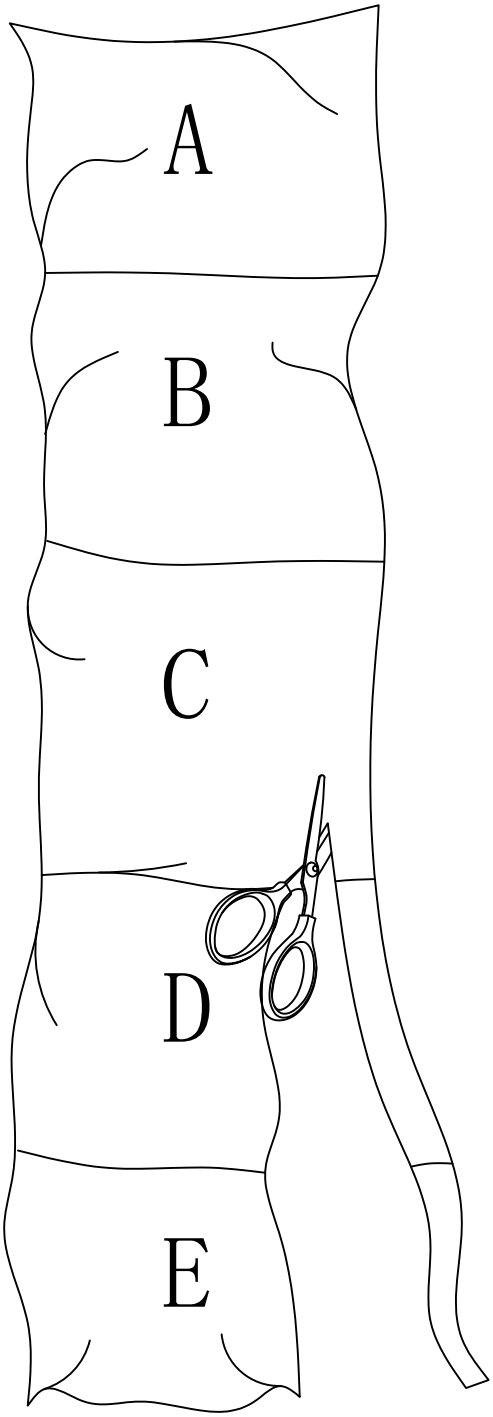


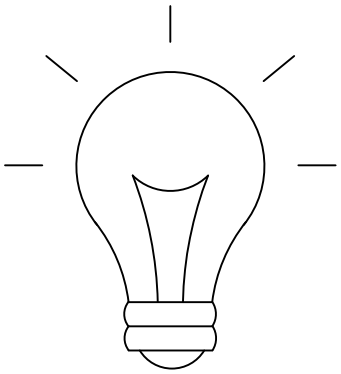

friendly reminder

To avoid errors and confusion during the installation of accessories, use the type and quantity of hardware accessories according to the installation procedure described in the instructions. First, unroll the accessories bag and lay out the hardware accessories, cut holes in the side, and take out the hardware accessories

01

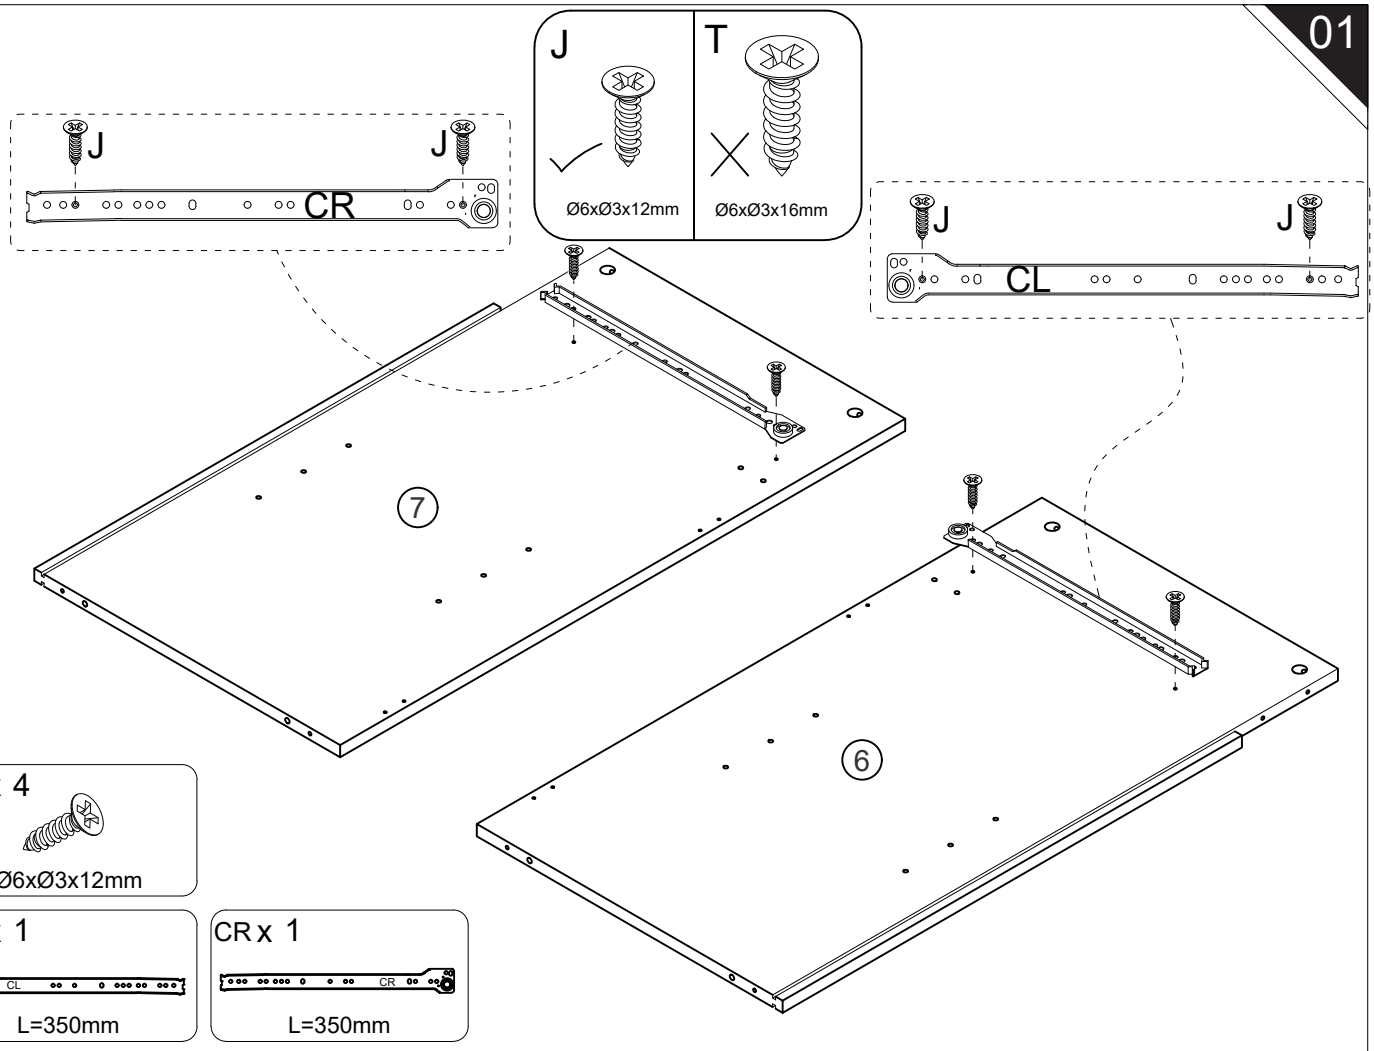

J x 4

Ø6xØ3x12mm


CL x 1

L=350mm


CR x 1

L=350mm

02

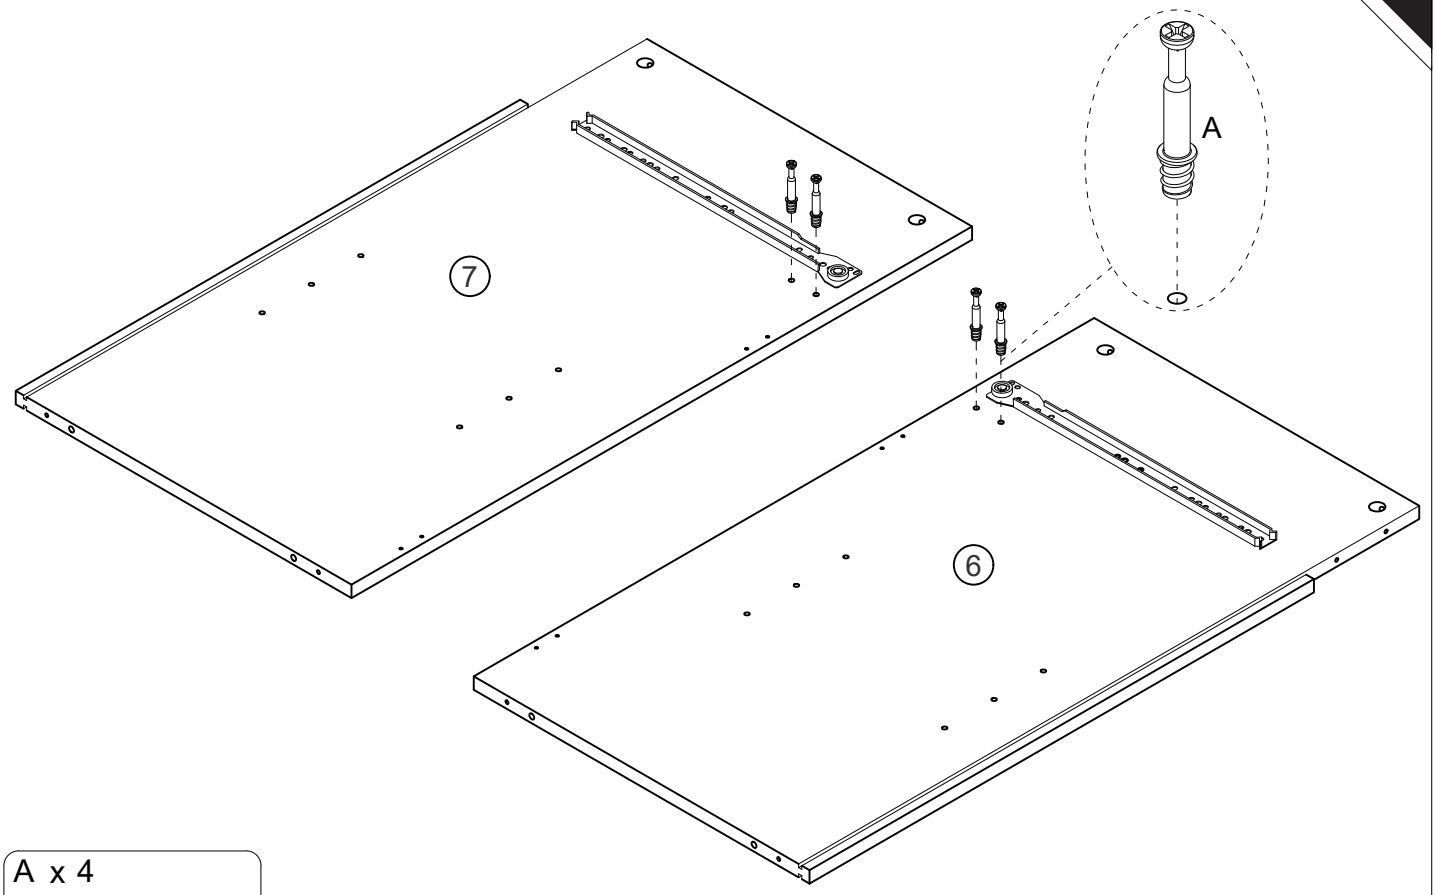



A x 4





Ø6x35mm

03

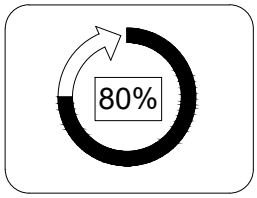

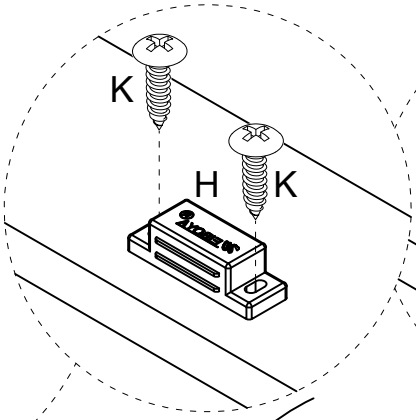


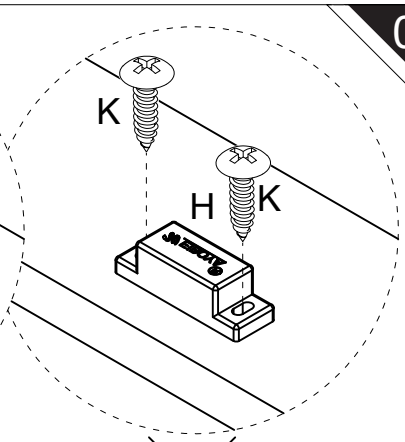


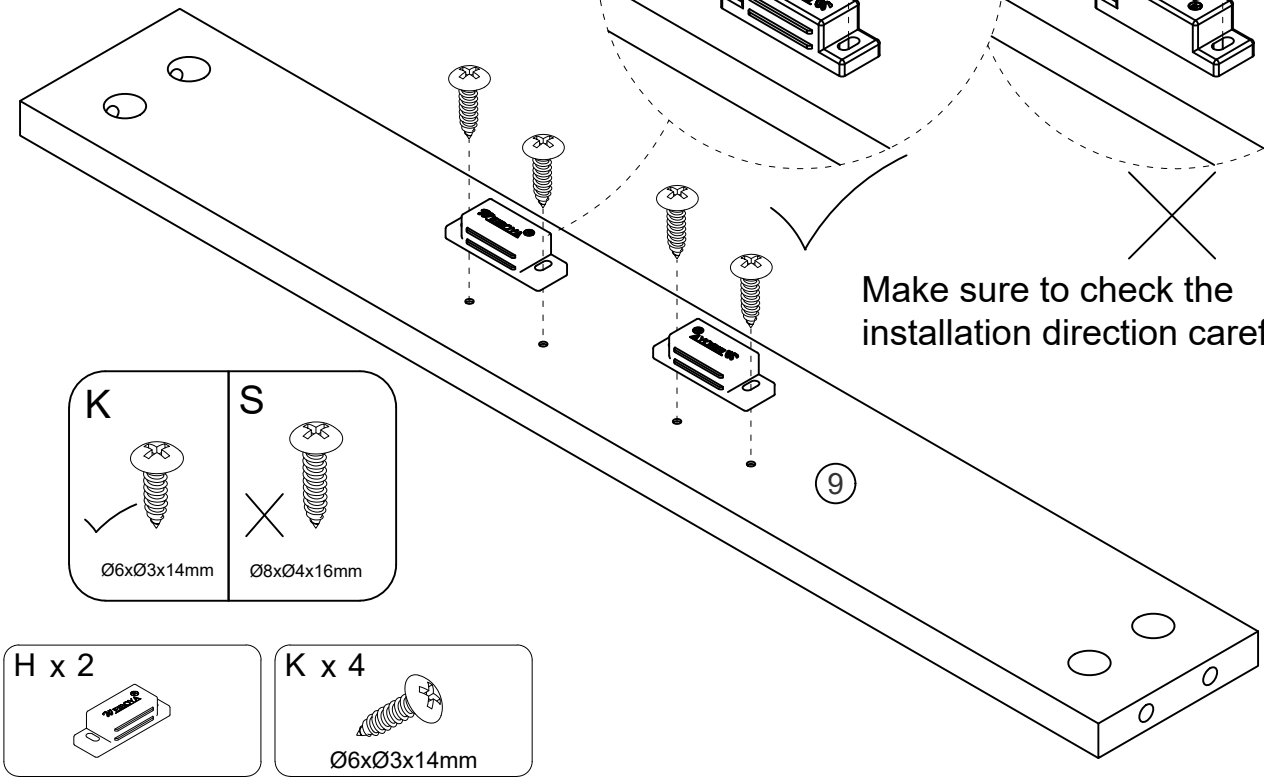


Make sure to check the installation direction carefully.

04

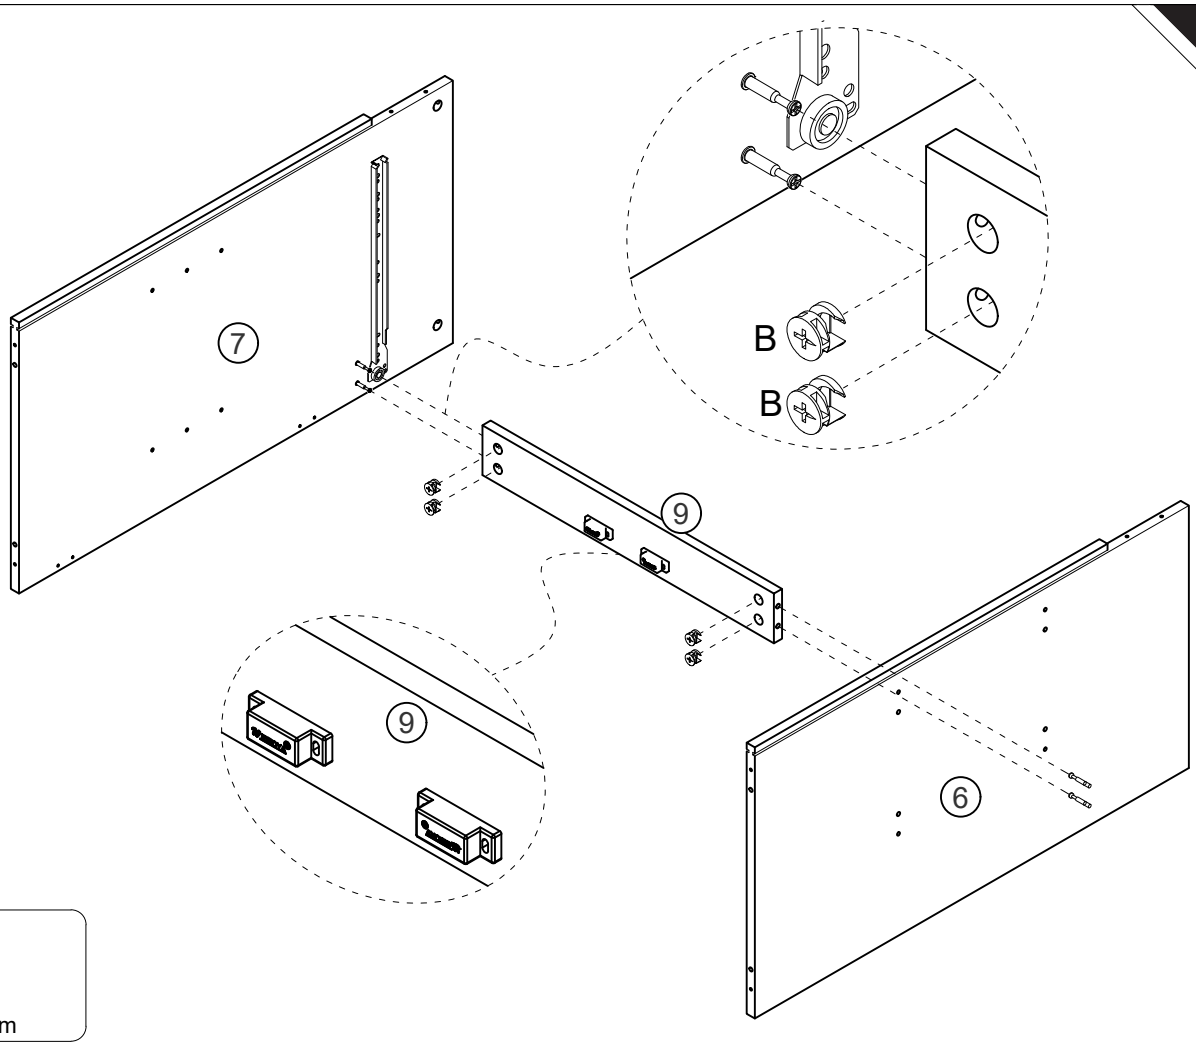

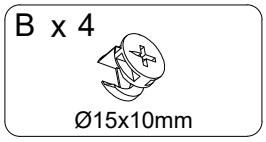

05

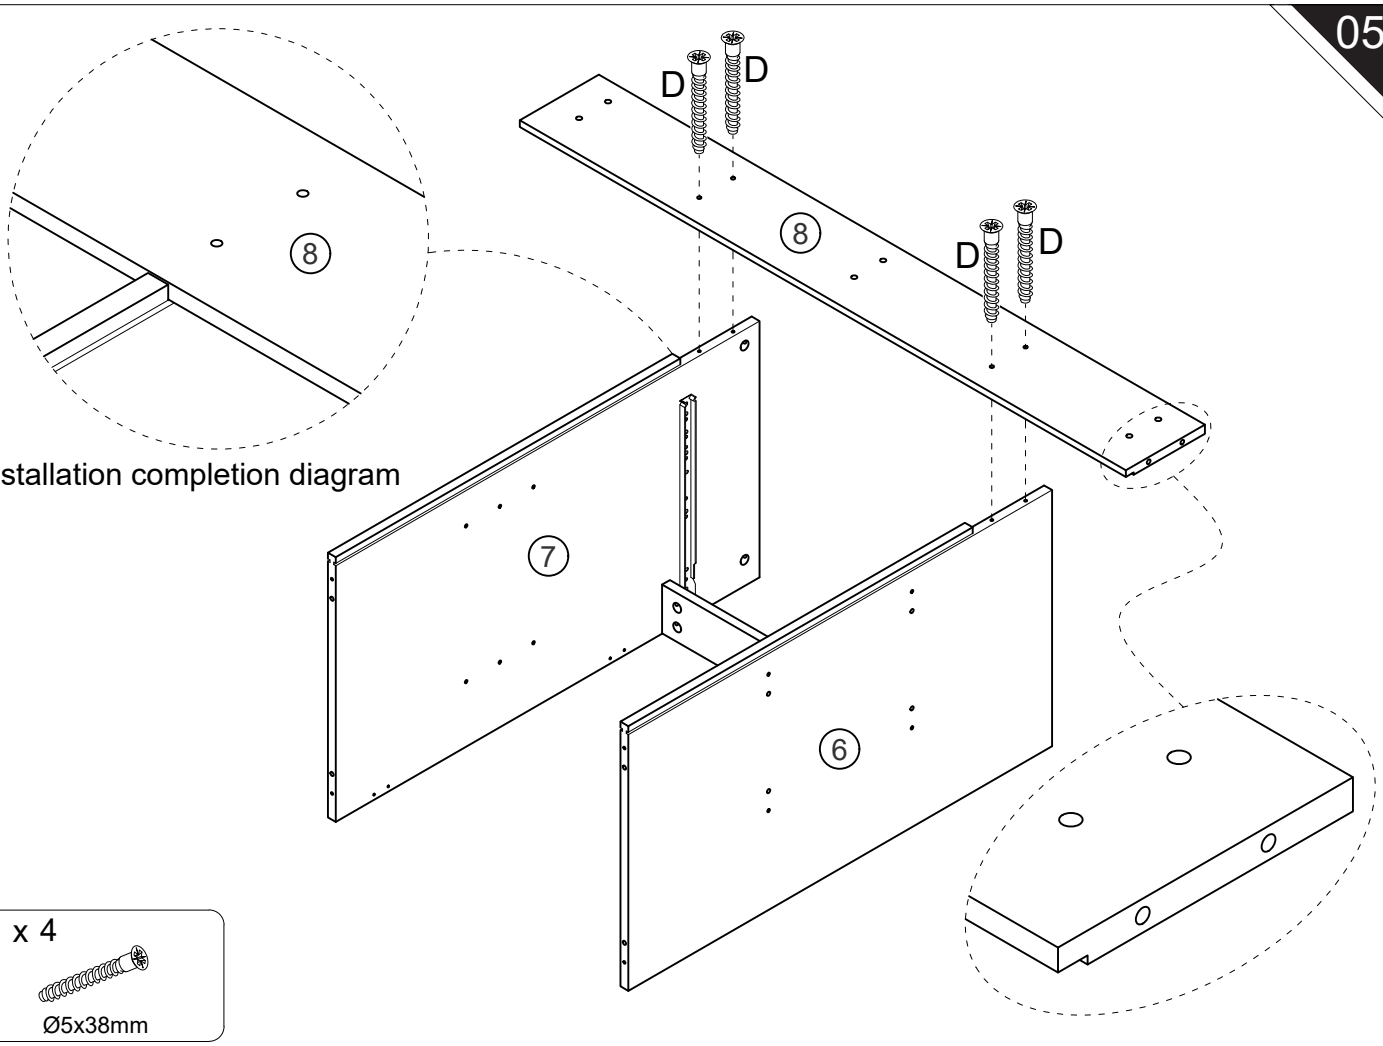


Installation completion diagram

D x 4

Ø5x38mm


06

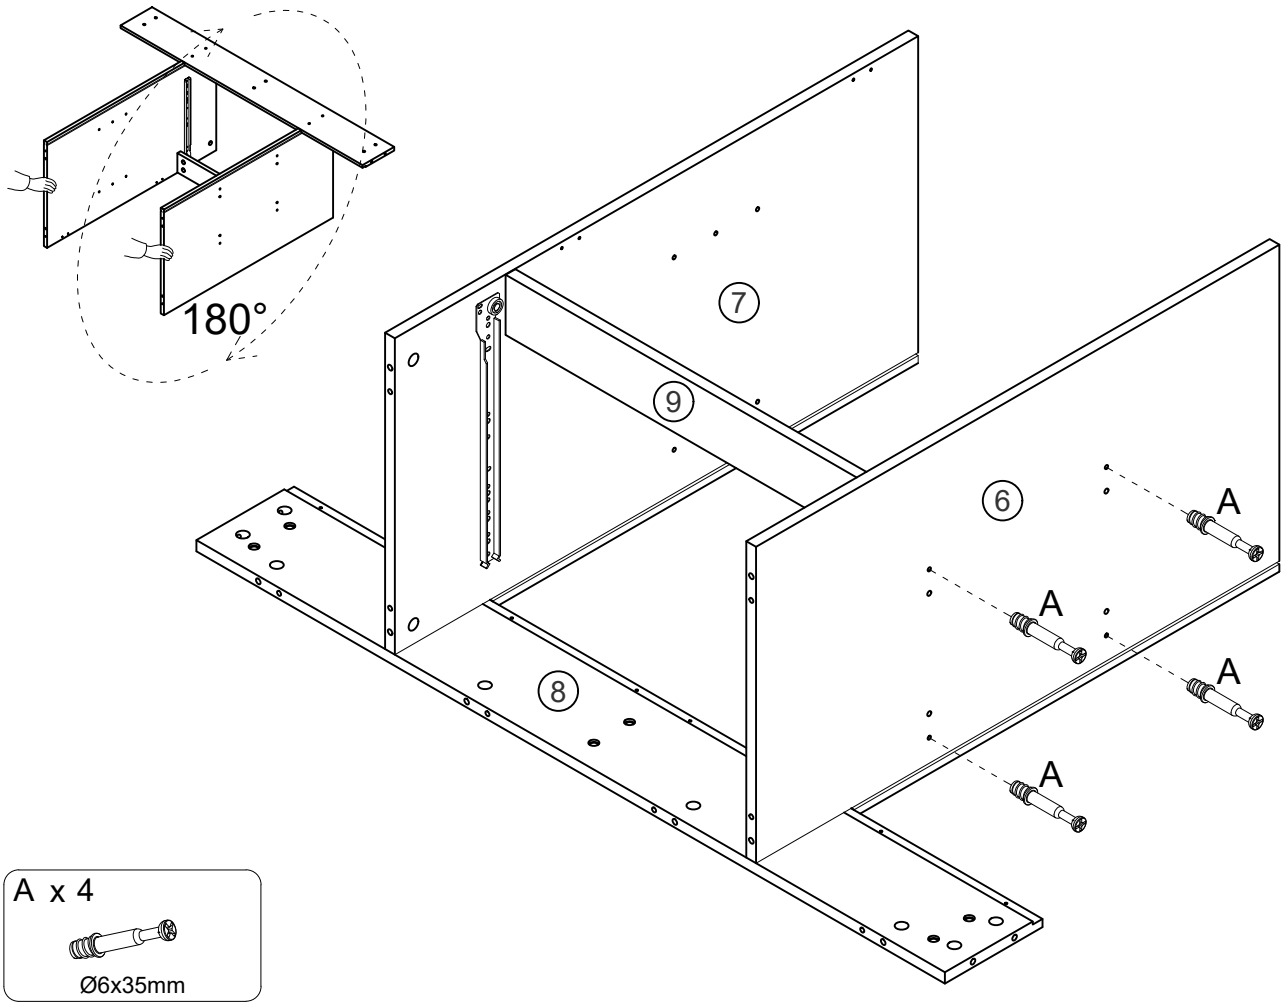

A x 4

Ø6x35mm


07

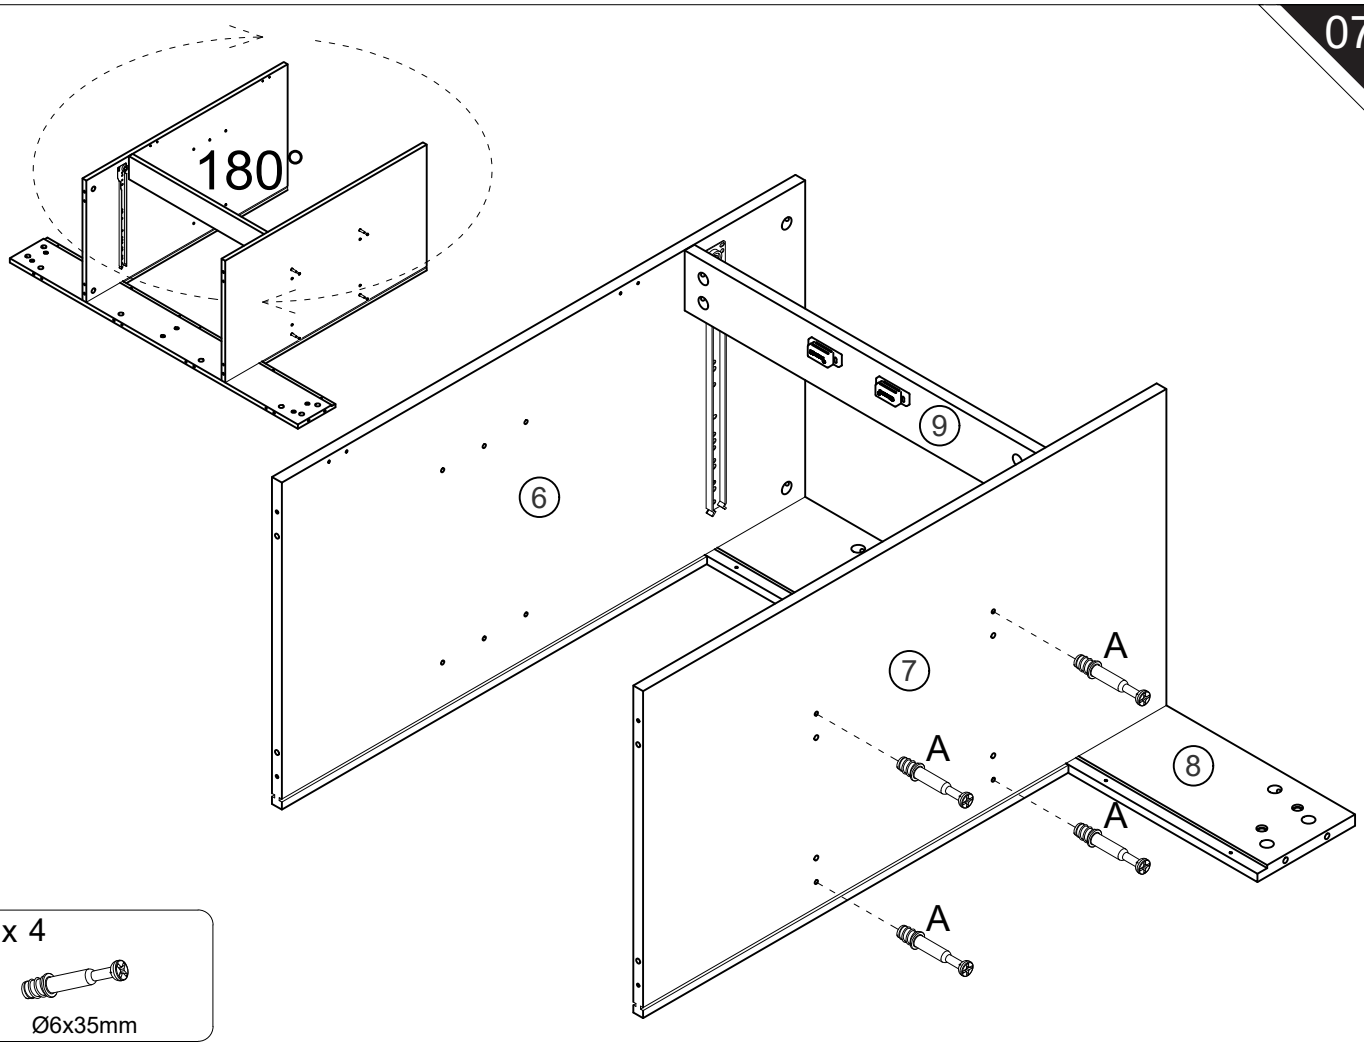


A x 4

Ø6x35mm

08

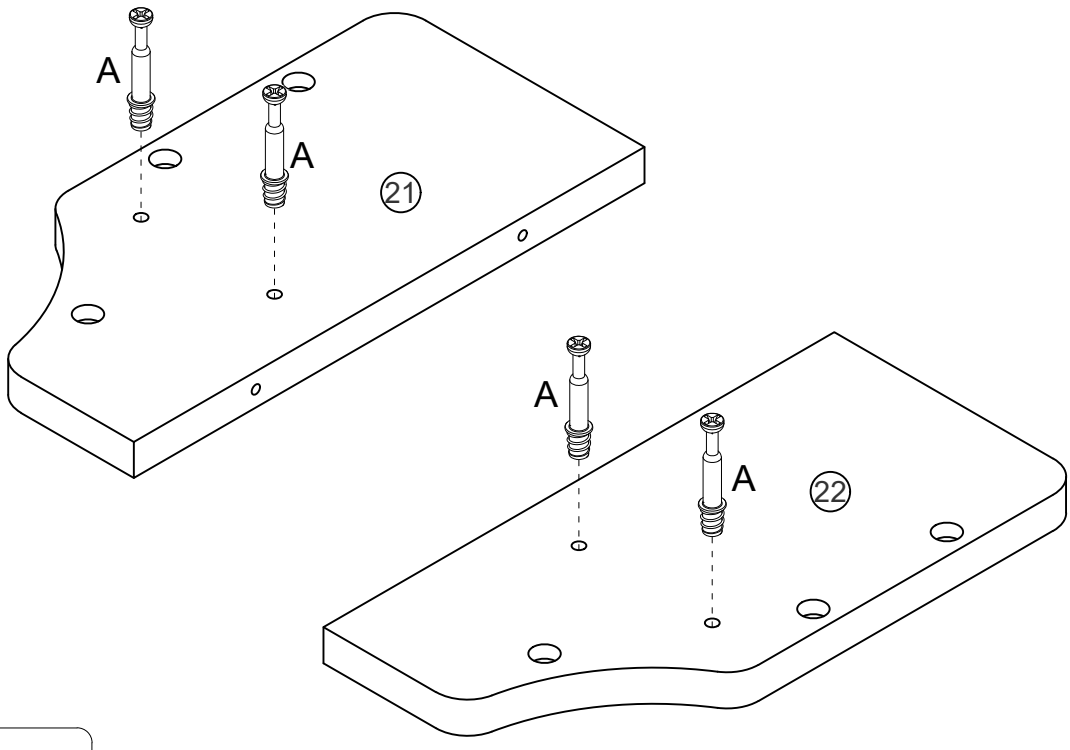


A x 4



Ø6x35mm

09

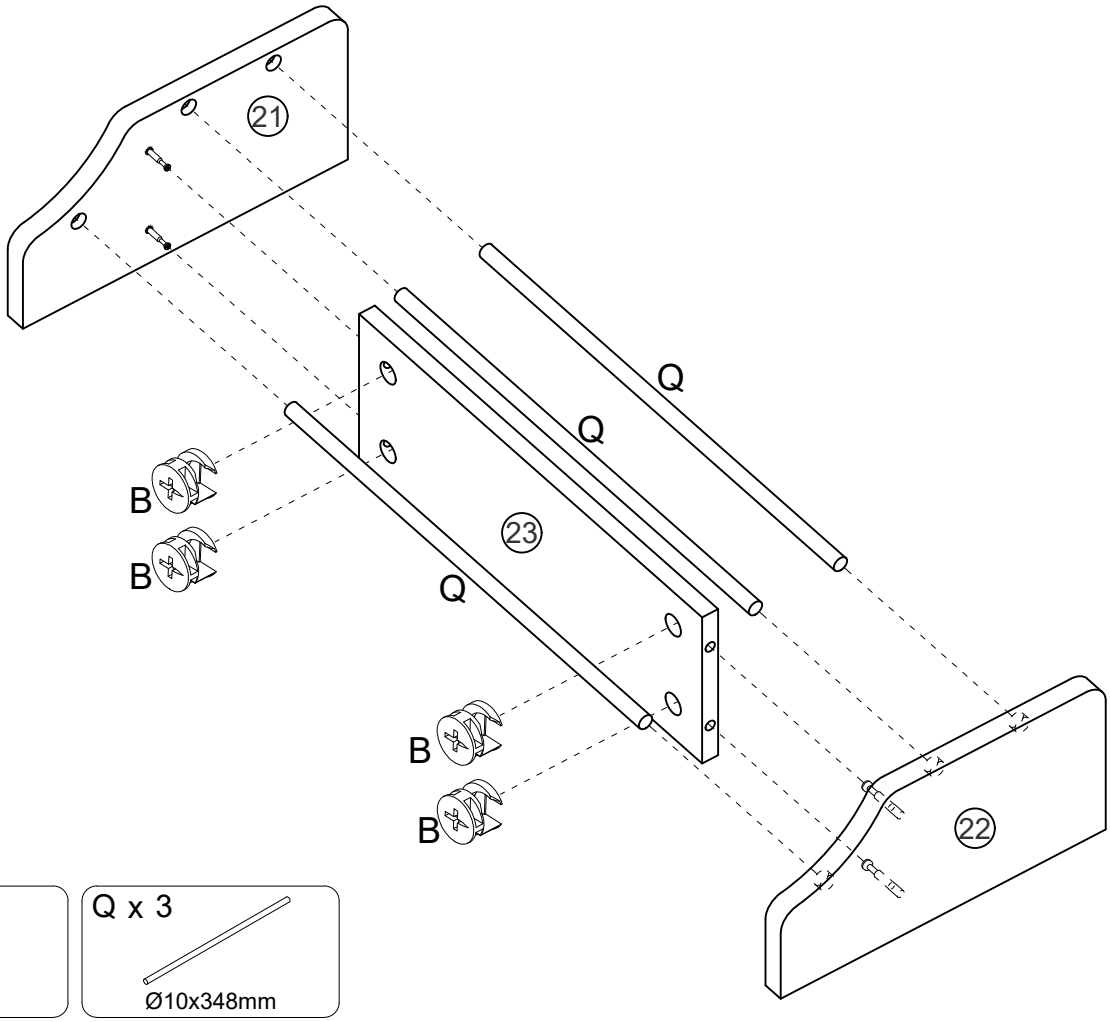

B x 4




Ø15x10mm


Q x 3

Ø10x348mm

10

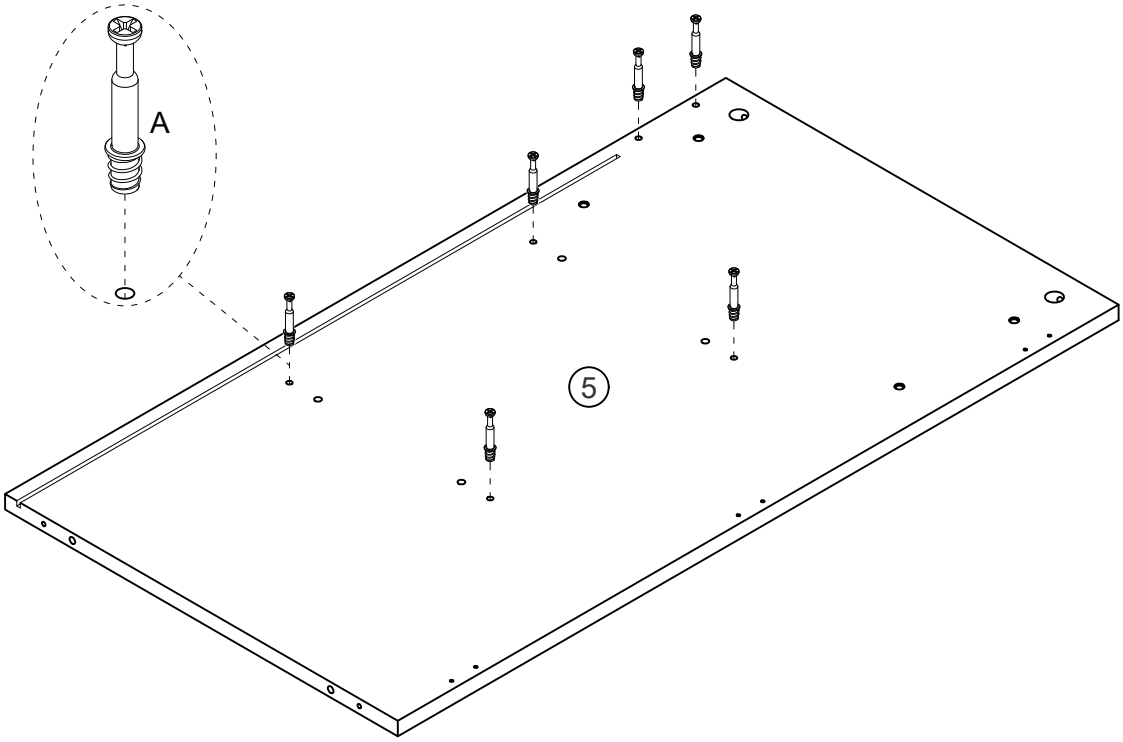


A x 6




Ø6x35mm

11

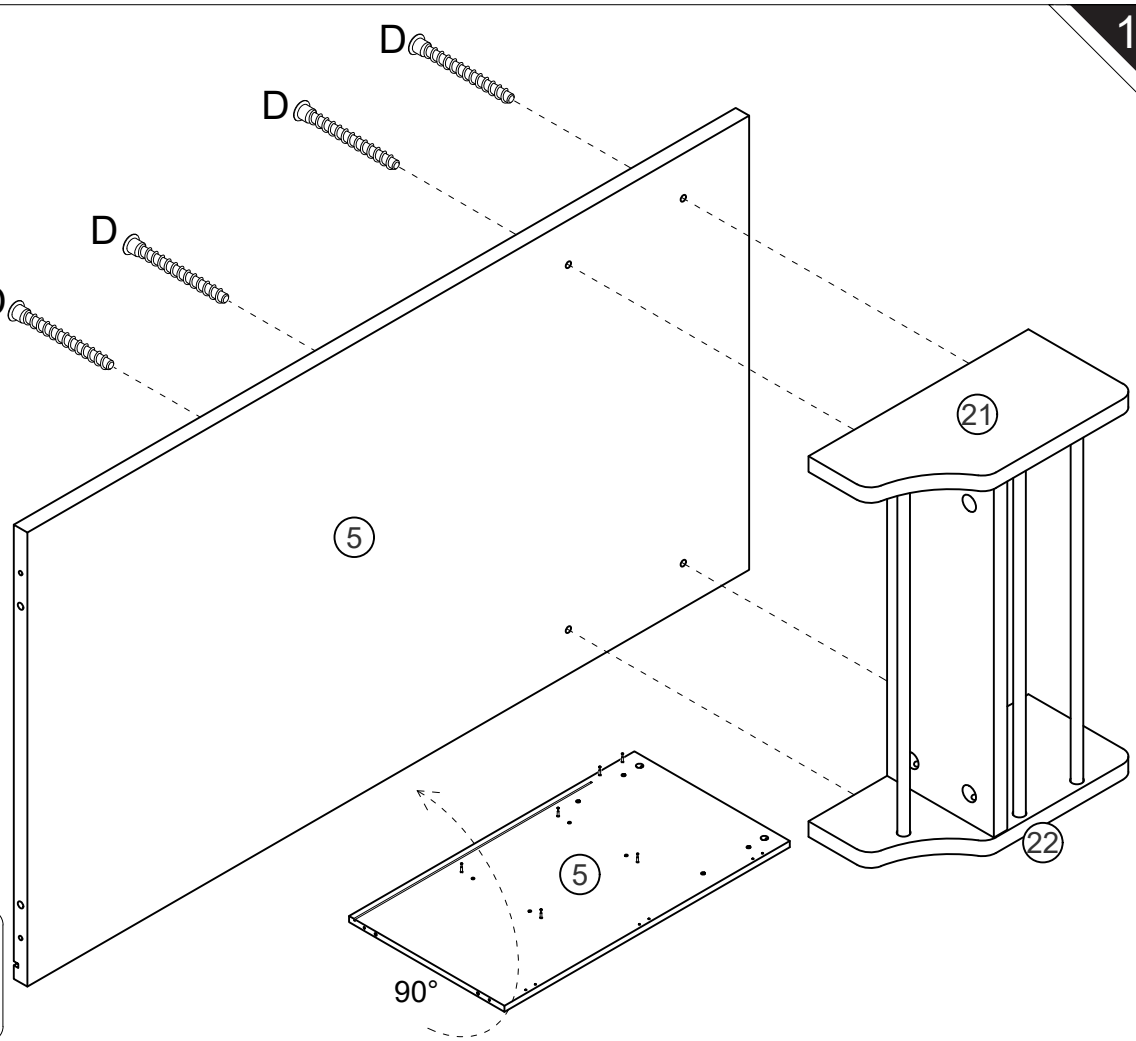


D x 4



Ø5x38mm

12

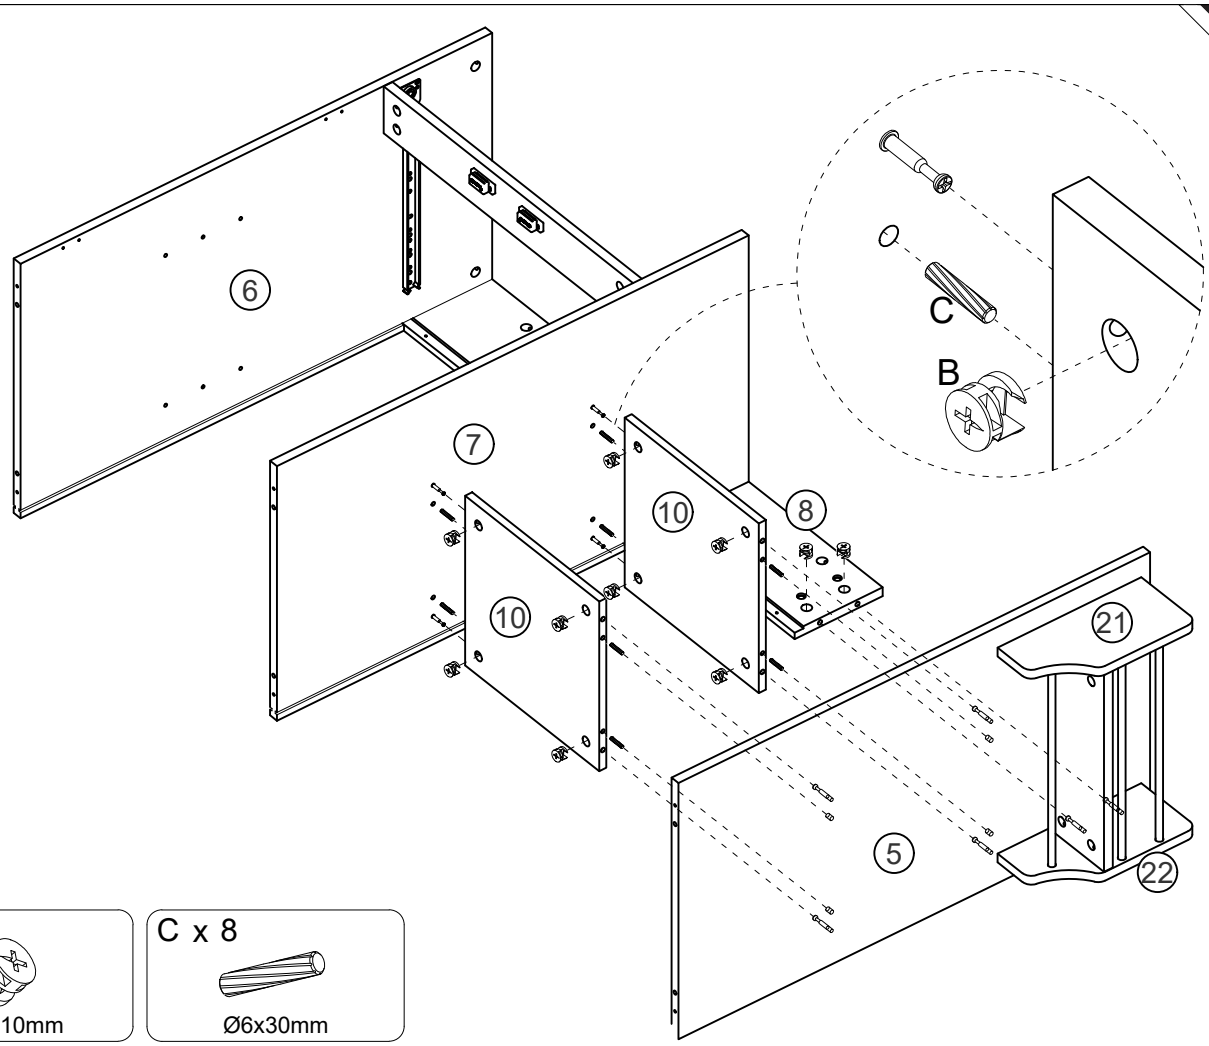

B x 10




Ø15x10mm


C x 8

Ø6x30mm

13

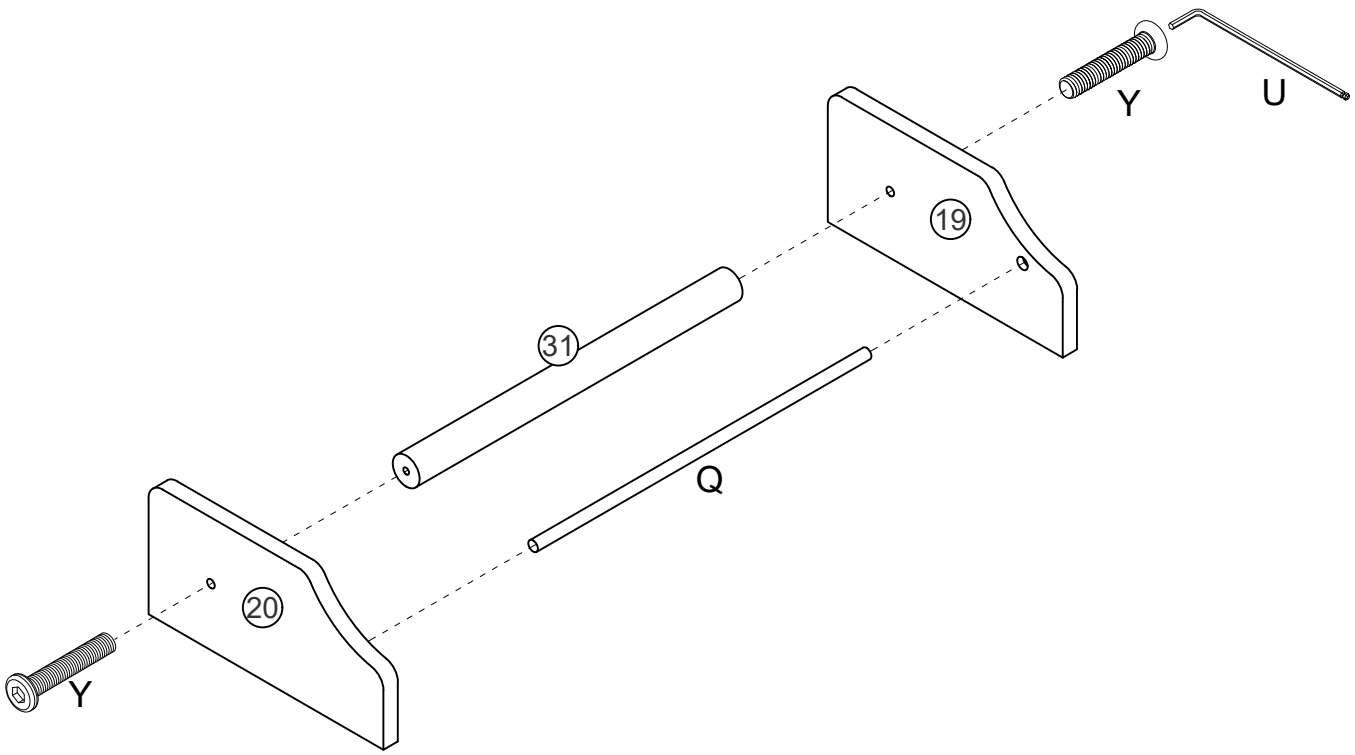


Q x 1




Ø10x348mm

U x 1

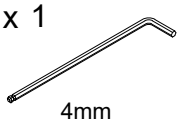


4mm

Y x 2




M6x30mm

14

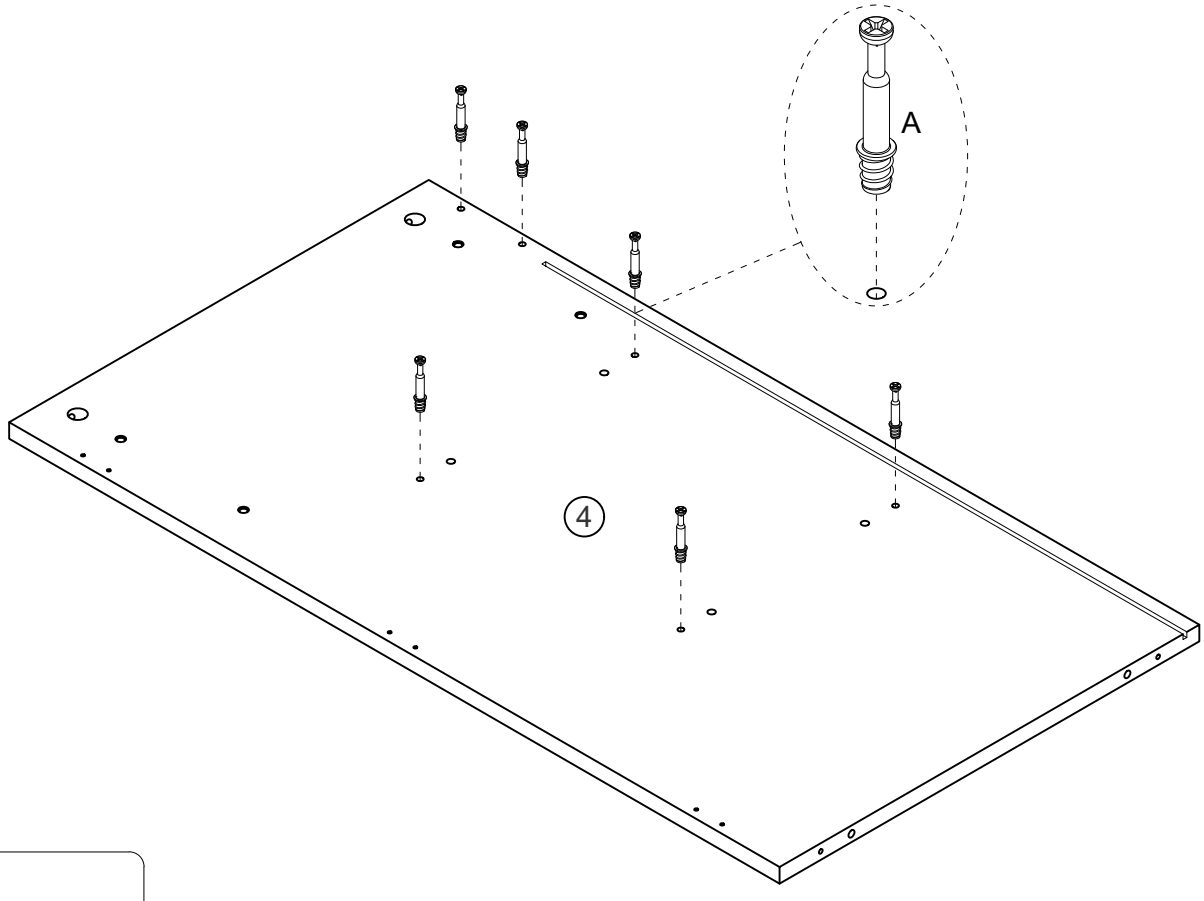


A x 6



Ø6x35mm


15

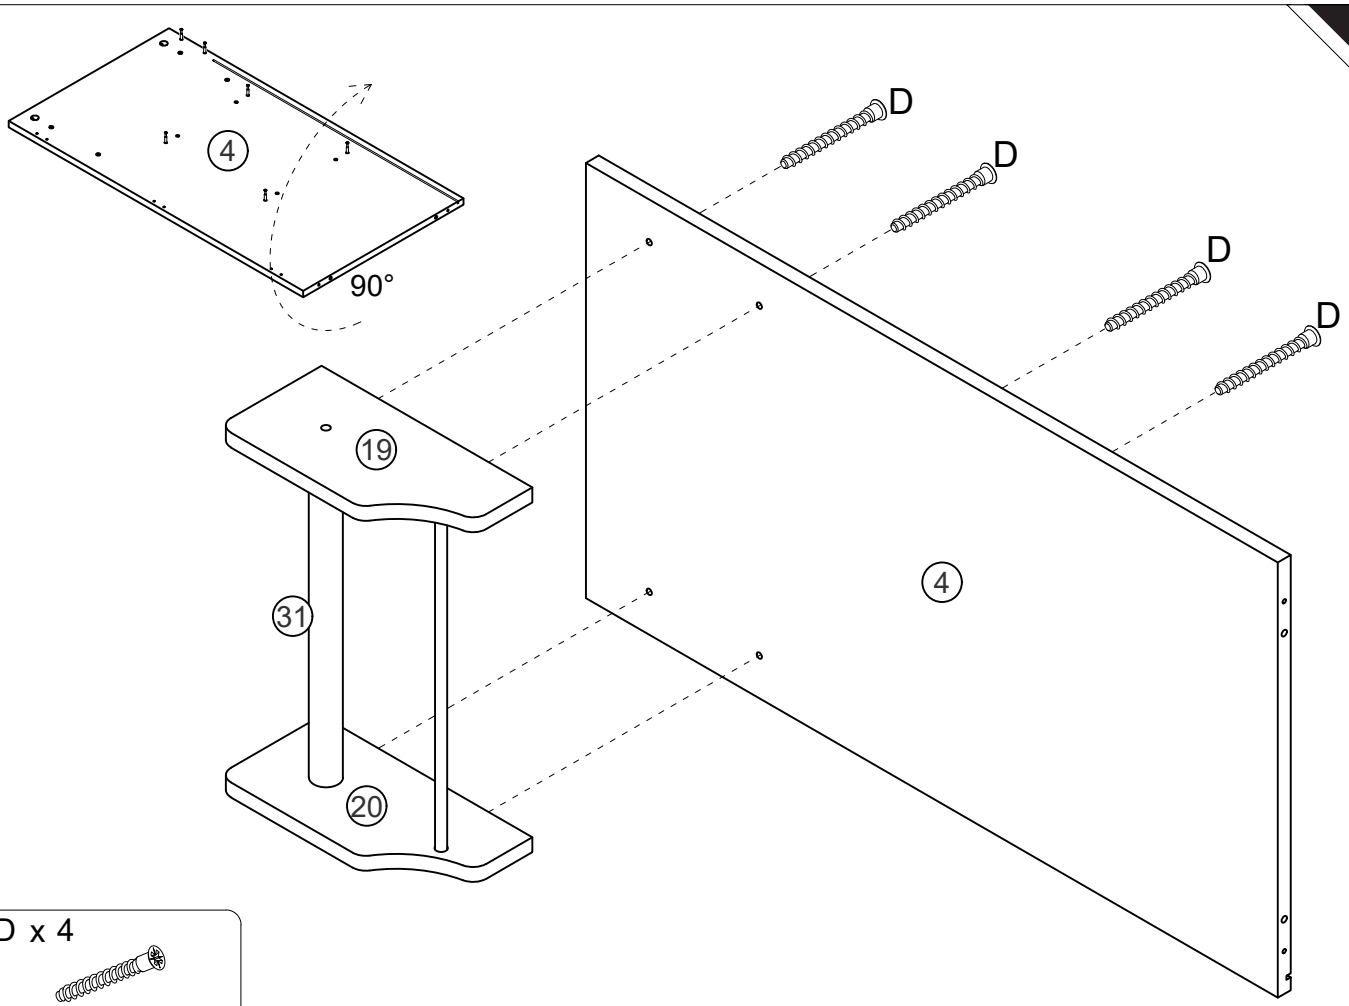

D x 4

Ø5x38mm

16

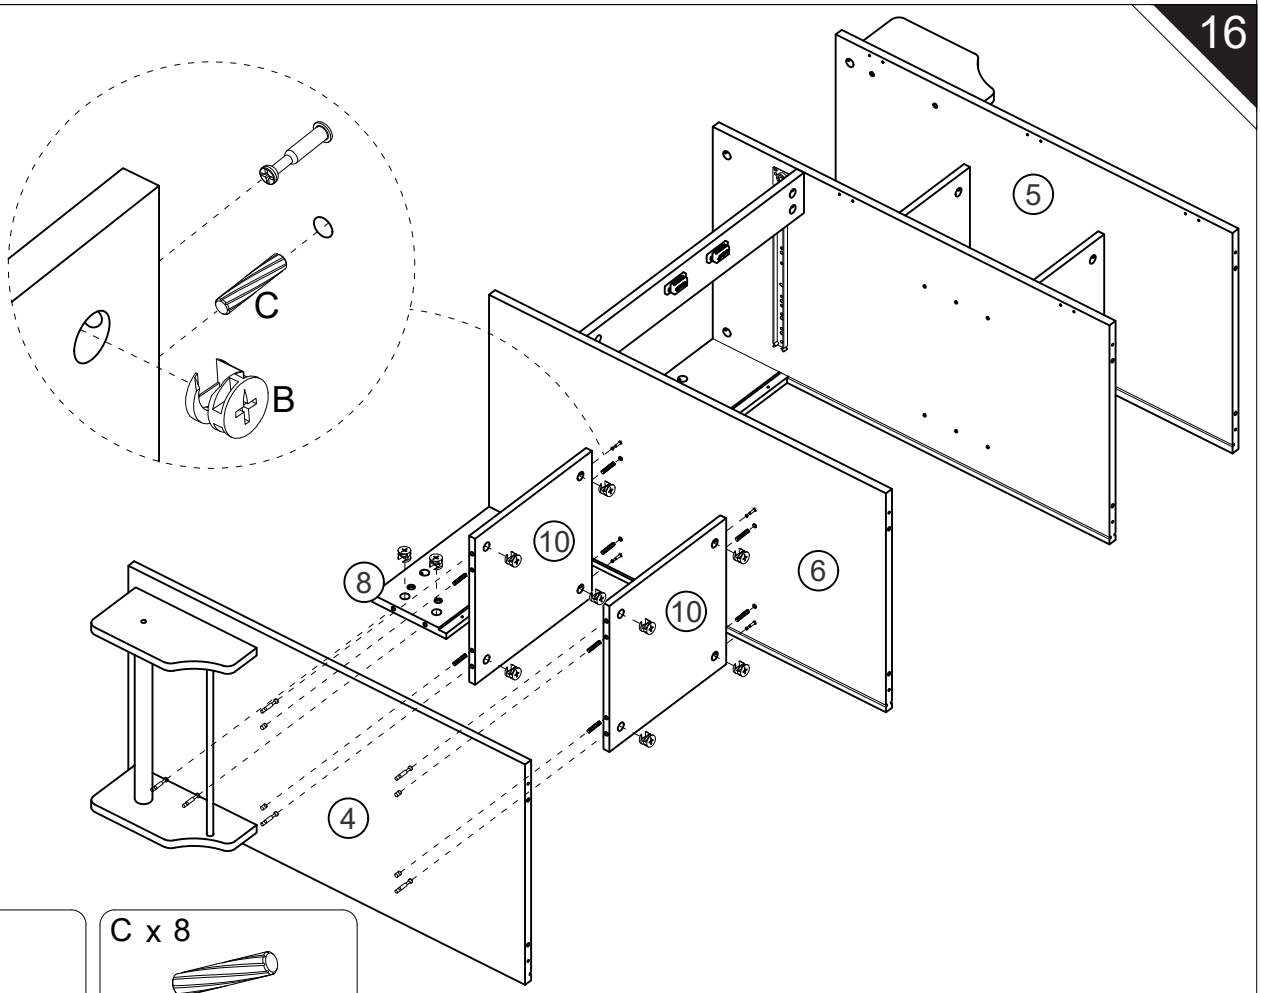

B x 10




Ø15x10mm

C x 8

Ø6x30mm

17

Note that the two back plates (18) are connected by component (32) in the middle.

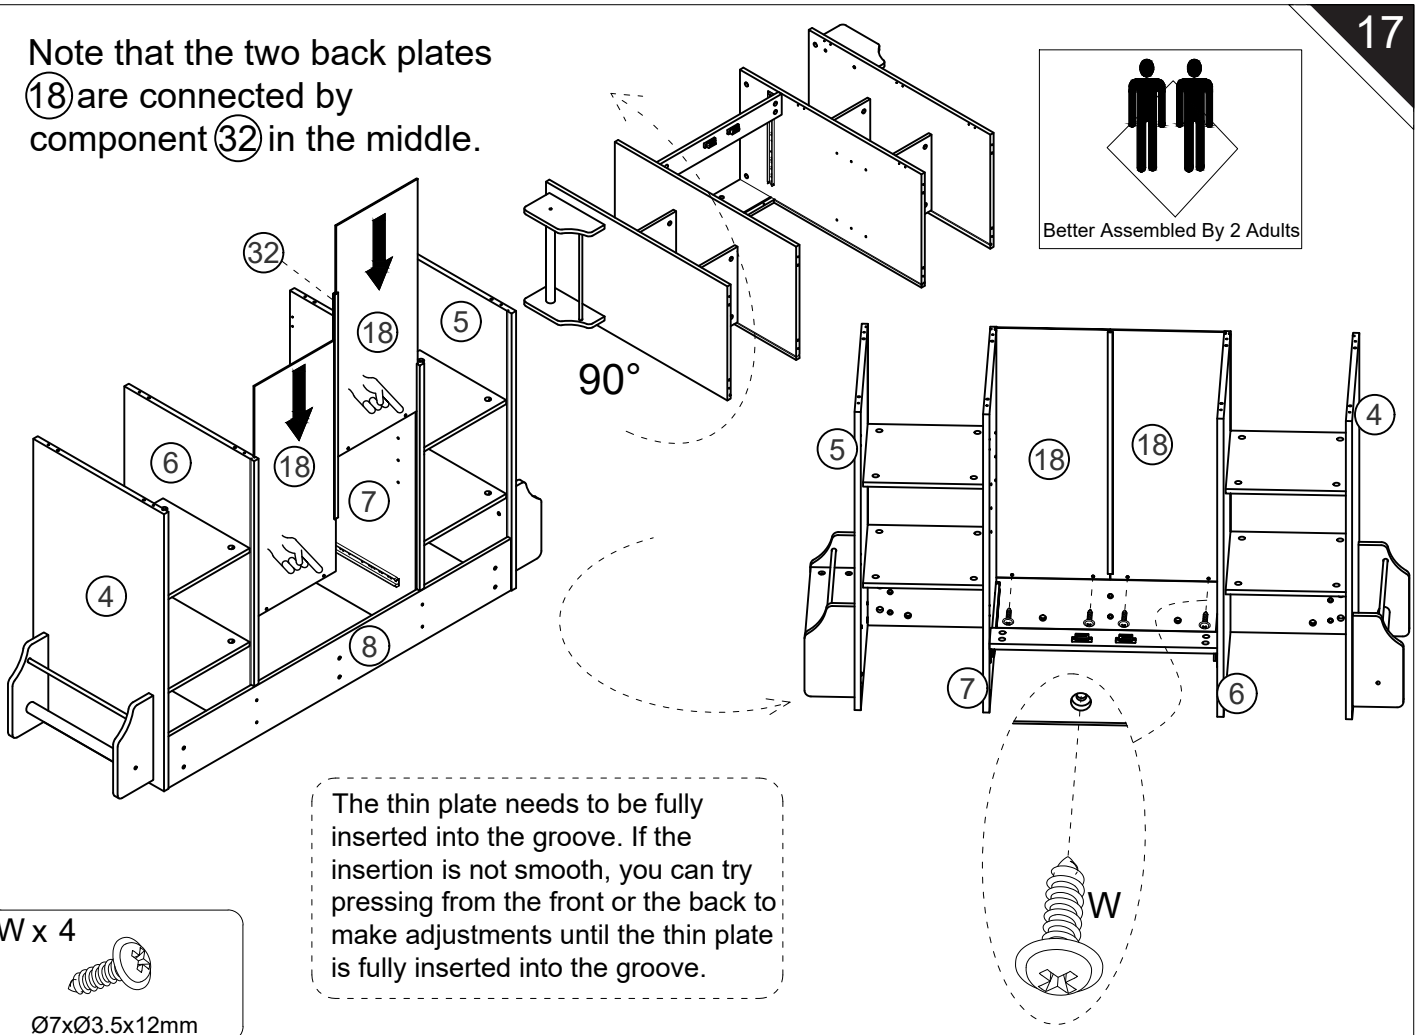

Better Assembled By 2 Adults


The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

W x 4


Ø7xØ3.5x12mm

18

The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

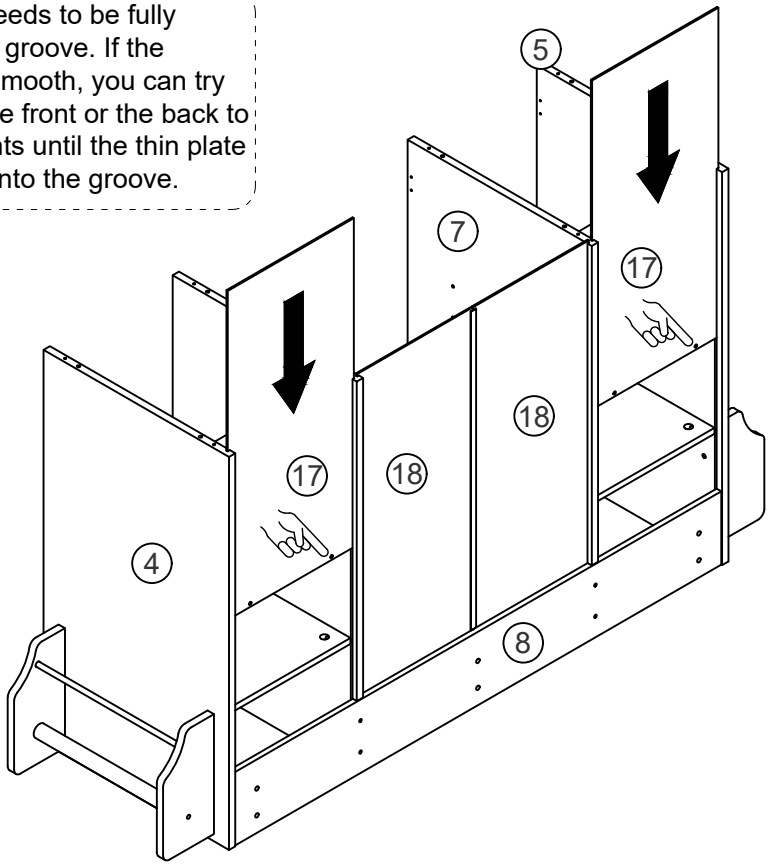

19

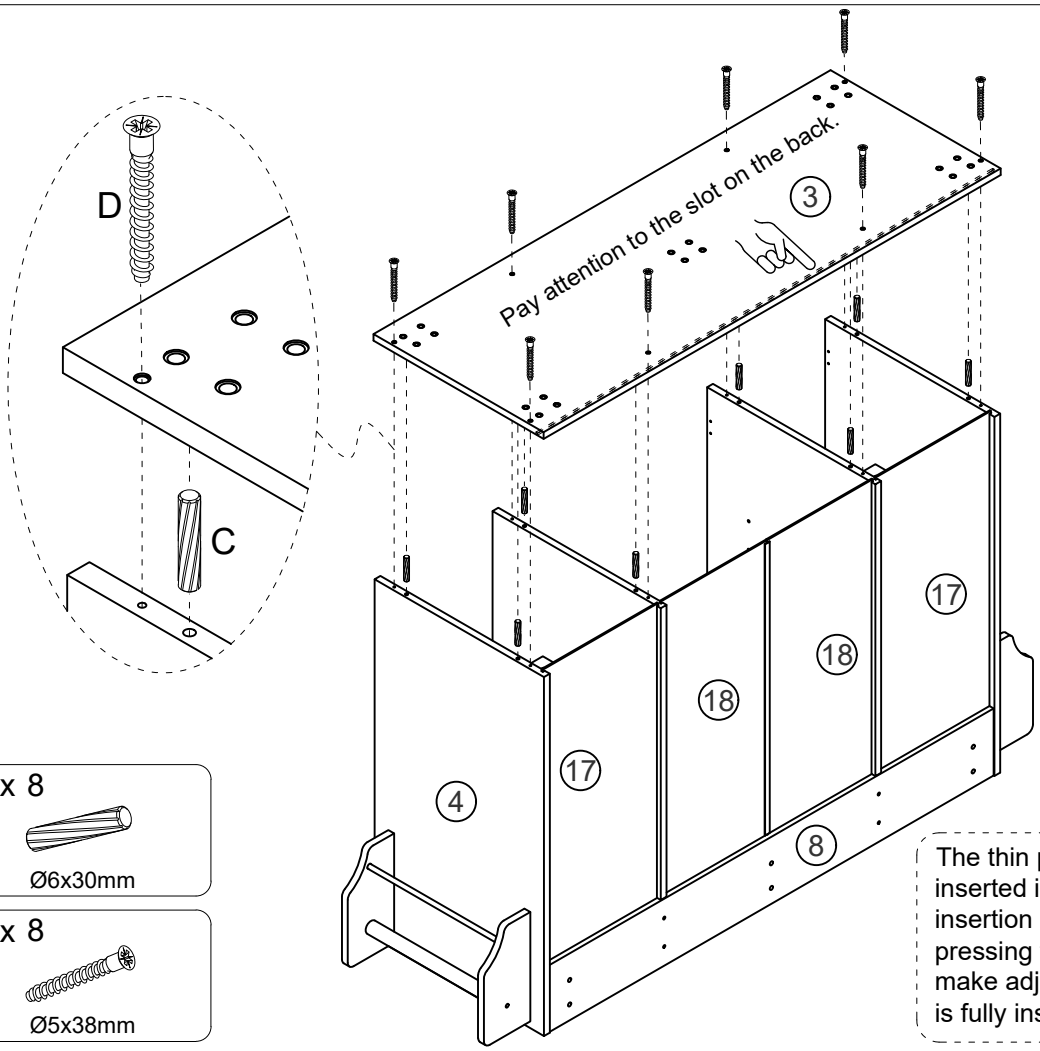

C x 8


Ø6x30mm

D x 8

Ø5x38mm

The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.


20

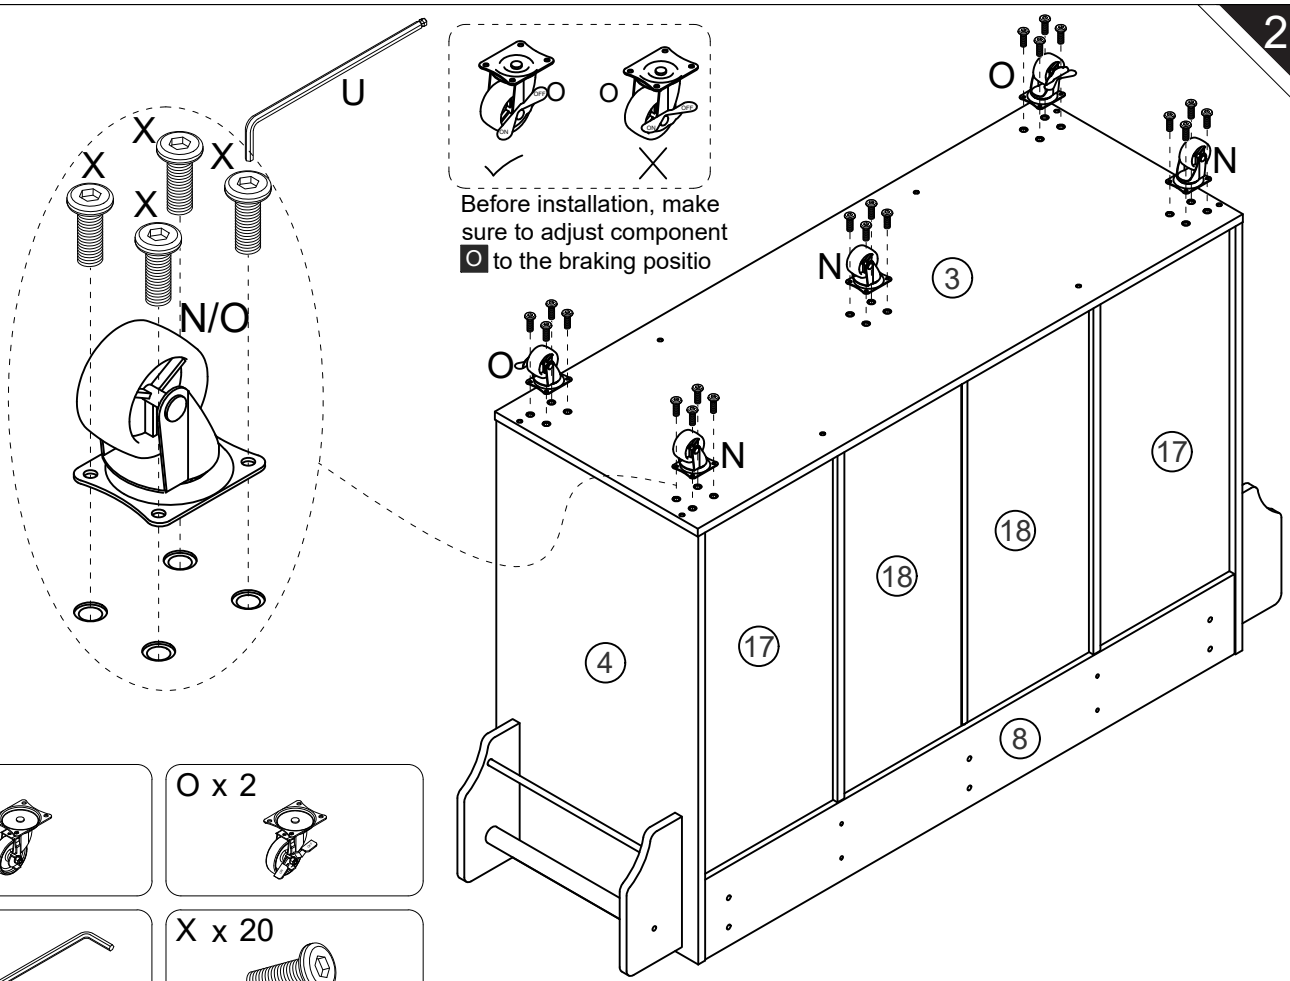

N x 3

O x 2

U x 1

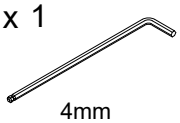



4mm


X x 20


M6x12mm

21

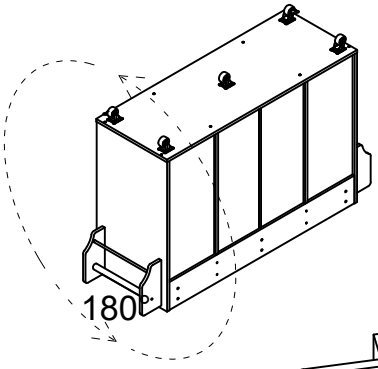

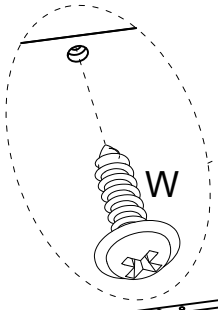

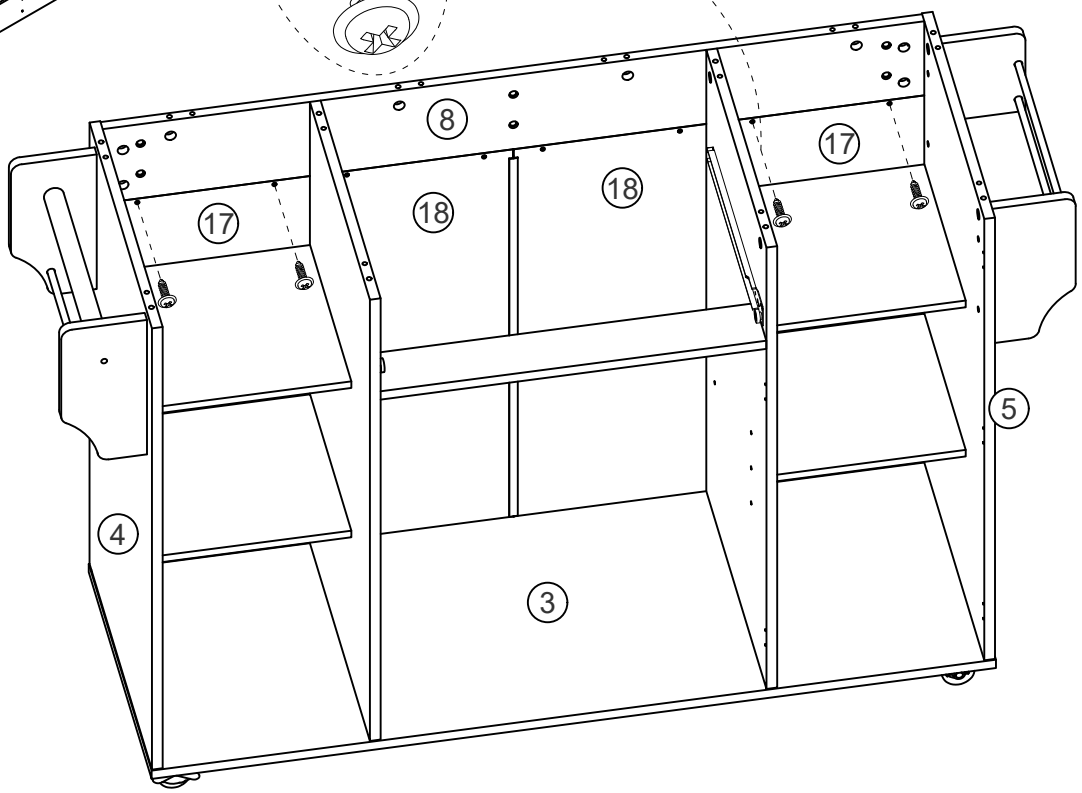

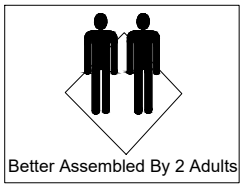



W x 4



Ø7xØ3.5x12mm

22

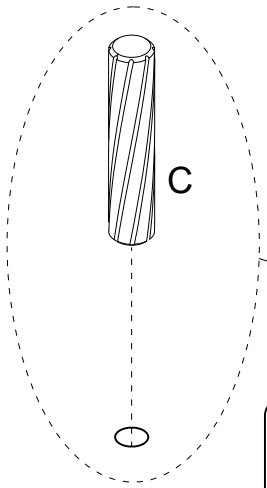

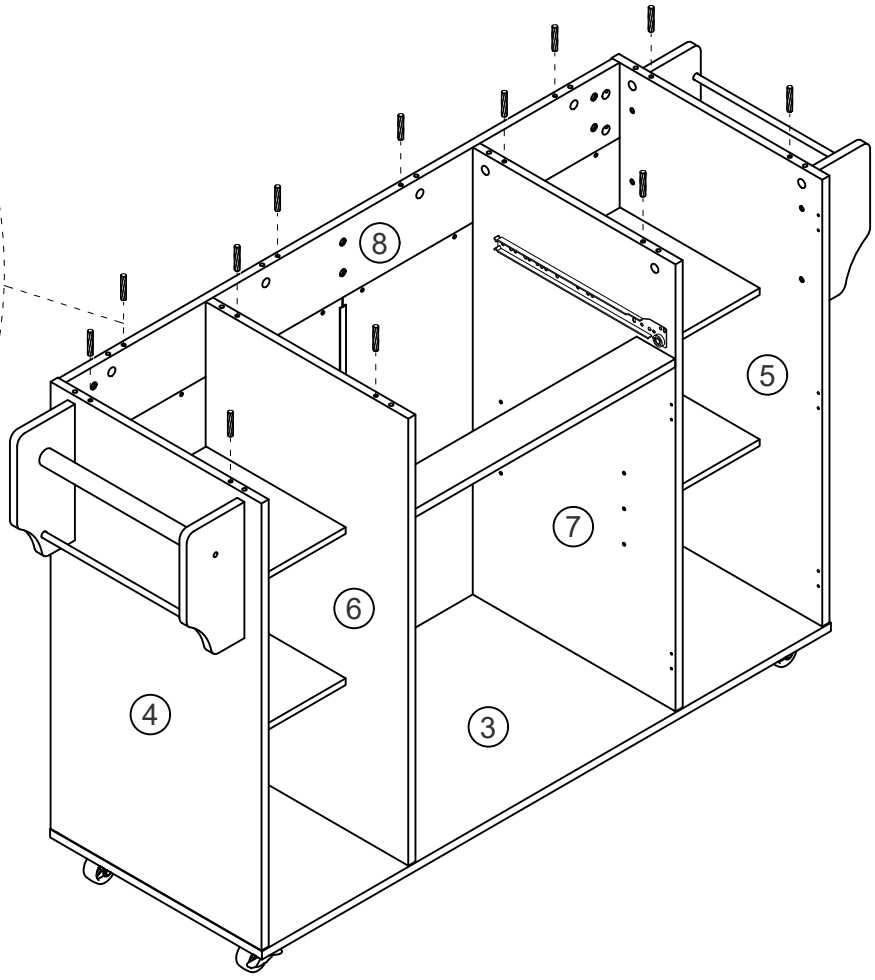


C x 12



Ø6x30mm

23

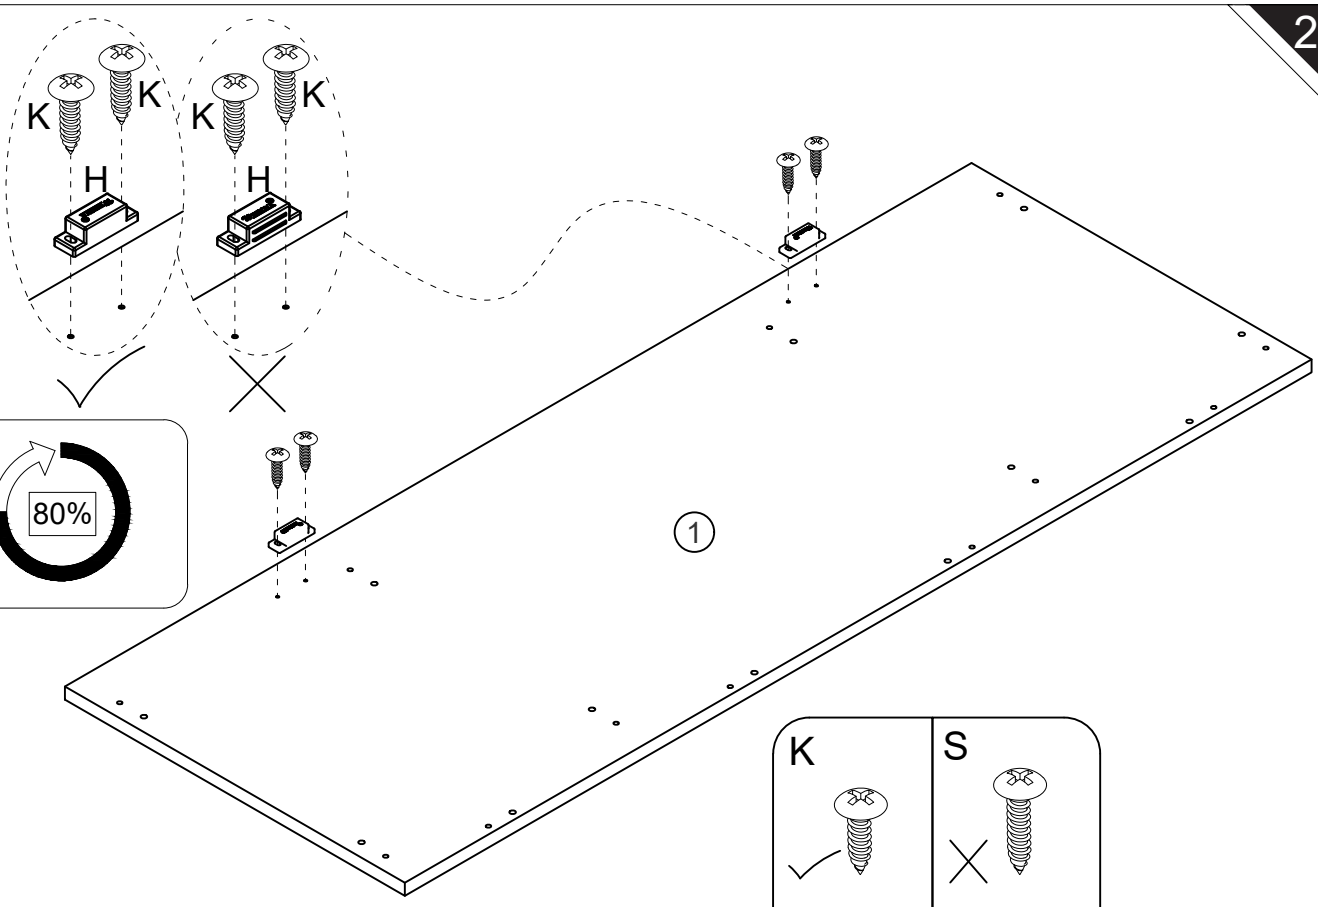

H x 2




K x 4




Ø6xØ3x14mm

24

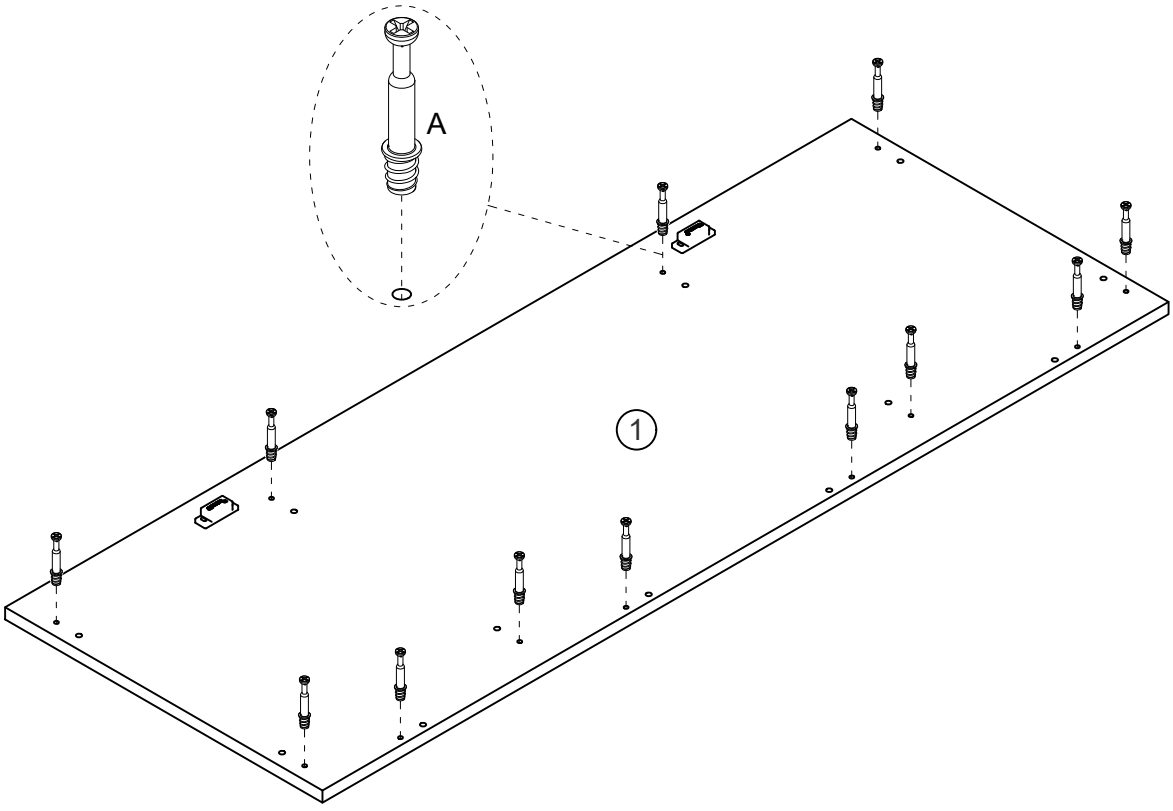


A x 12





Ø6x35mm

25

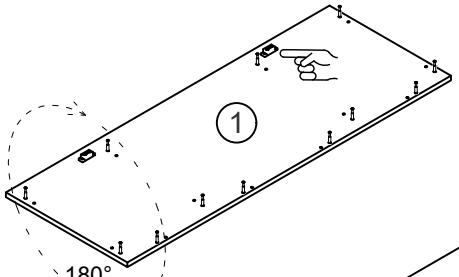

180°

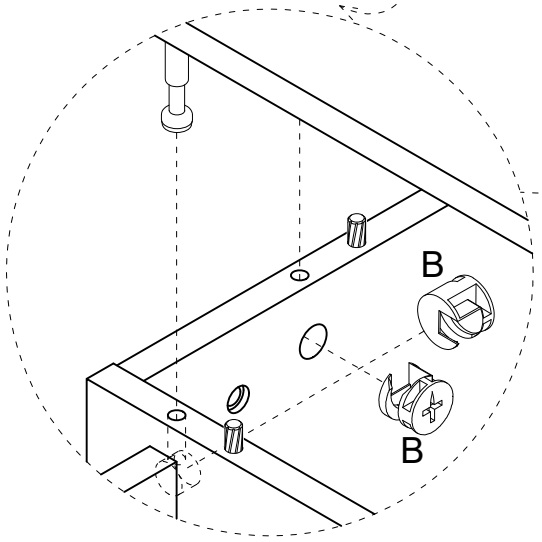

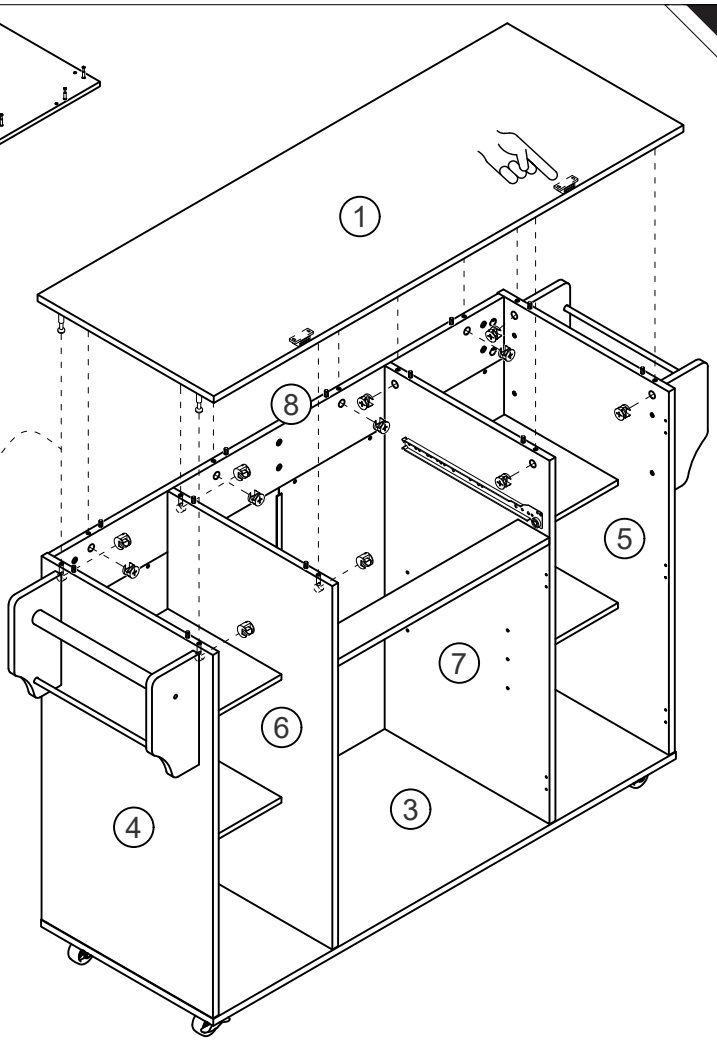



B x 12




Ø15x10mm


26

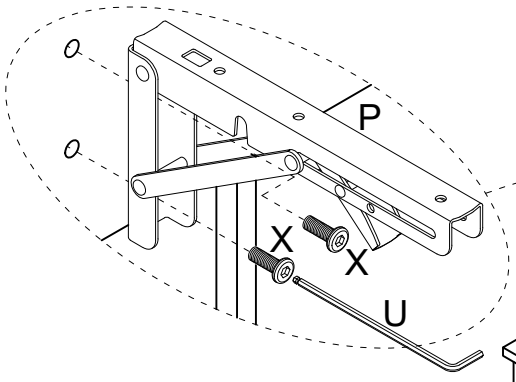

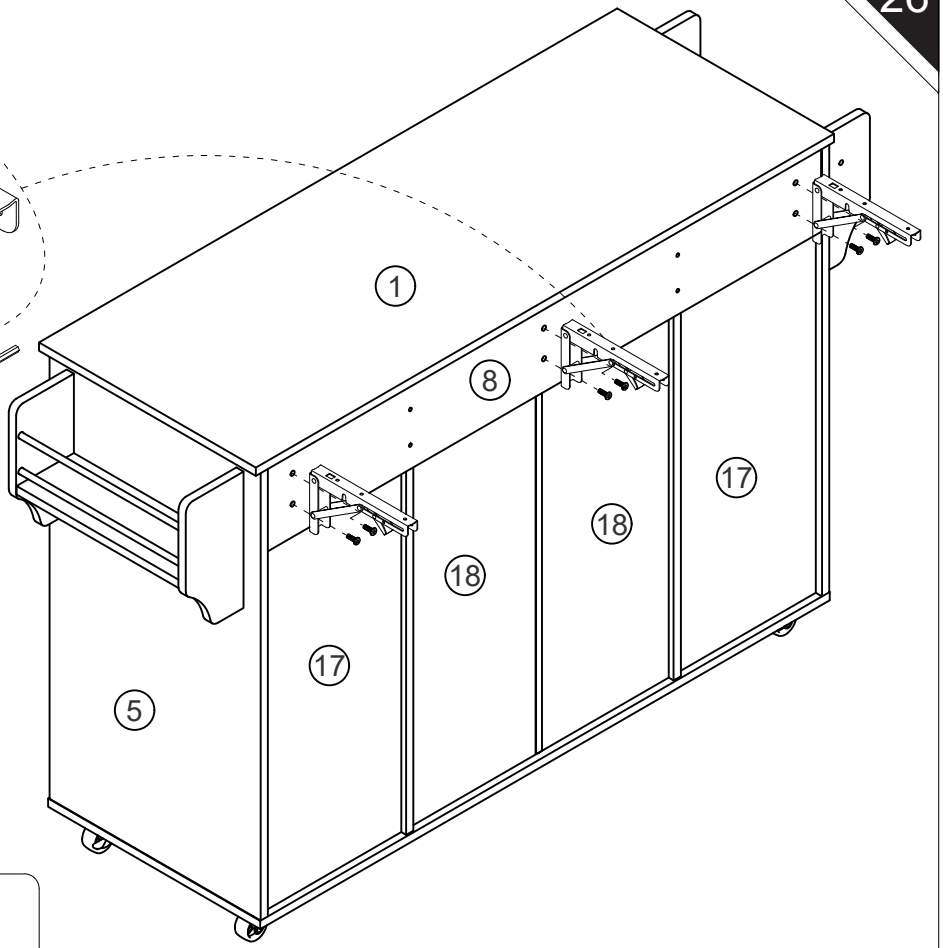

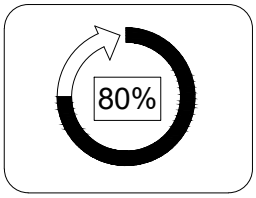

U x 1

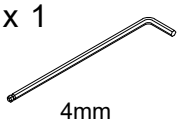


4mm

P x 3




X x 6





M6x12mm

27

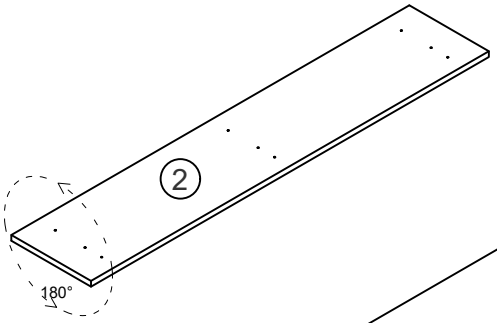


As shown in the figure, first align the direction of component ② correctly, then flip it over to facilitate installation.

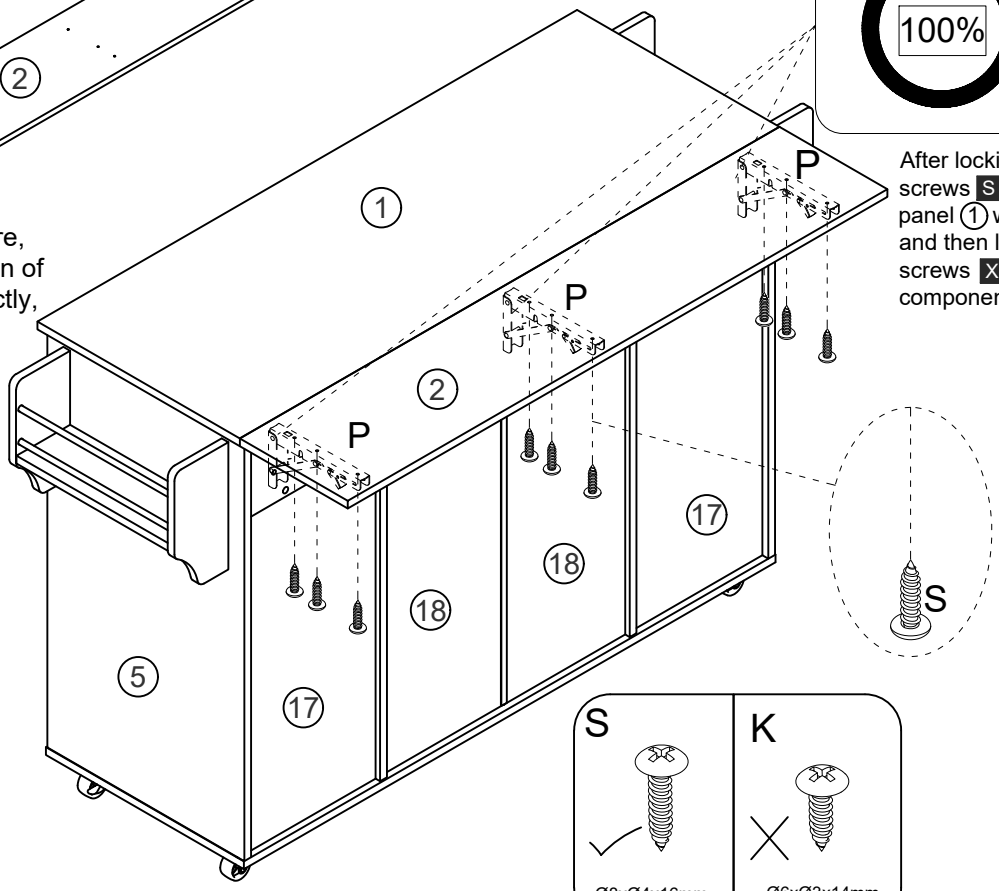

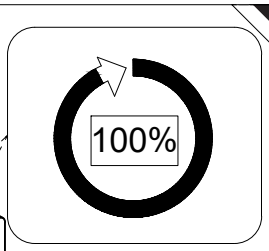


After locking all the screws S, align the panel ① with panel ②, and then lock the screws X on component P to 100%.

S x 9



Ø8xØ4x16mm

U x 1

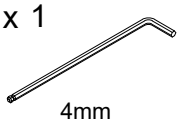

4mm


S

Ø8xØ4x16mm


K

Ø6xØ3x14mm

28

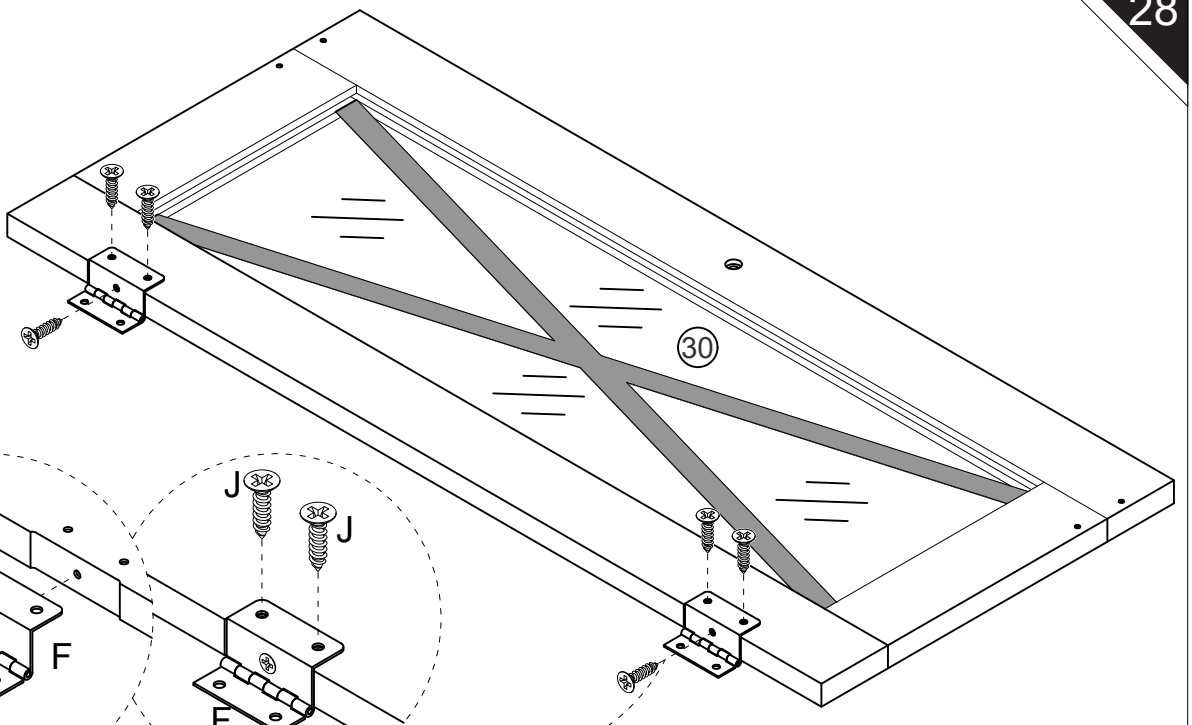

F x 4



J x 12




Ø6xØ3x12mm

J



Ø6xØ3x12mm


T

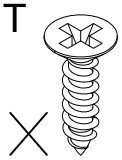

Ø6xØ3x16mm

x2

29

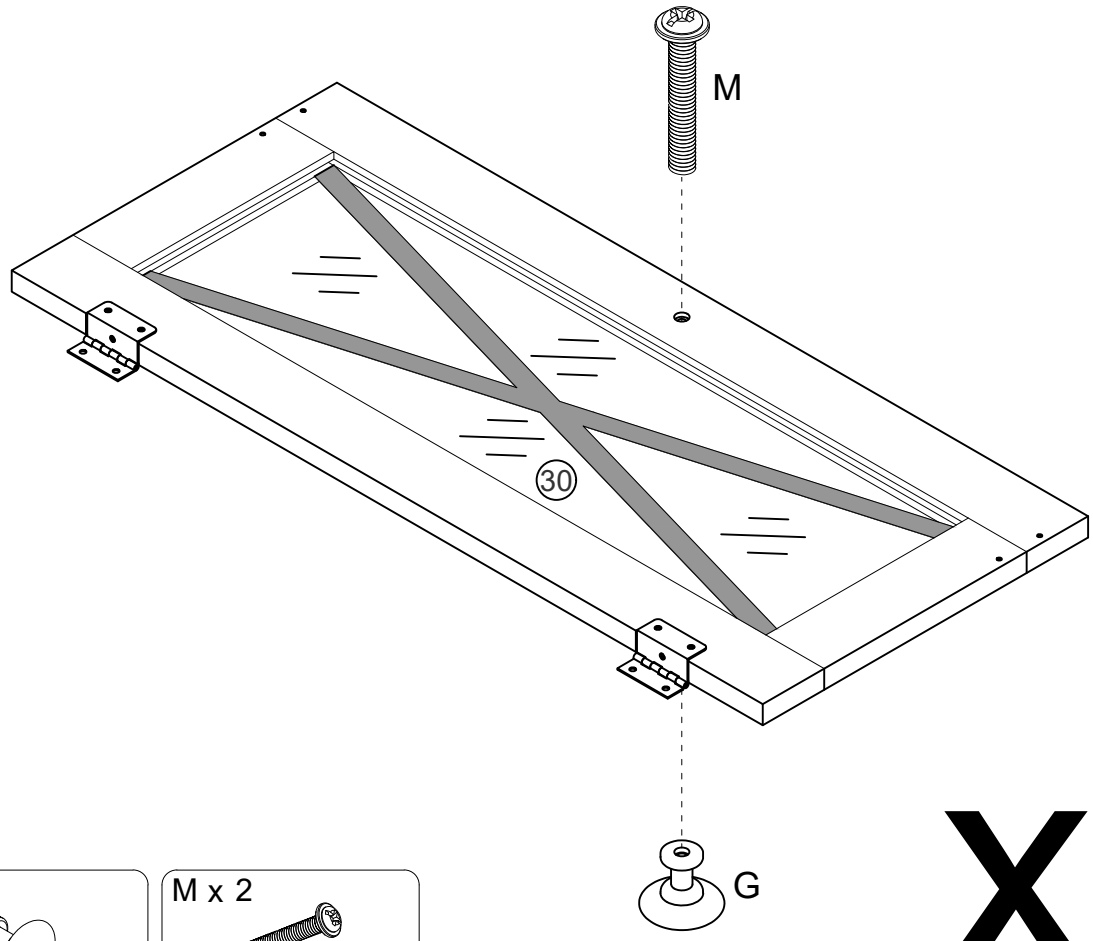

x2


G x 2




M x 2

M4x14mm

30

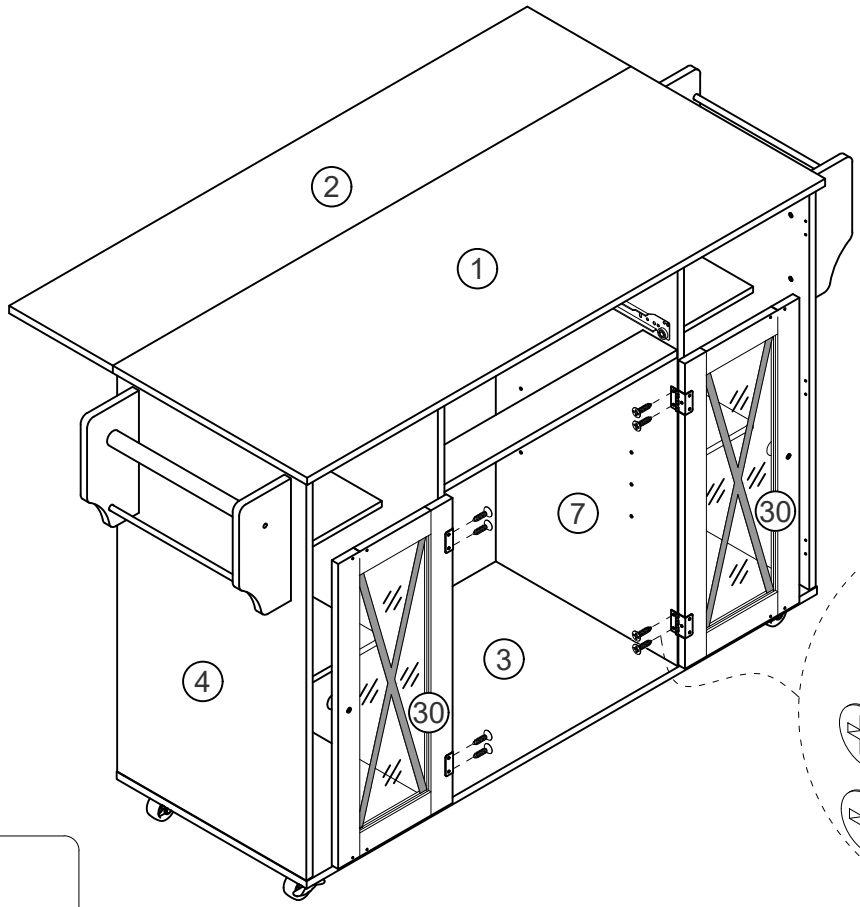


J




Ø6xØ3x12mm

T

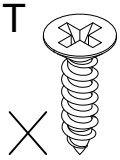

Ø6xØ3x16mm

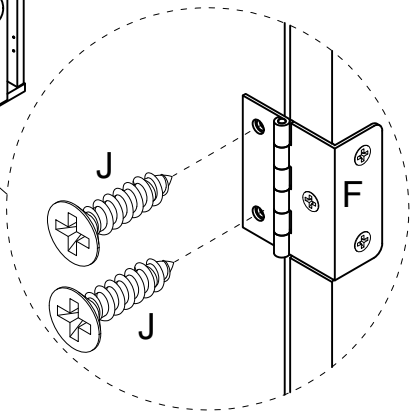


J x 8





Ø6xØ3x12mm

31


Adjust the door to the appropriate position and then tighten the screws here to 100%.

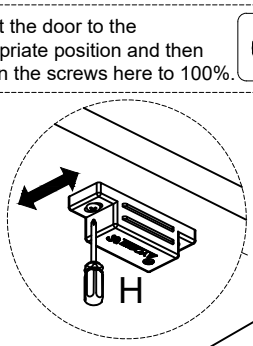

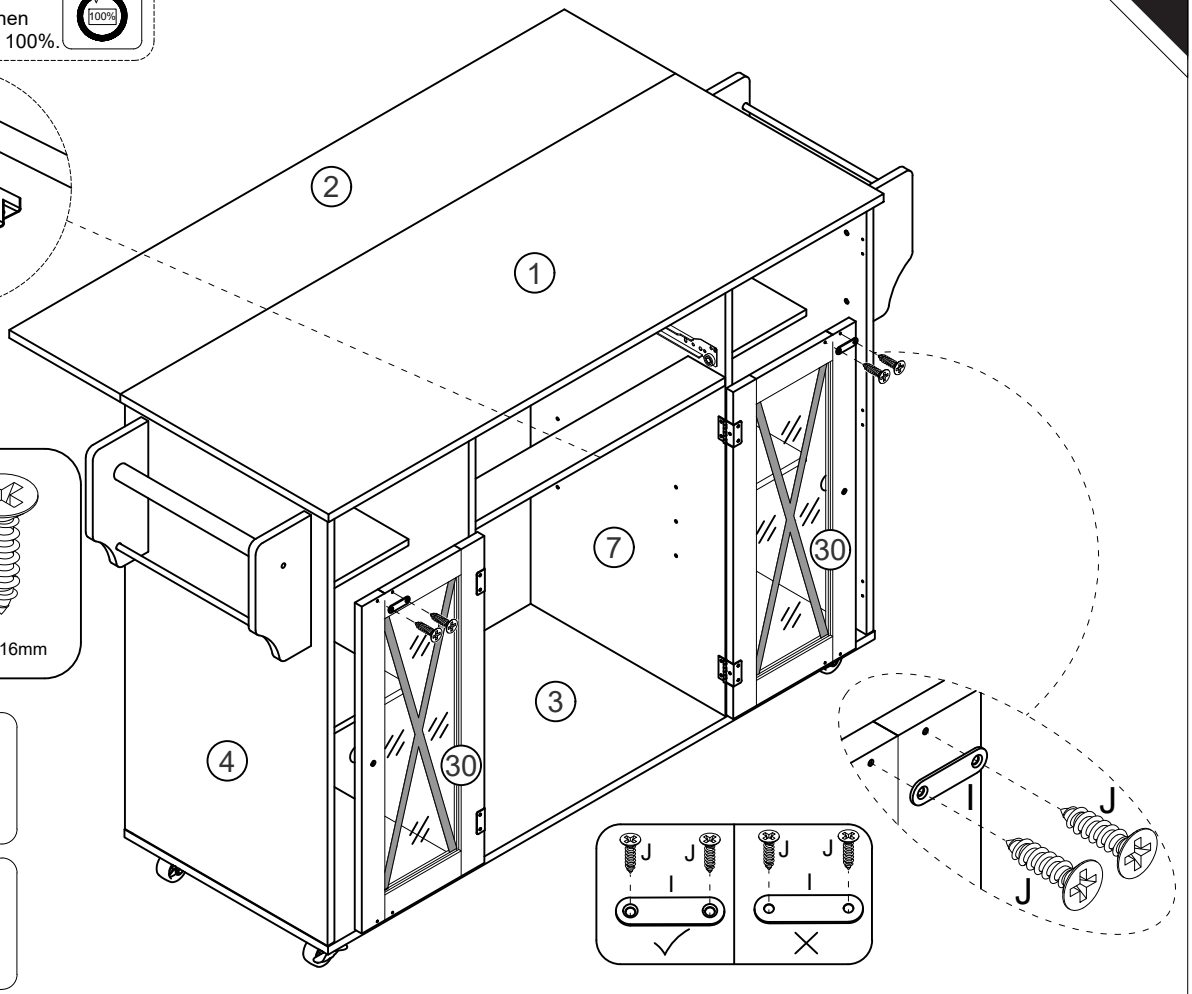

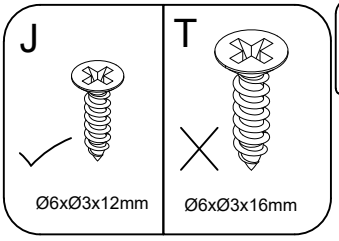

I x 2





J x 4



Ø6xØ3x12mm

32

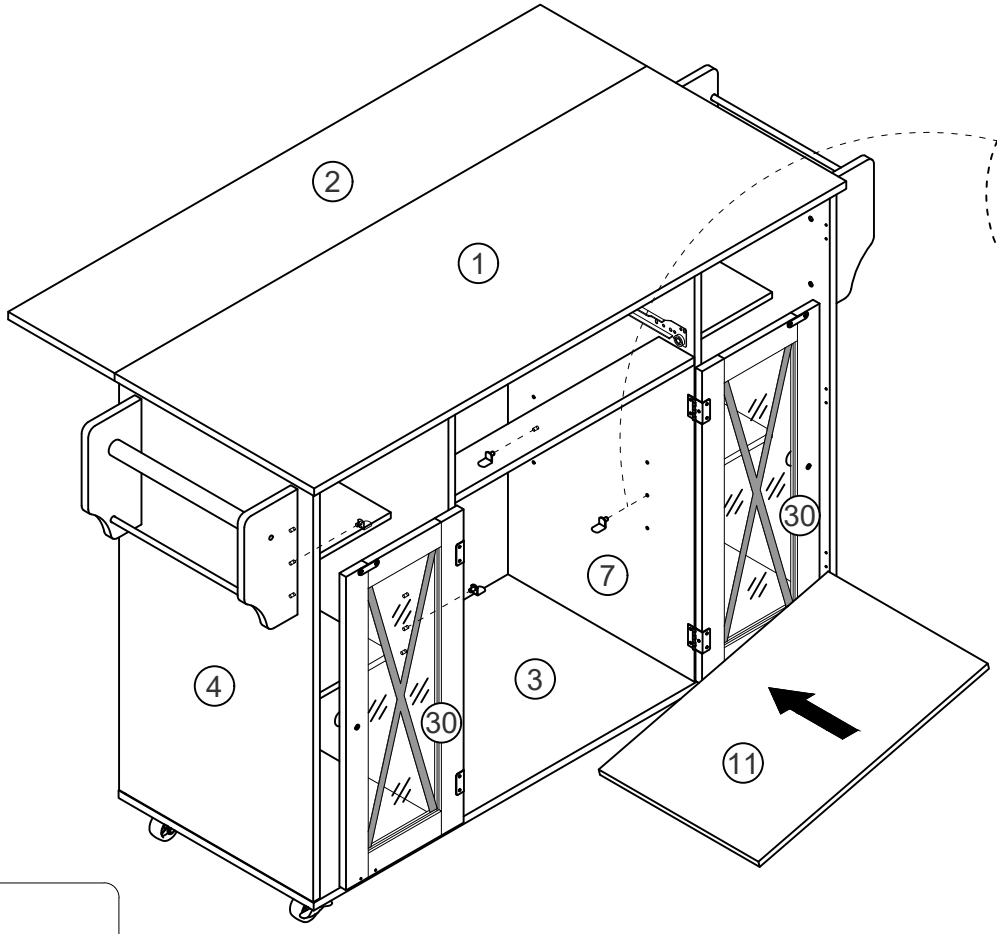


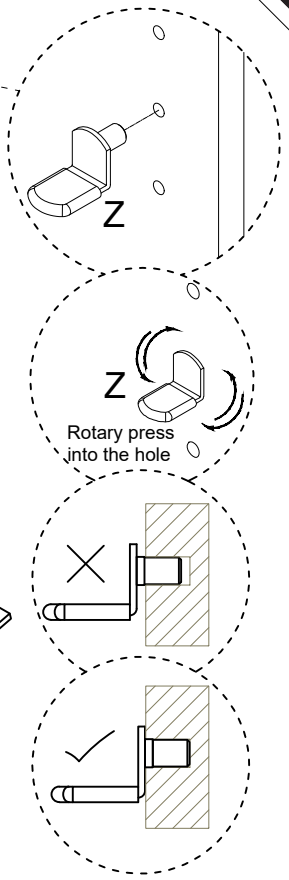

Z x 4




33

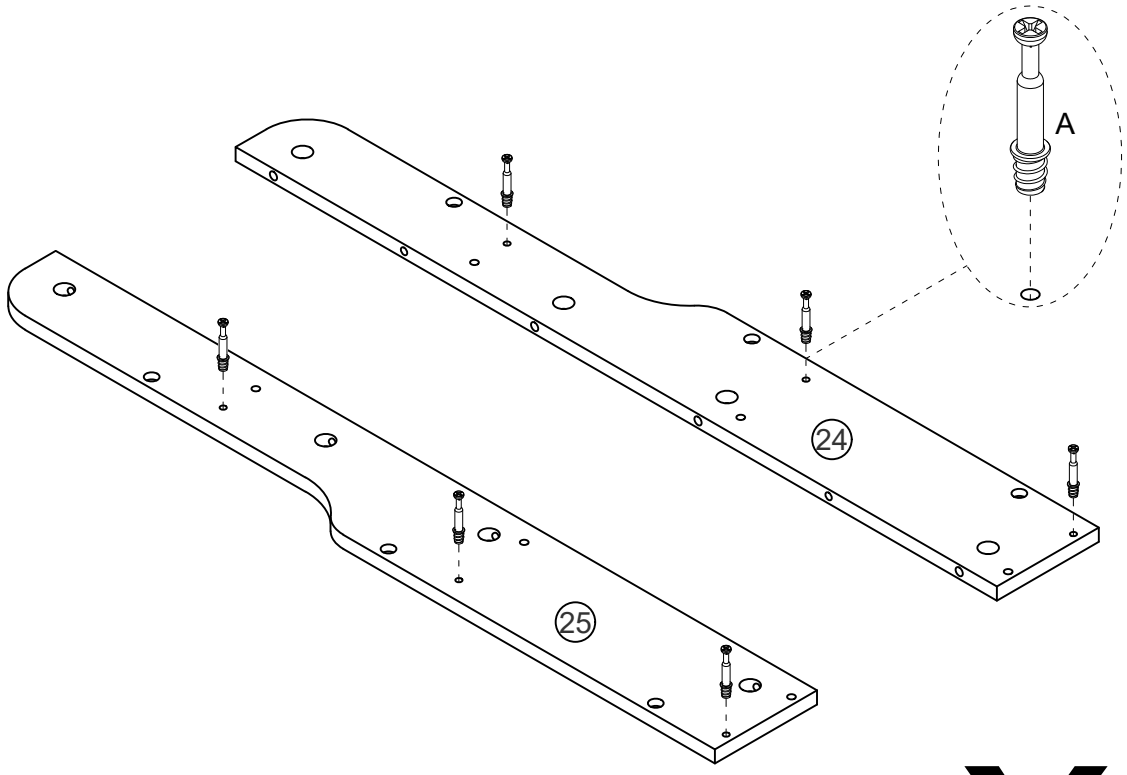


x2

A x 12



Ø6x35mm

34

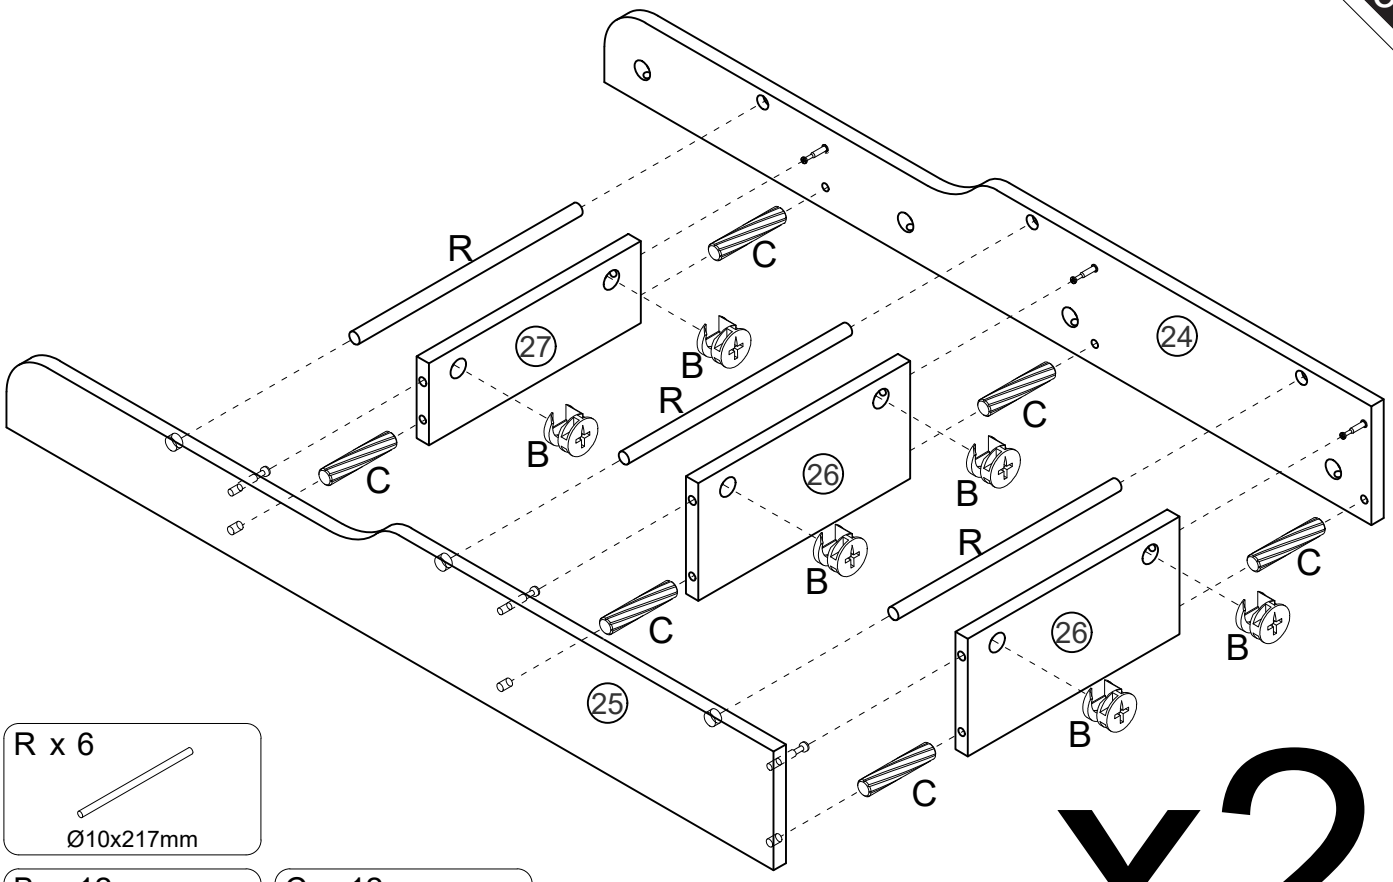

x2

R x 6

Ø10x217mm

B x 12




Ø15x10mm

C x 12




Ø6x30mm

35

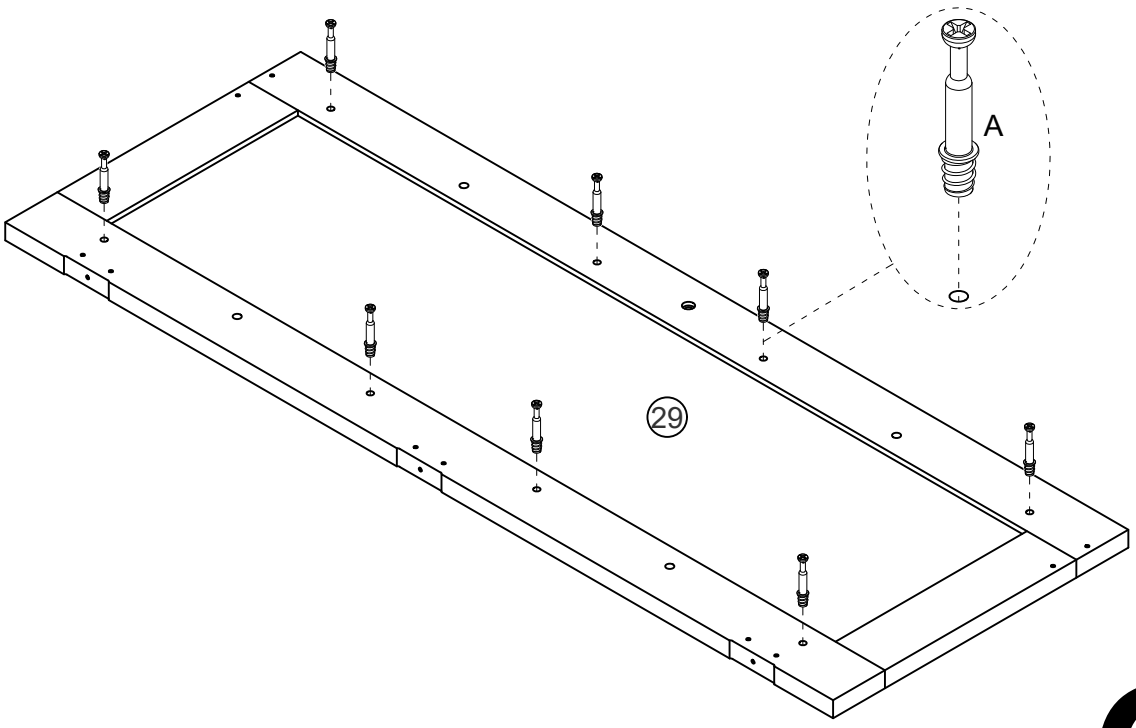


x2

A x 16




Ø6x35mm

36

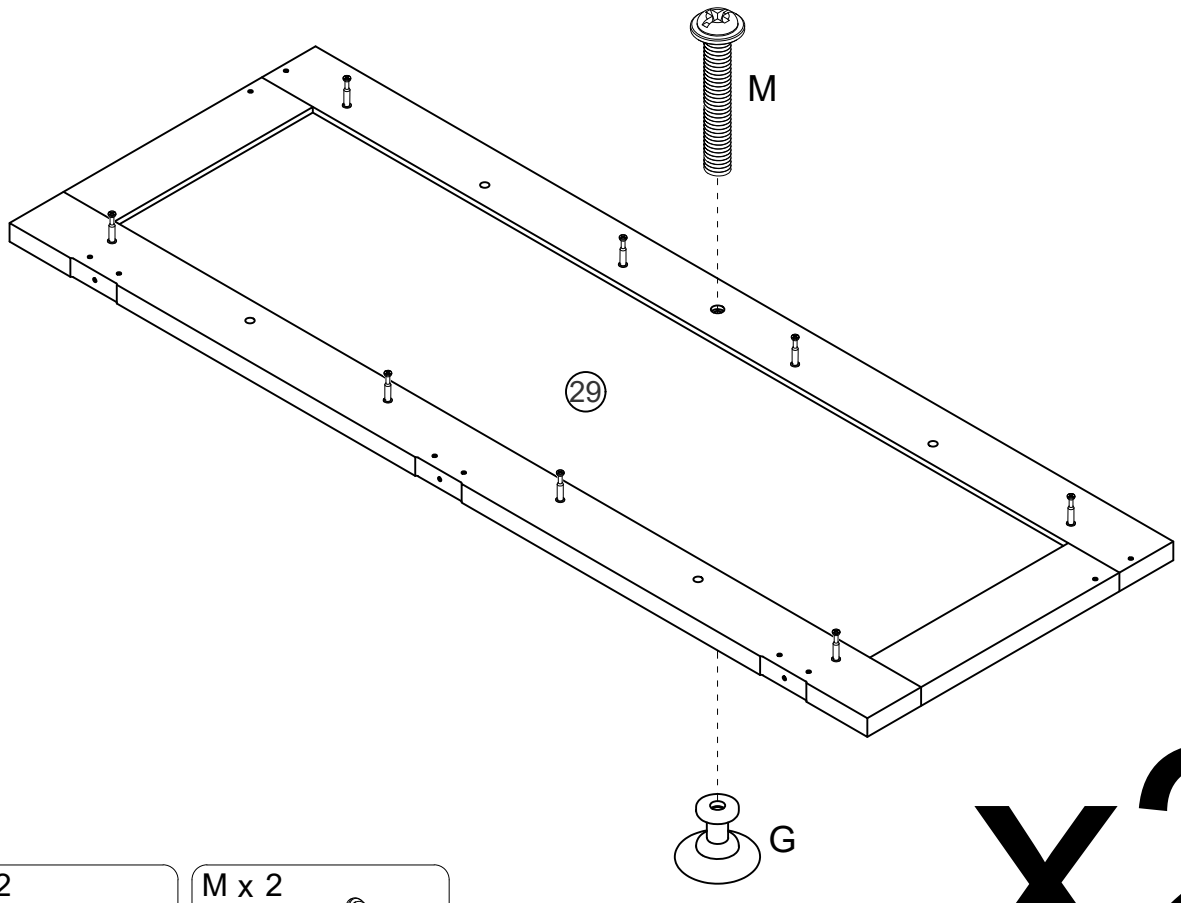


x2


G x 2



M x 2



M4x14mm

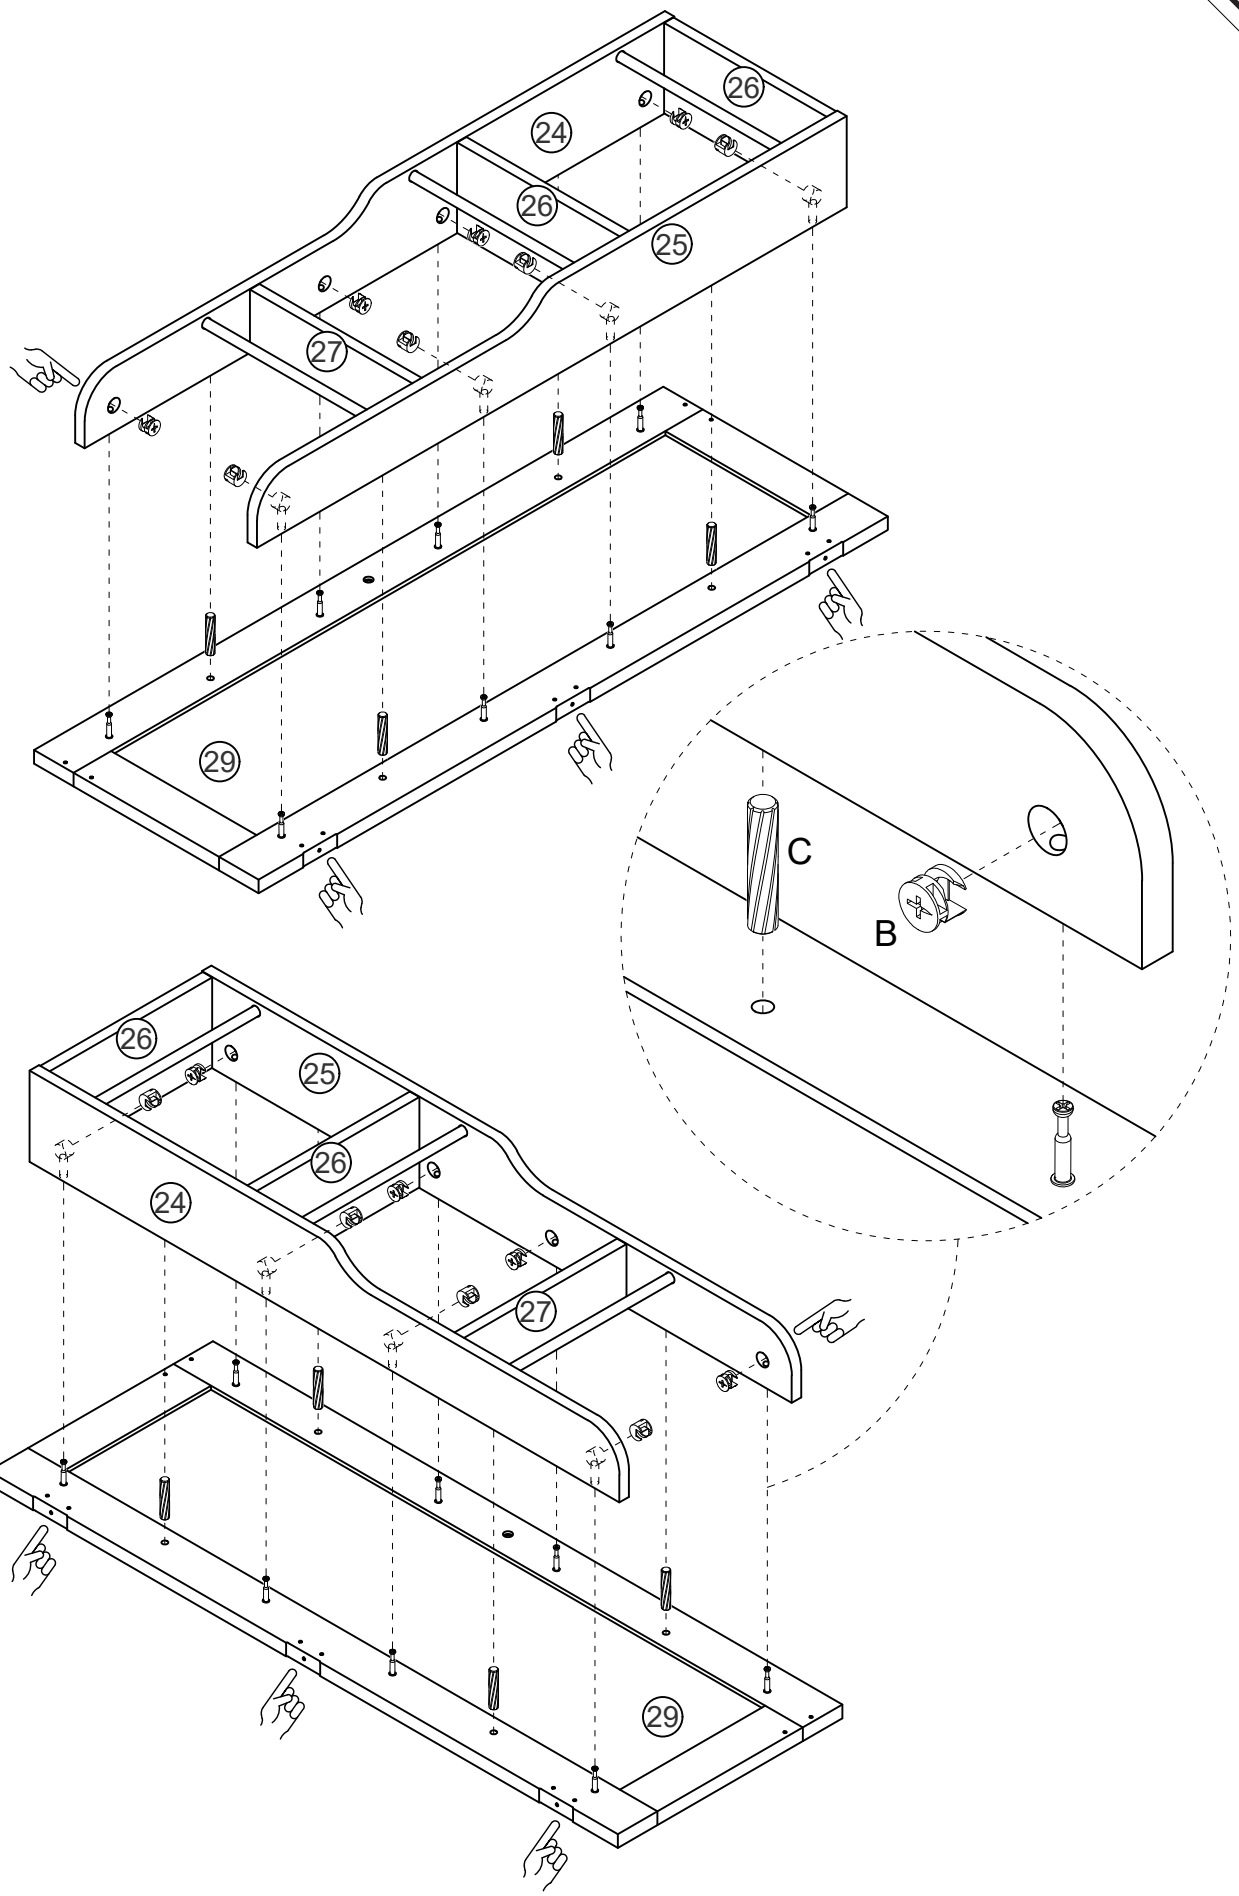

B x 16




Ø15x10mm


C x 8




Ø6x30mm

Note: Install according to the pairing shown in the figure.

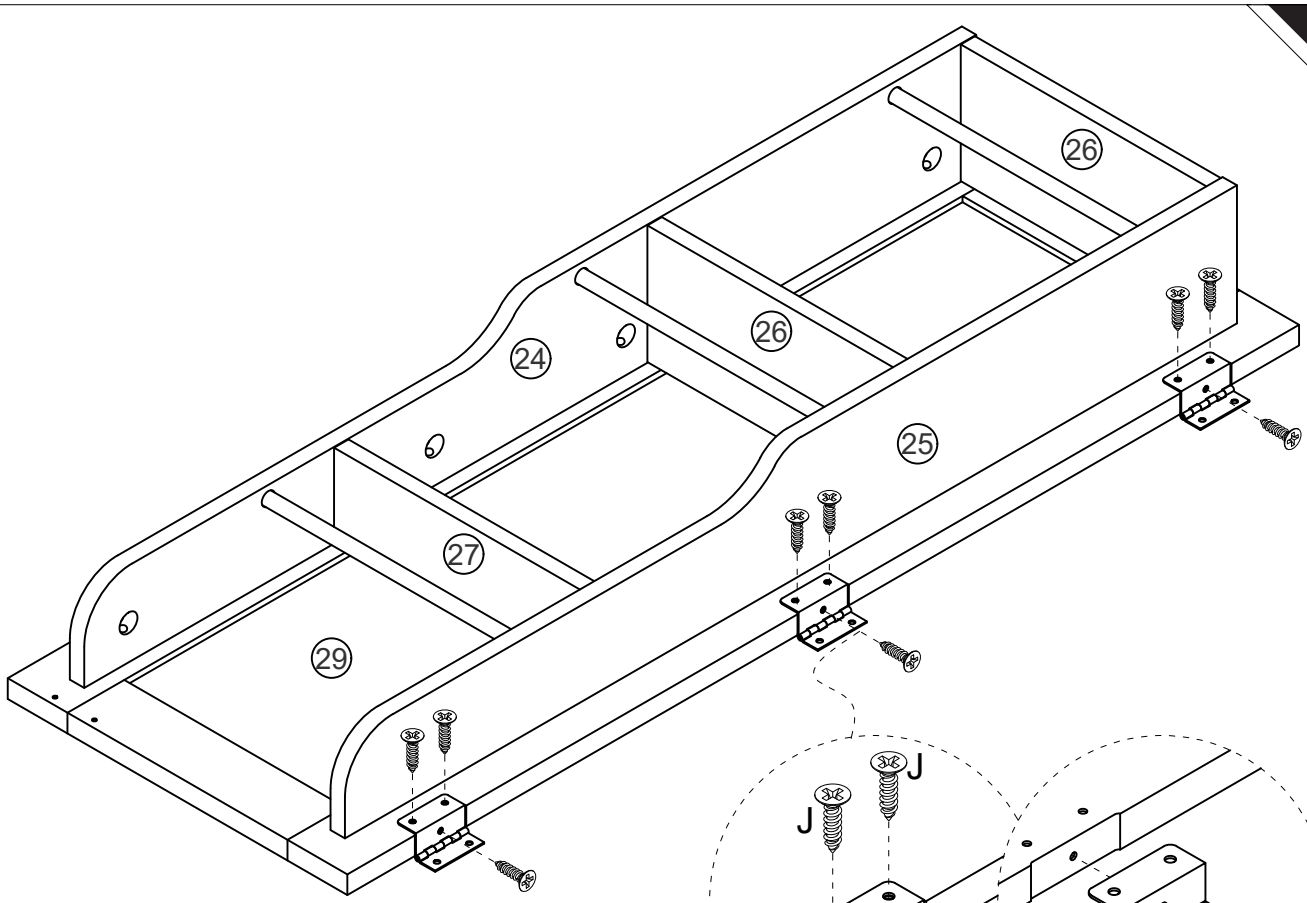

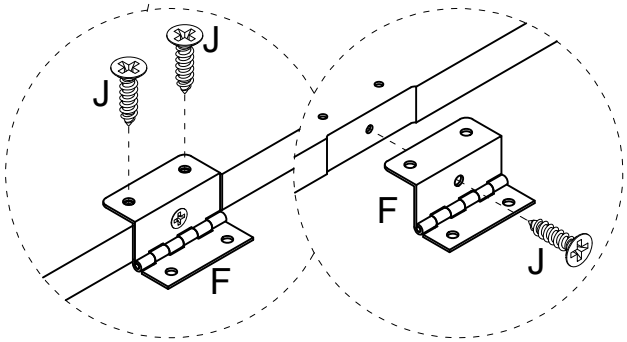

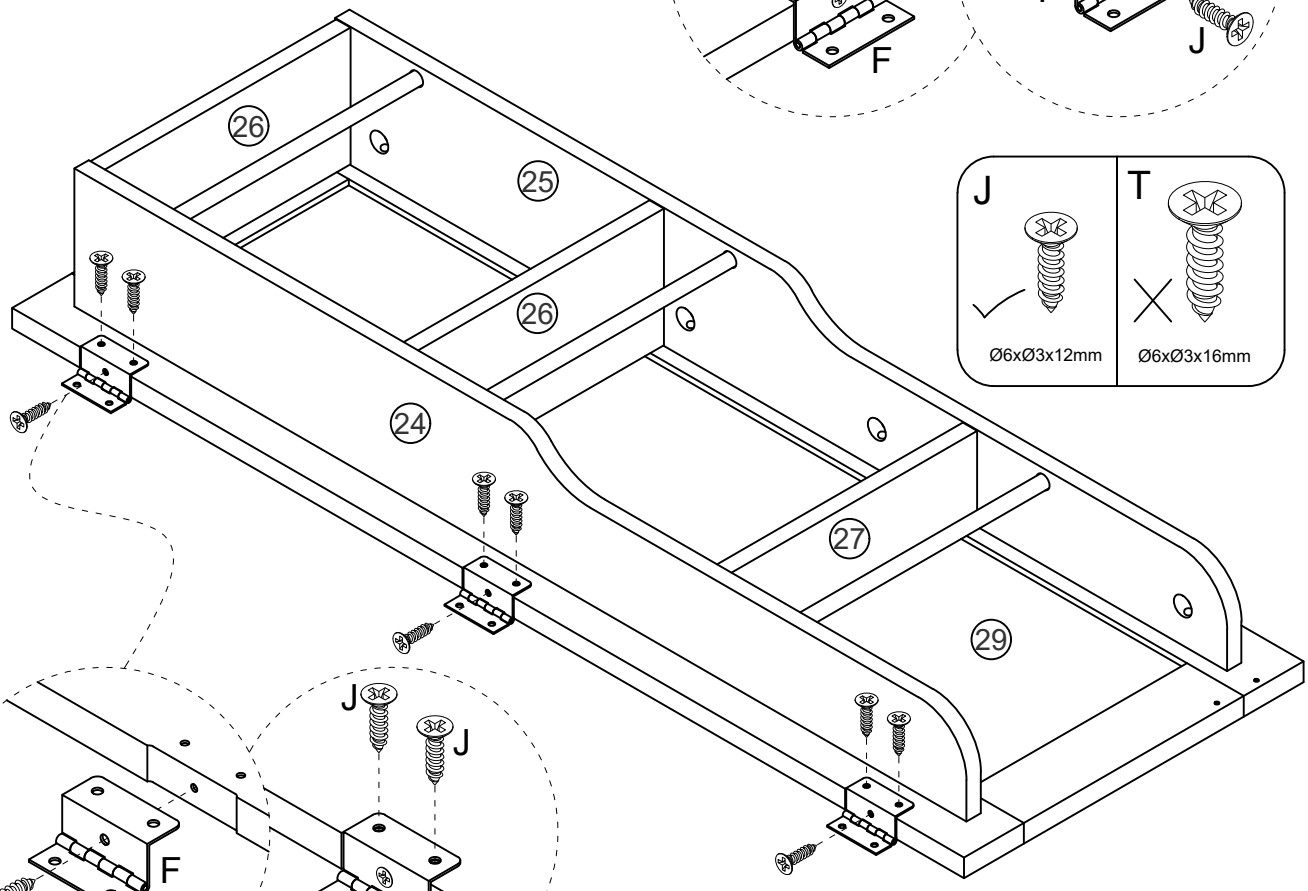

F x 6




J x 18



Ø6xØ3x12mm


39

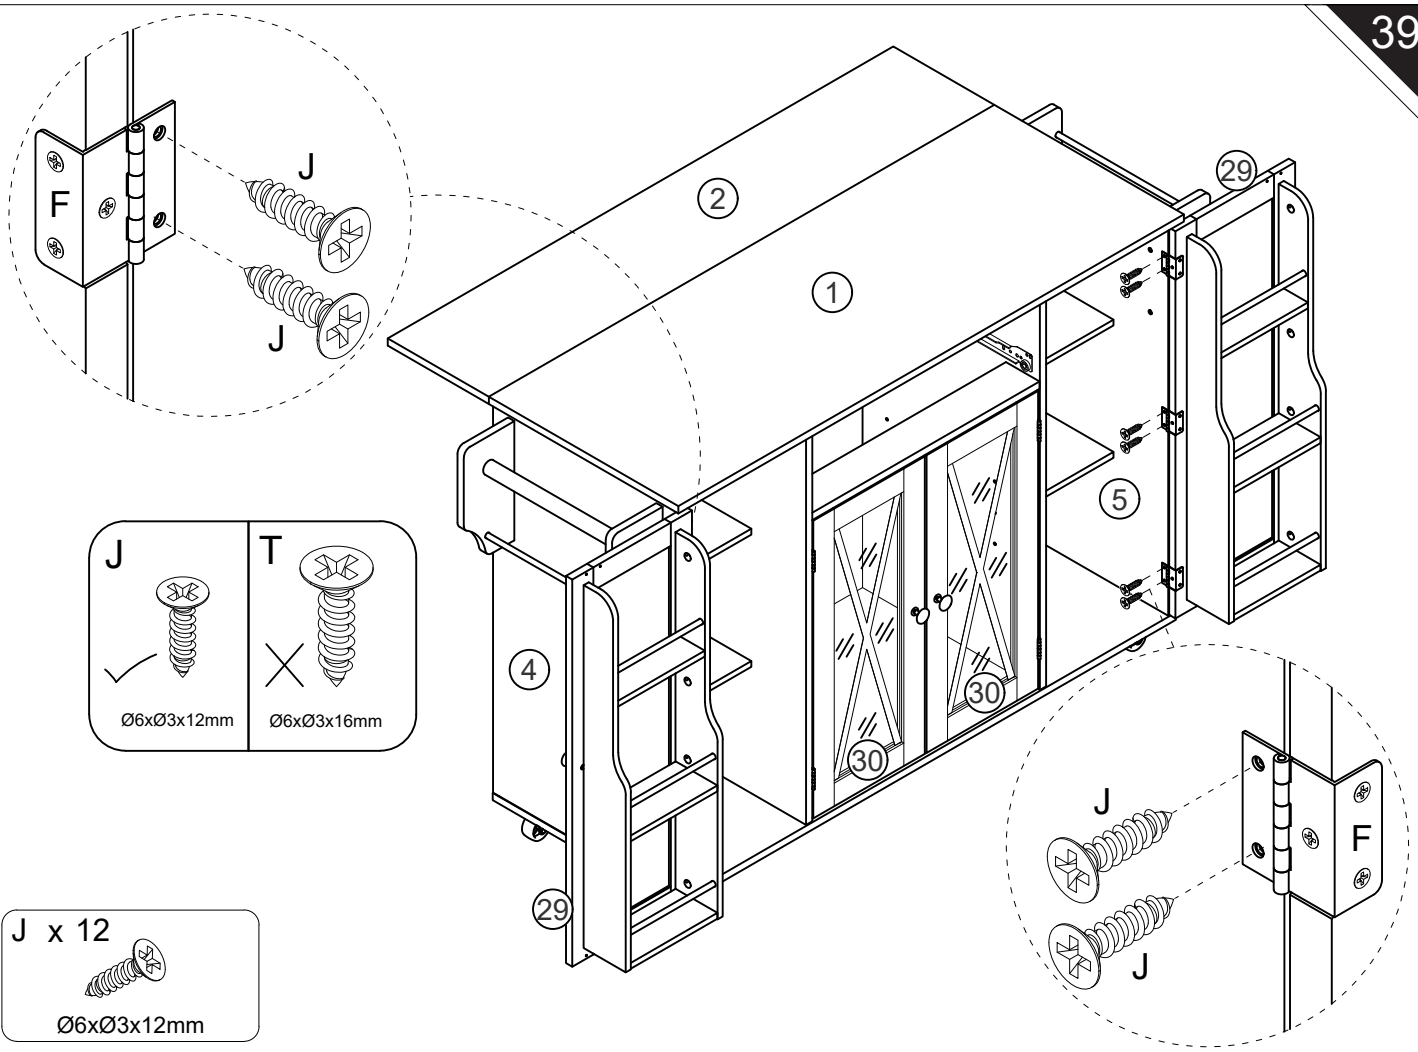

J x 12

Ø6xØ3x12mm

40

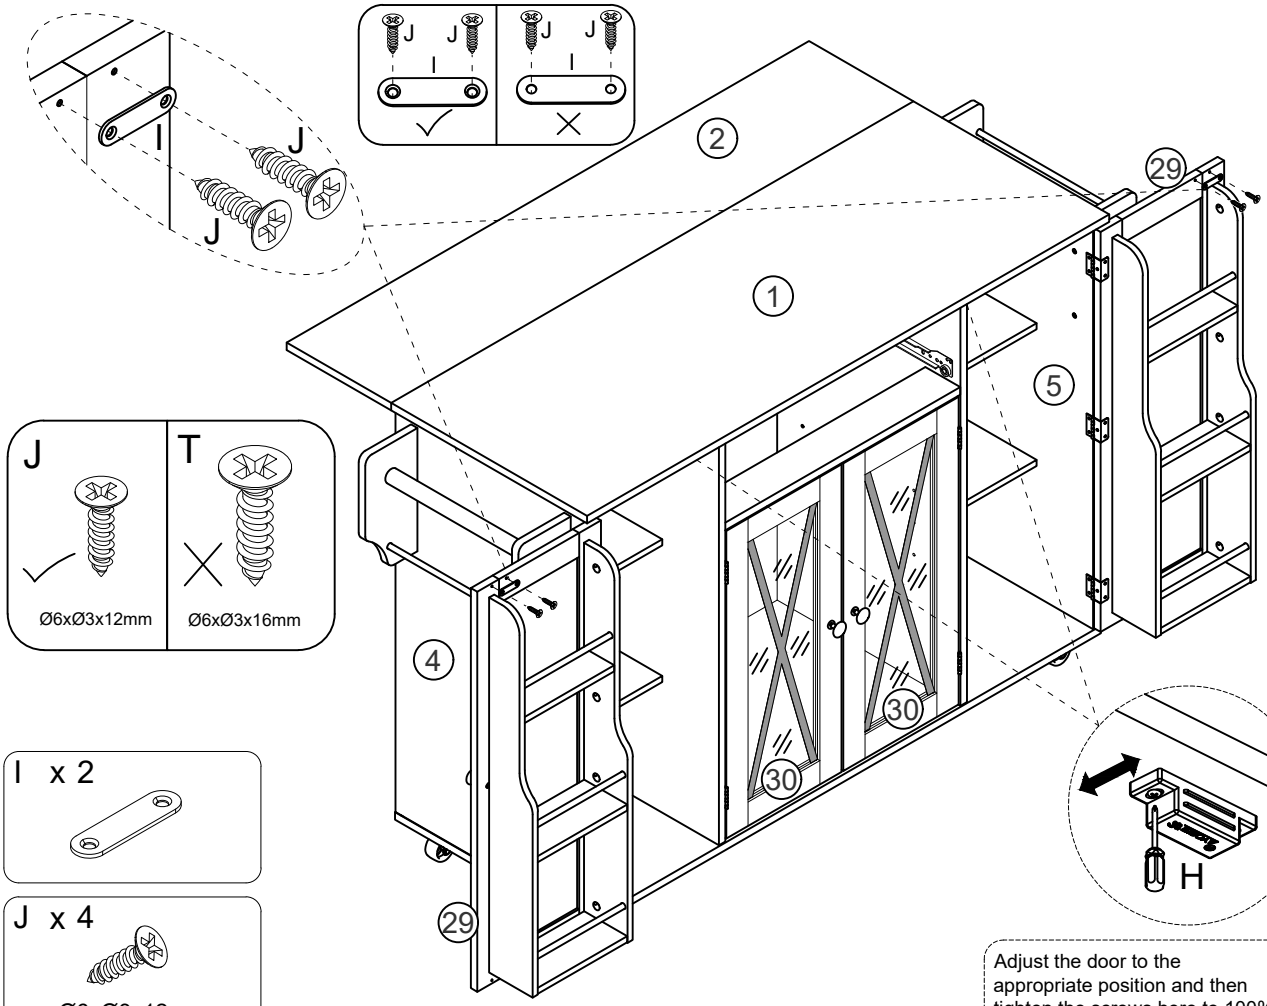


I x 2

J x 4

Ø6xØ3x12mm

Adjust the door to the appropriate position and then tighten the screws here to 100%.

41

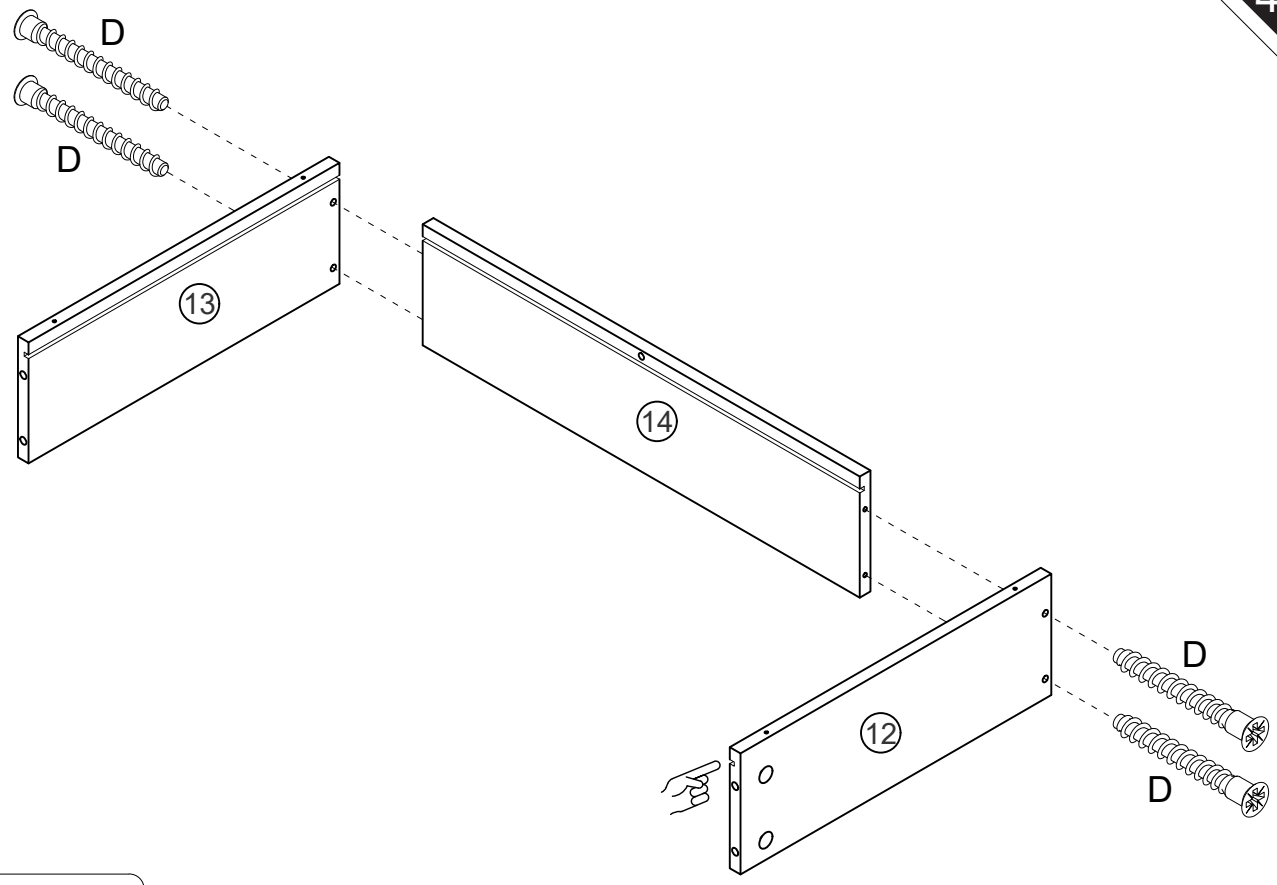


D x 4




Ø5x38mm

42

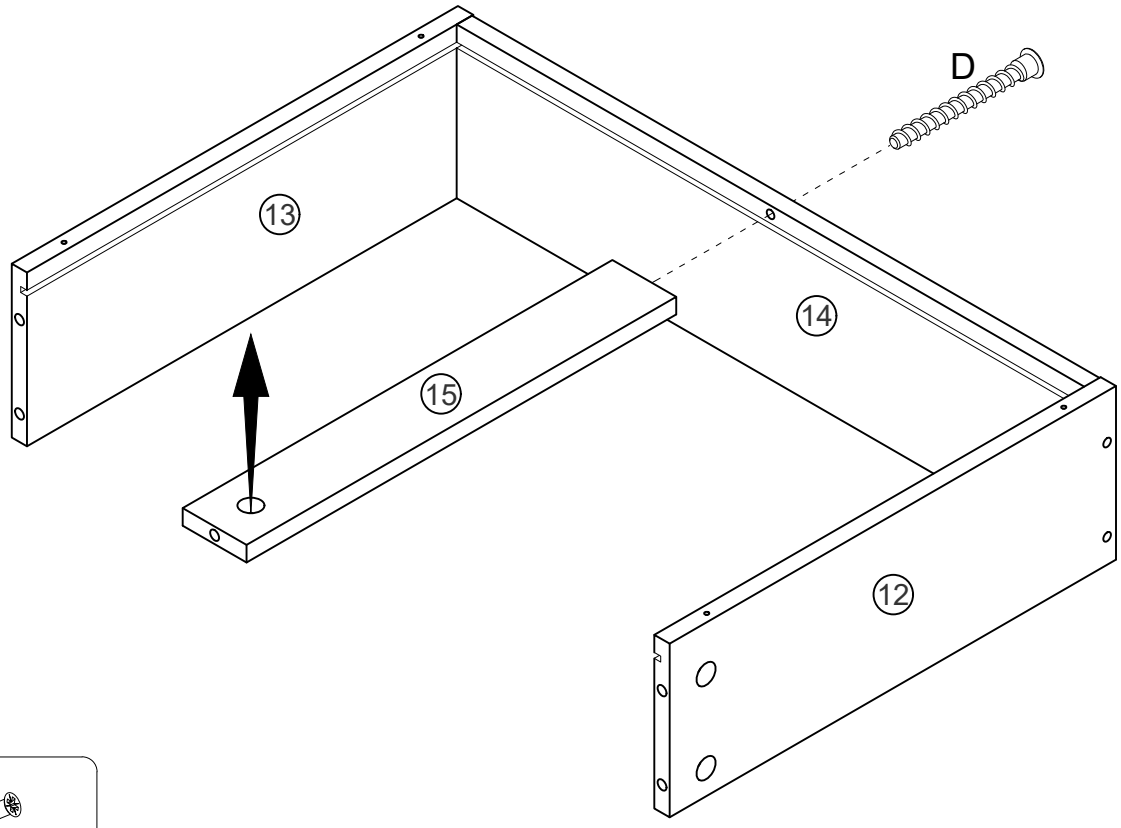


D x 1




Ø5x38mm

43


The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

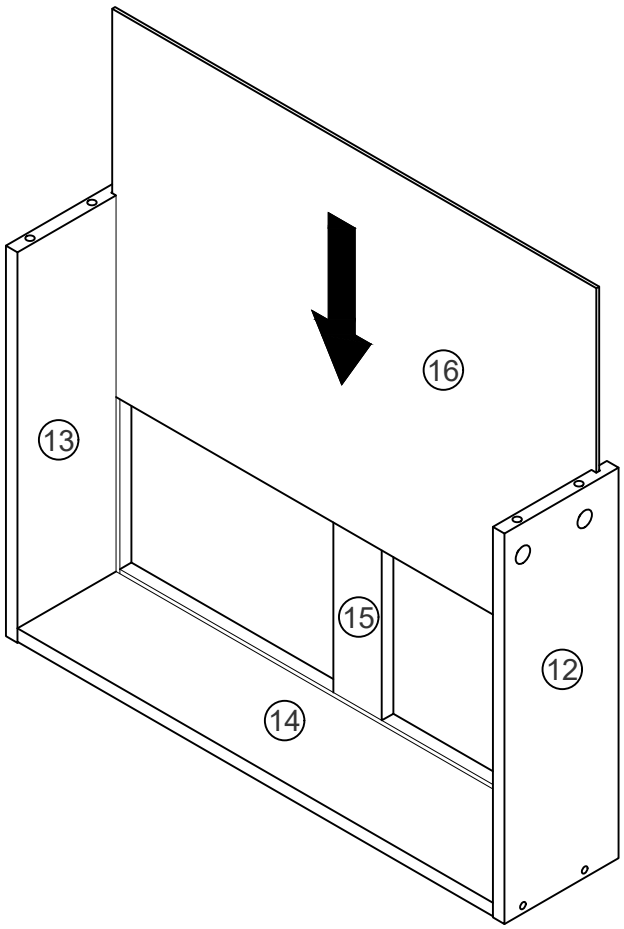

44

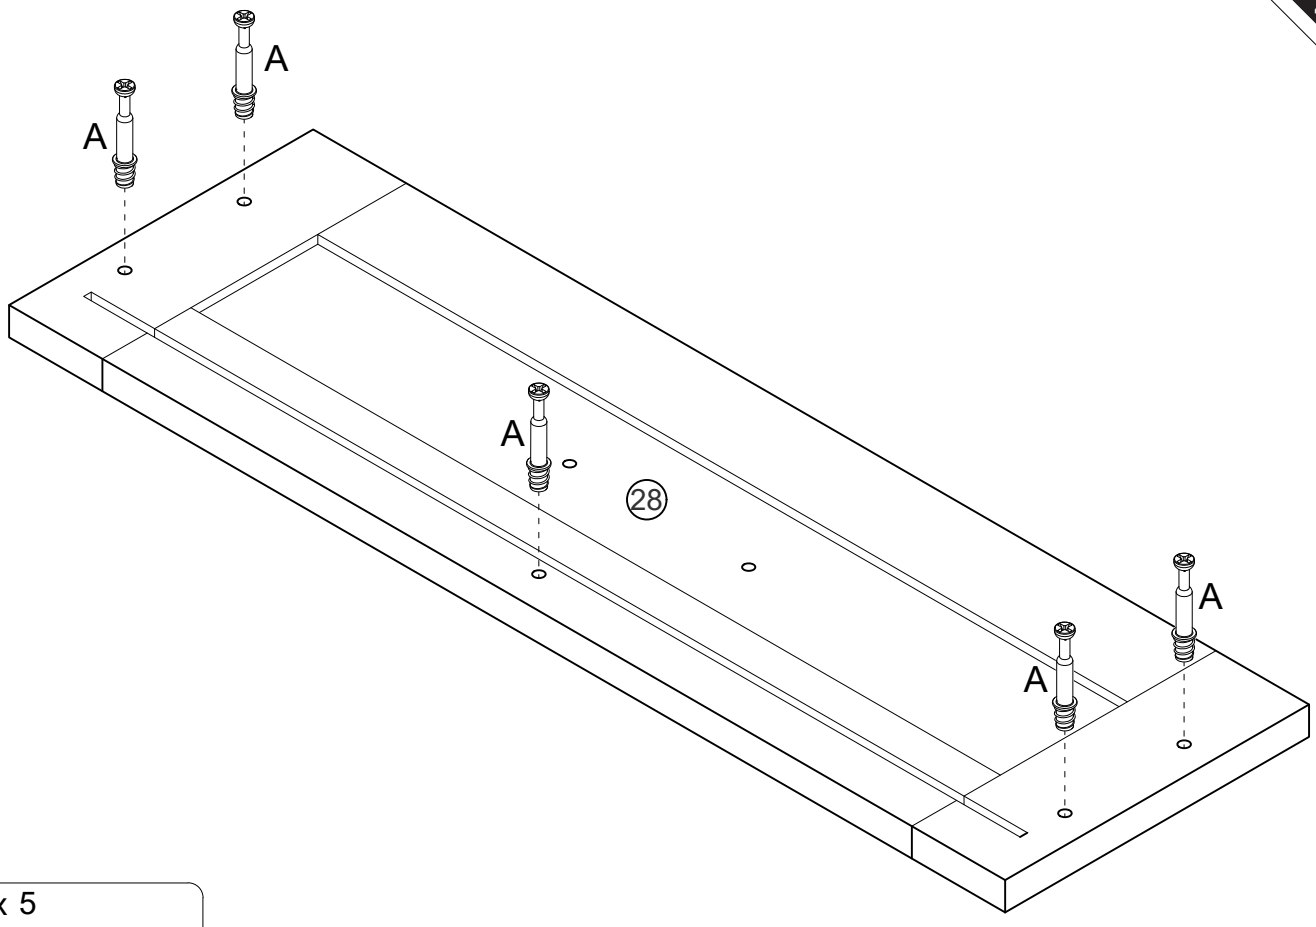


A x 5



Ø6x35mm

45

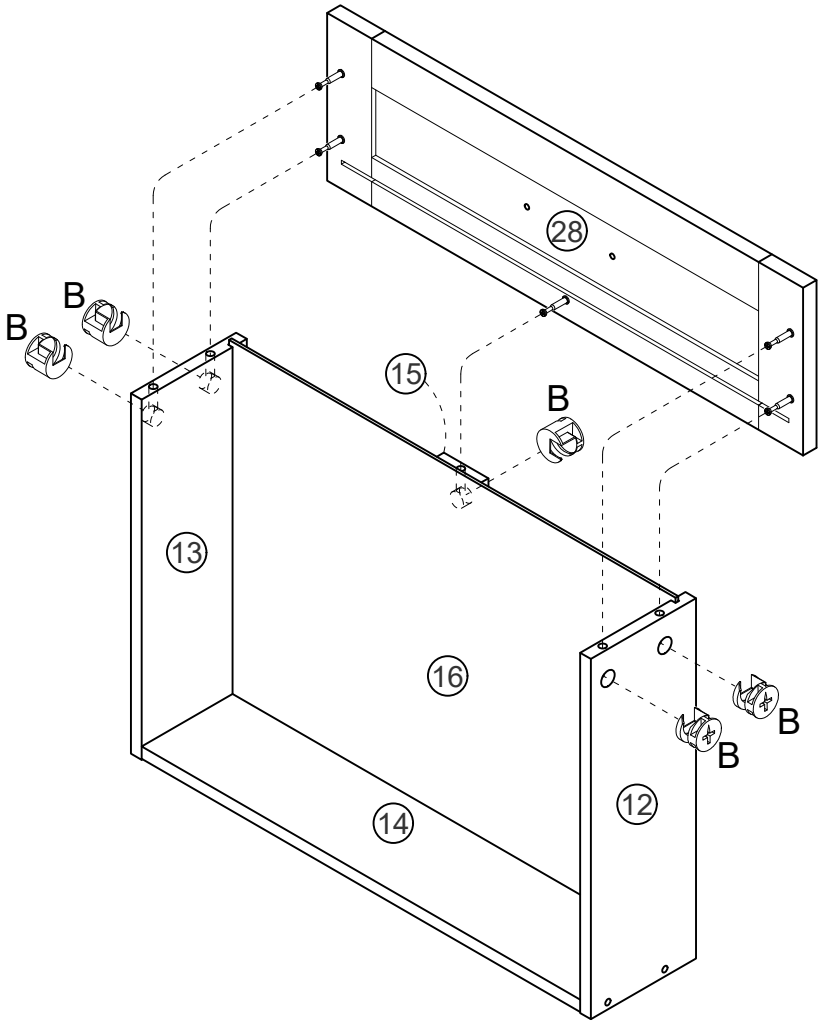


B x 5



Ø15x10mm

46

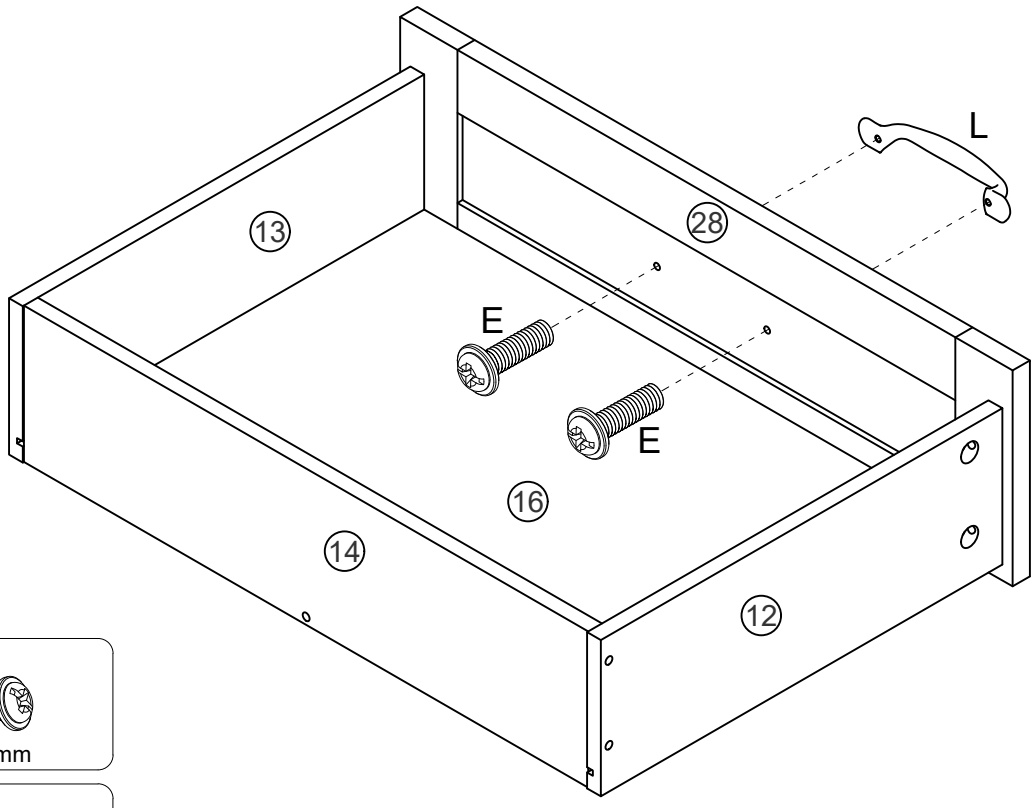


E x 2




M4x8mm

L x 1



47

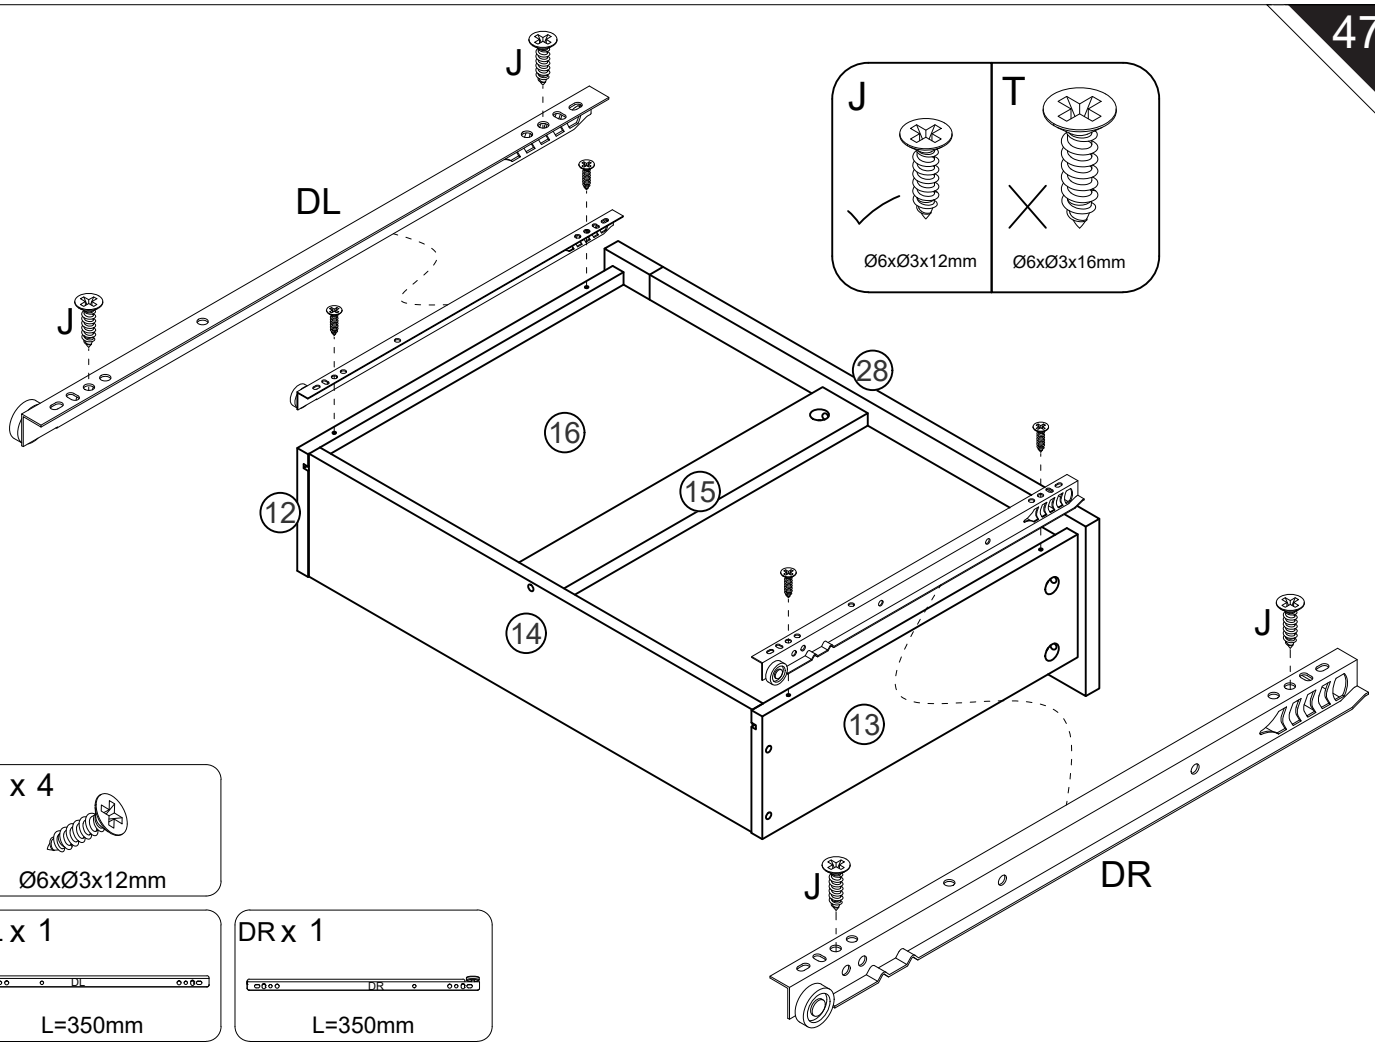

J x 4

Ø6xØ3x12mm

DL x 1

DL


L=350mm

DR x 1


DR


L=350mm

48

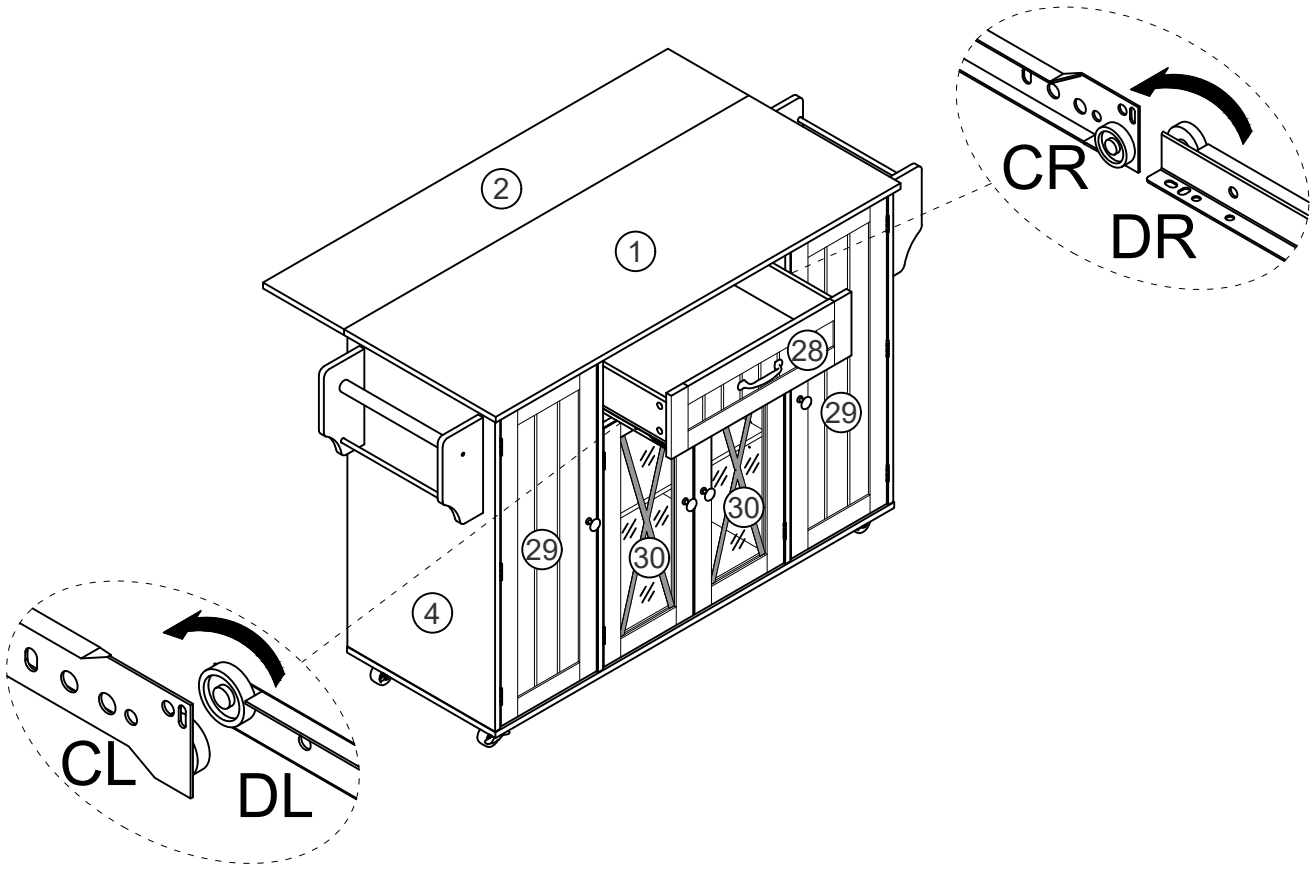

49

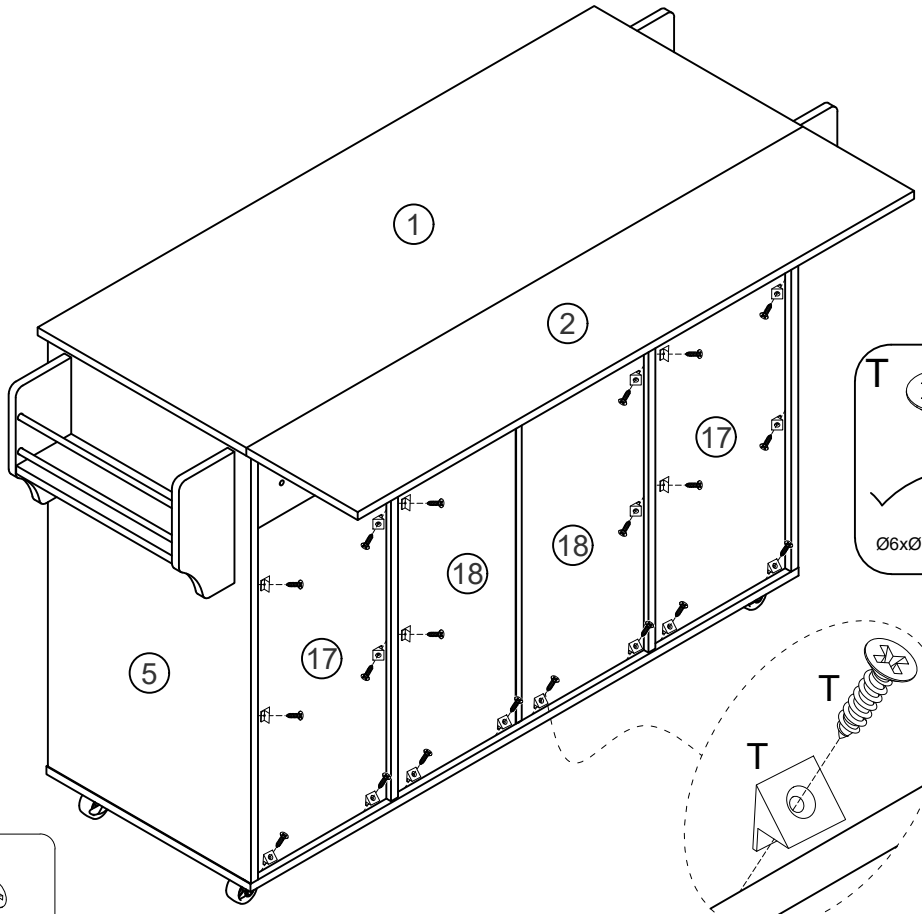


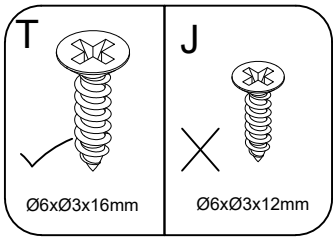



T x 20



50

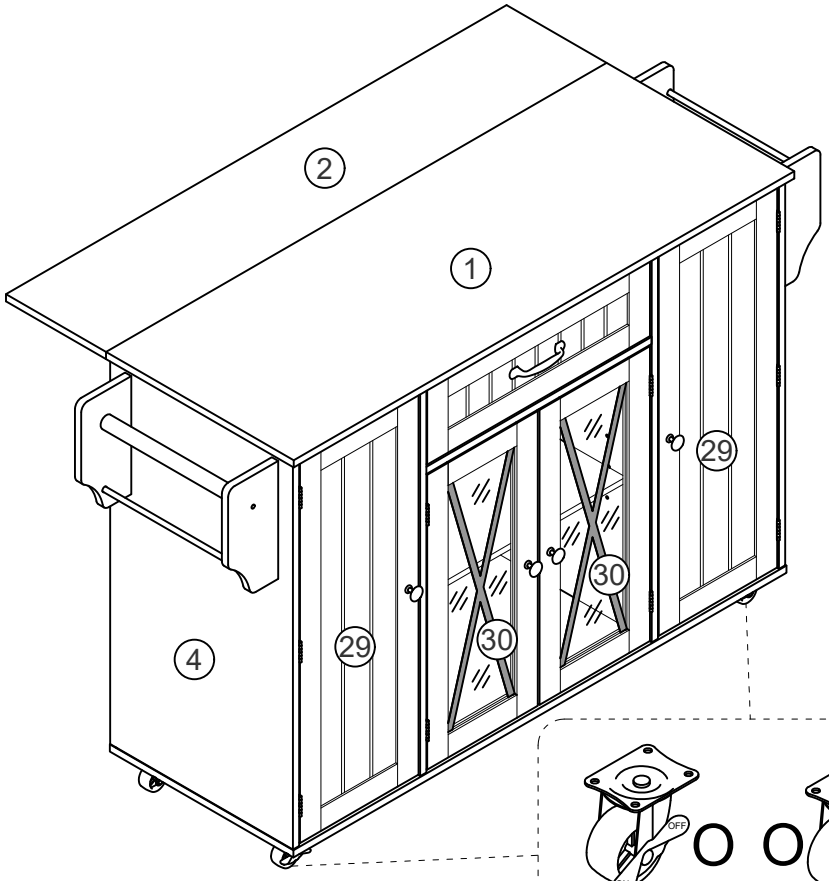

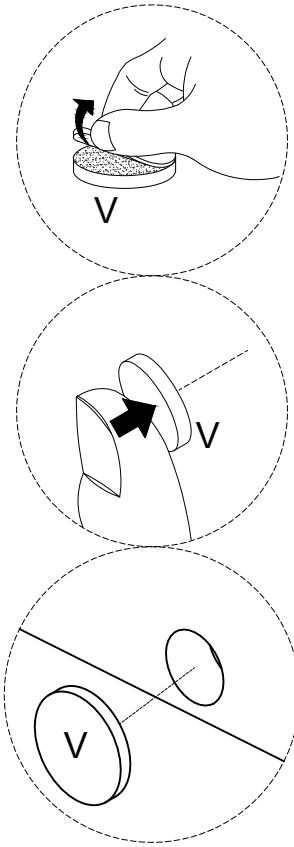


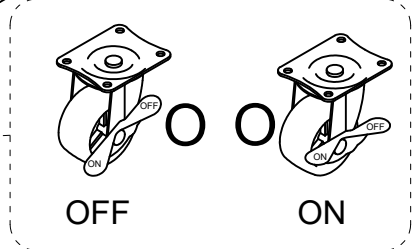

OFF ON

The table can be moved or fixed by adjusting component O 's brake system.

V x 55



We provide round stickers V . You can stick it to cover the exposed nuts or holes so as to look nicer.