
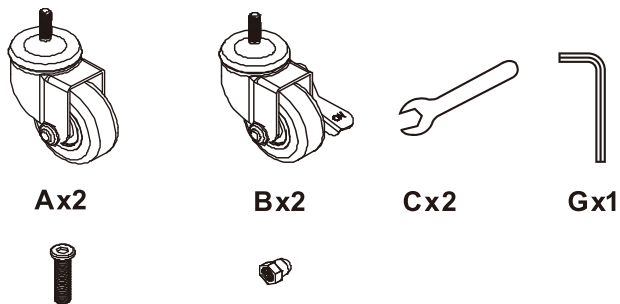
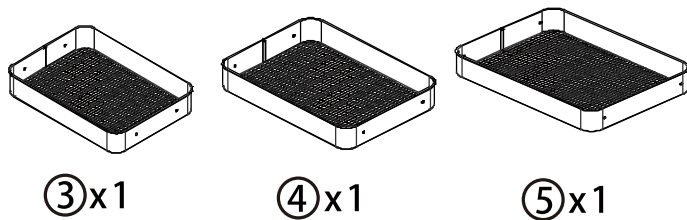



ASSEMBLY INSTRUCTIONS:

(Tips: Please read the instructions first. Don't overtighten screws initially; tighten them uniformly post - assembly for stability.)

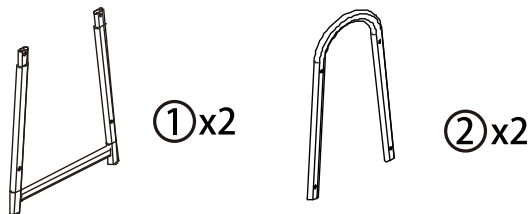


D x12 (+1 extra) E x12 (+1 extra)

Step 1

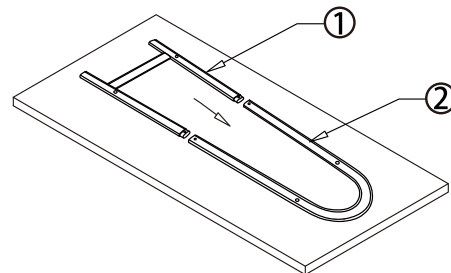


Insert ① into ②, align the holes at the connection, and then place on a flat surface.

Step 2

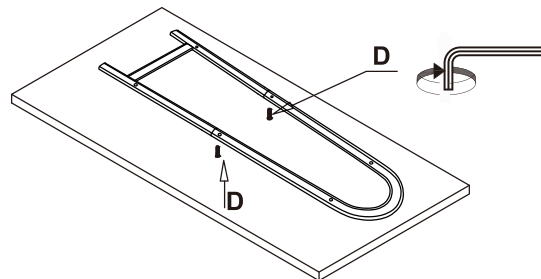


Use G to screw D into the hole in the middle of the support rod.

Step 3

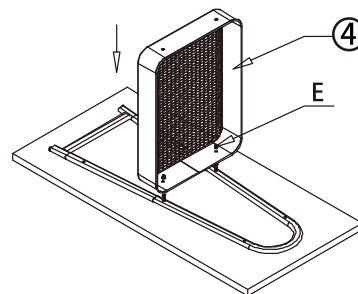


Align the holes on the side of ④ with D installed in Step 2, and then screw in E.

Step 4

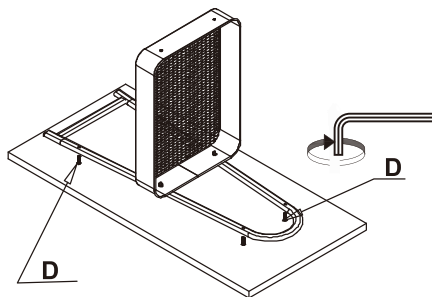


Screw D into the other holes of the support rod.

Step 5

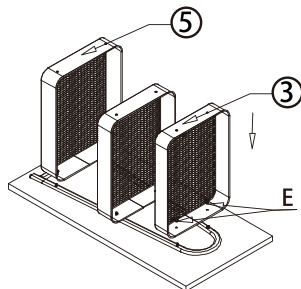


Install ③ and ⑤ in the positions shown in the figure in the same way as in Step 3.

Step 6

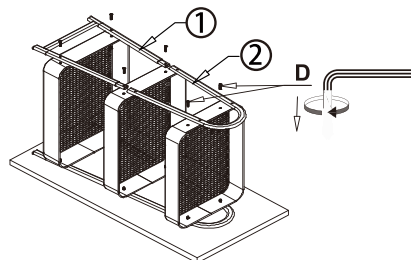


Install the other support rod as in Step 1, align side holes of each storage basket, then screw in D.

Step 7

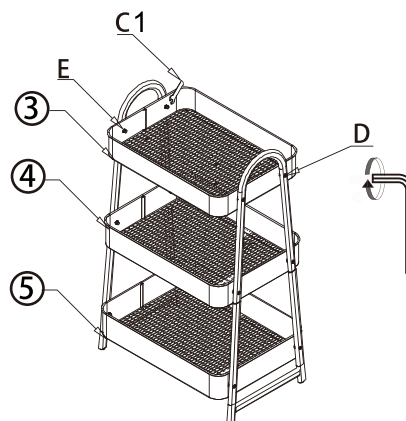

Use C1 and G to tighten all Ds and Es respectively.

Step 8

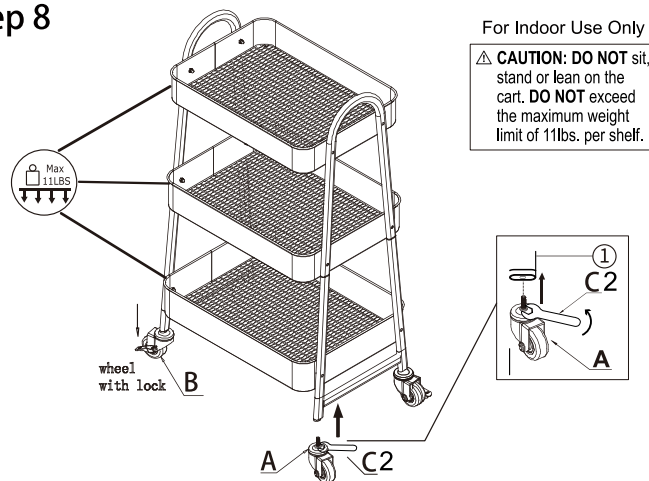

Use C2 to screw A and B into the bottom of the support rods on both sides.