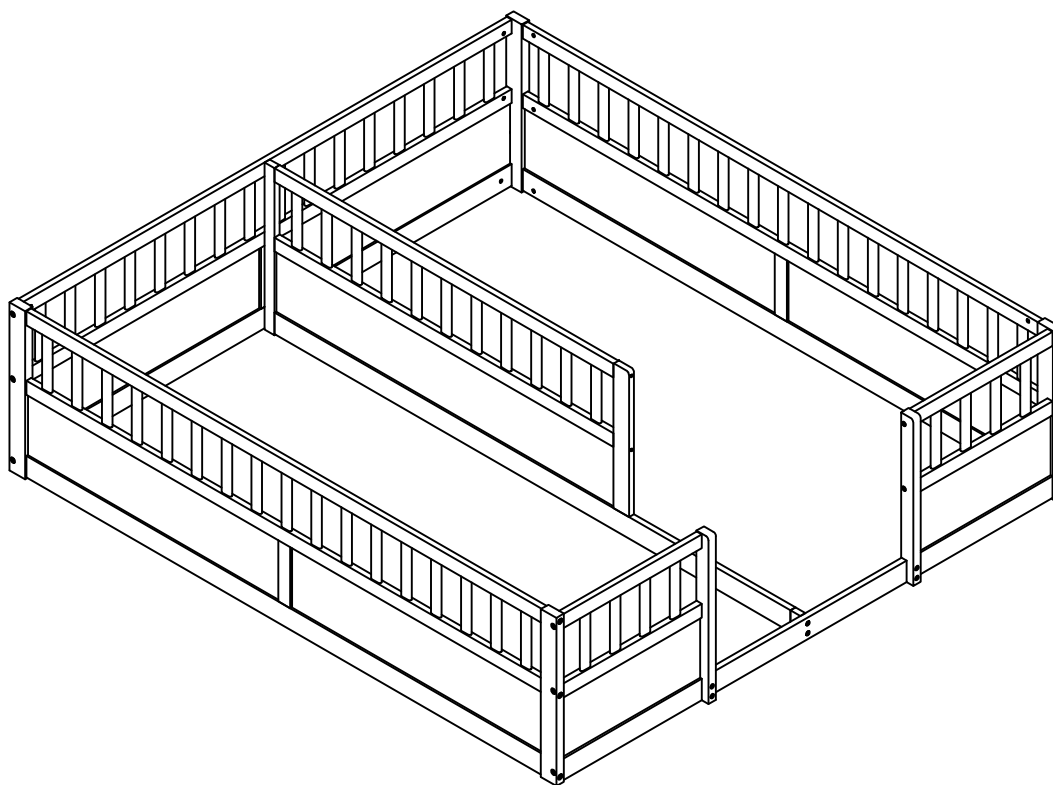



ASSEMBLY INSTRUCTIONS INSTRUCTIONS DE MONTAGE MONTAGEANLEITUNG

DOUBLE FLOOR BED WITH GUARDRAILS, 2x 90x200 CM
LIT DOUBLE AU SOL AVEC BARRIÈRES, 2x 90x200 CM
DOPPEL-BODENBETT MIT SCHUTZGITTER, 2x 90x200 CM













ESA33853







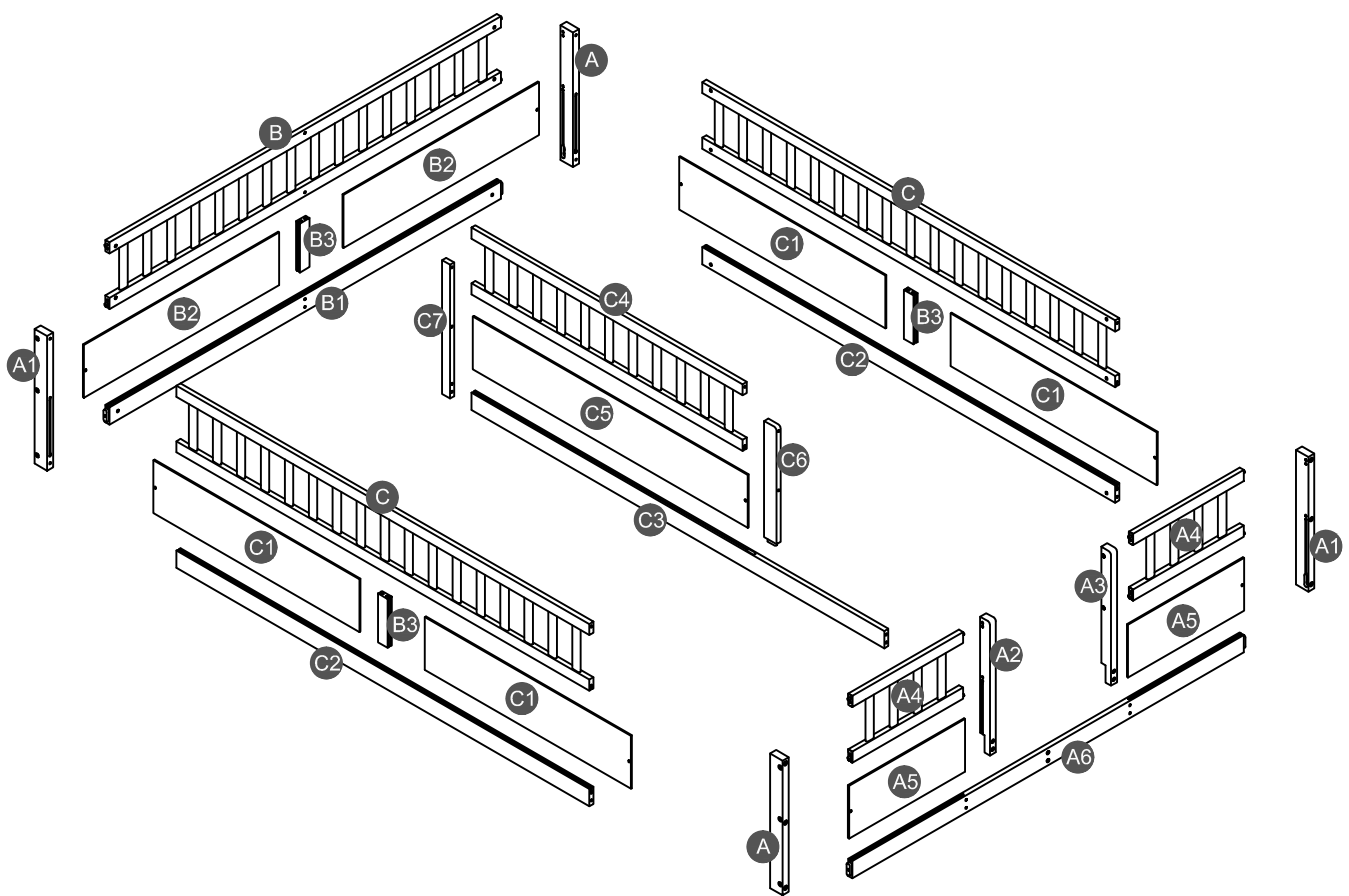
Detail View
Vue détaillée
Detailansicht



Part List / Liste des pièces / Teileliste

A  Leg (Left front/Right back) - 2pcs	A1  Leg (Left back/Right front) - 2pcs	A2  Vertical guard rail (Left) - 1pc
A3  Vertical guard rail (Right) - 1pc	A4  Guard rail (Front) - 2pcs	A5  Side panel (Front) - 2pcs
A6  Side rail (Front) - 1pc	B  Guard rail (Back) - 1pc	B1  Side rail (Back) - 1pc
B2  Side panel (Back) - 2pcs	B3  Mid vertical bar - 3pcs	C  Guard rail (Left/Right) - 2pcs
C1  Side panel (Left/Right) - 4pcs	C2  Lower horizontal bar (Left/Right) - 2pcs	C3  Mid horizontal bar - 1pc
C4  Mid guard rail - 1pc	C5  Mid panel - 1pc	C6  Mid vertical guard rail - 1pc
C7  Mid vertical guard rail (back) - 1pc		



Hardware List / Liste du matériel / Hardwareliste

1  Ø10*40mm Wood dowel (4pcs)	2  Ø8*30mm Wood dowel (12pcs)	3  (Ø15)1/4"*110mm Hex-Head bolts (15pcs)
4  (Ø15)1/4"*100mm Hex-Head bolts (6pcs)	5  (Ø15)1/4"*80mm Hex-Head bolts (8pcs)	6  (Ø12)1/4"*70mm Hex-Head bolts (8pcs)
7  (Ø12)1/4"*40mm Hex-Head bolts (4pcs)	8  1/4"*15 (9.5mm) Horizontal-Hole bolts(37pcs)	9  (1/4")4.5*58mm Allen key (1pc)
10  70*37*19mm Support (1pc)		

EN: OPTIONAL TOOLS FOR ASSEMBLY (NOT INCLUDED)

FR: OUTILS FACULTATIFS POUR L'ASSEMBLAGE (NON INCLUS)

DE: OPTIONALES WERKZEUG FÜR DIE MONTAGE
(NICHT ENTHALTEN)



Electric
Screwdriver


EN: PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

FR: ATTENTION ! NE PAS ENDOMMAGER LE TROU LORSQUE VOUS UTILISEZ DES OUTILS ÉLECTRIQUES !

DE: BITTE SEI VORSICHTIG UND BESCHÄDIGE DIE LOCHPOSITION NICHT BEI DER VERWENDUNG VON ELEKTROWERKZEUGEN!

STEP 1:
ÉTAPE:
SCHRITT:


2		5		8	
4PCS		6PCS		6PCS	

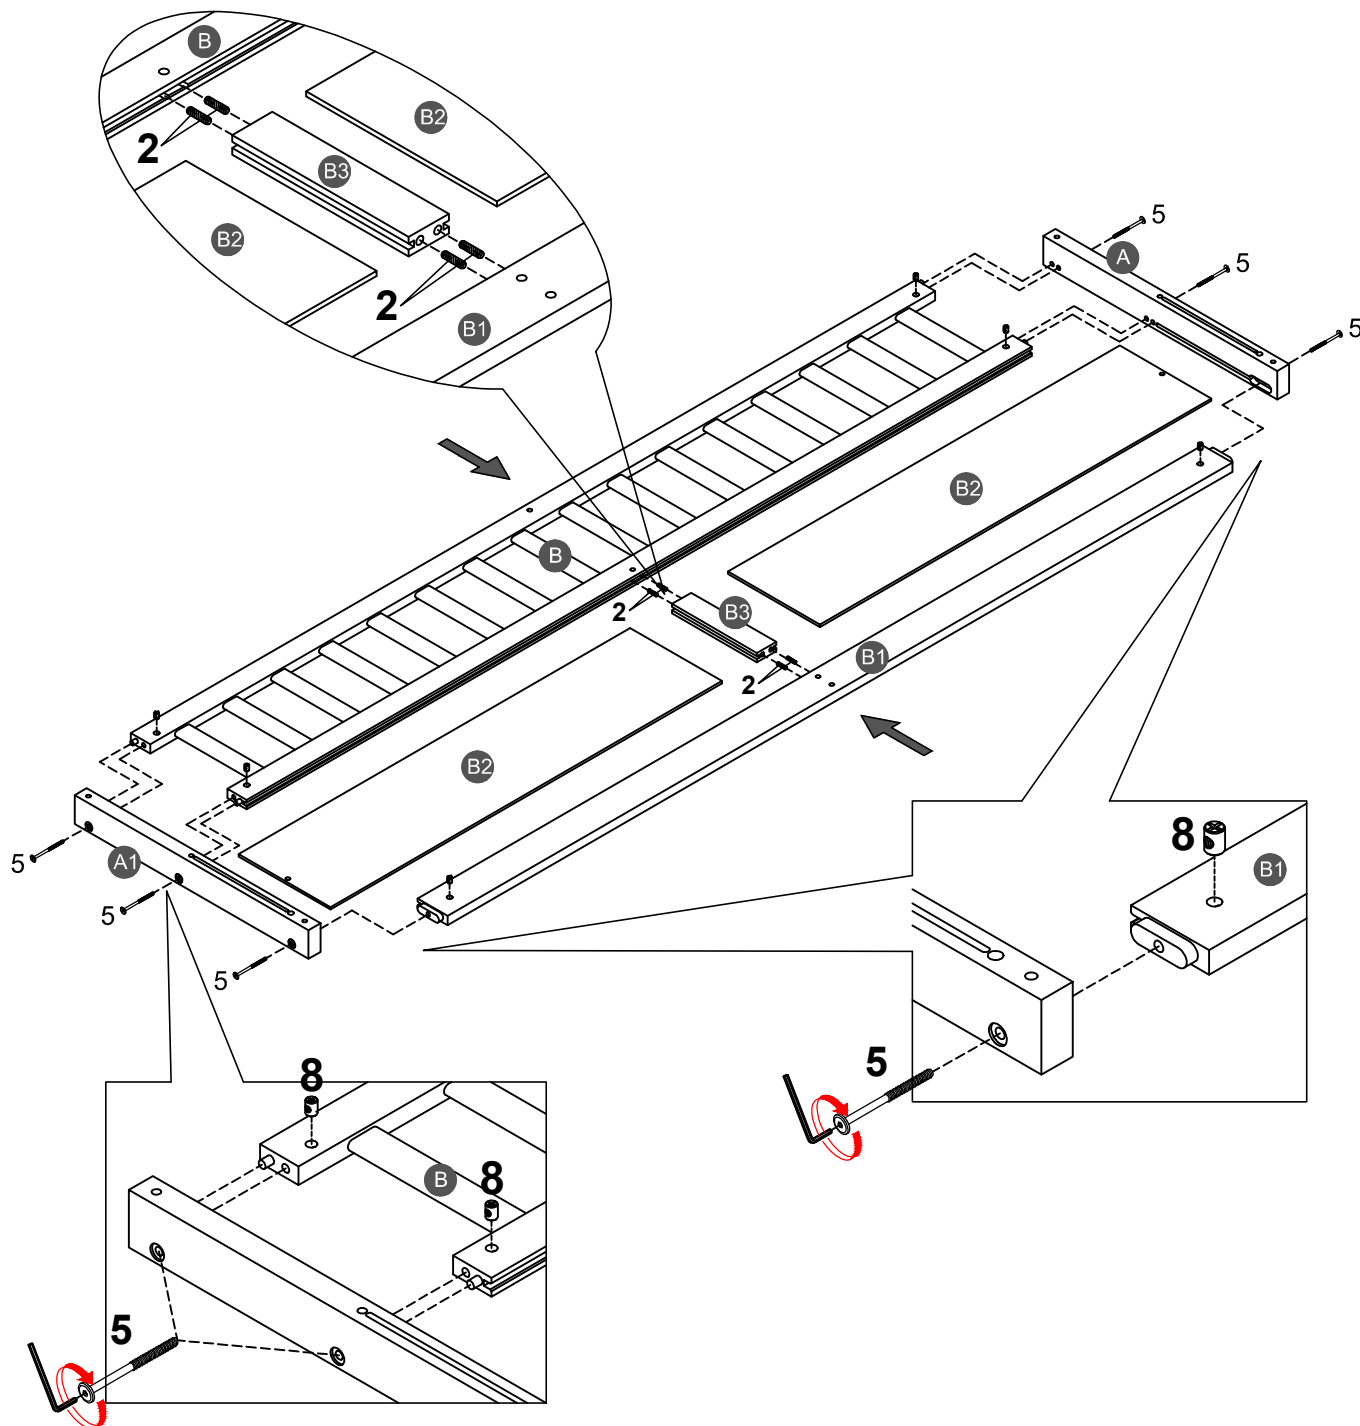

EN: Note: Part 8 will face up with the "x" mark on it, otherwise it cannot be tightened.

FR: Remarque : La pièce 8 doit être orientée vers le haut, la marque « x » étant visible. Sinon, elle ne pourra pas être serrée.

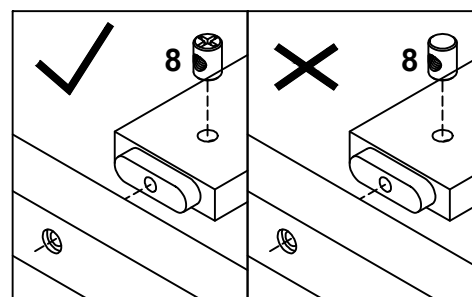
DE: Hinweis: Teil 8 muss mit dem „x“ nach oben zeigen, andernfalls kann es nicht festgezogen werden.



STEP 2:

ÉTAPE:

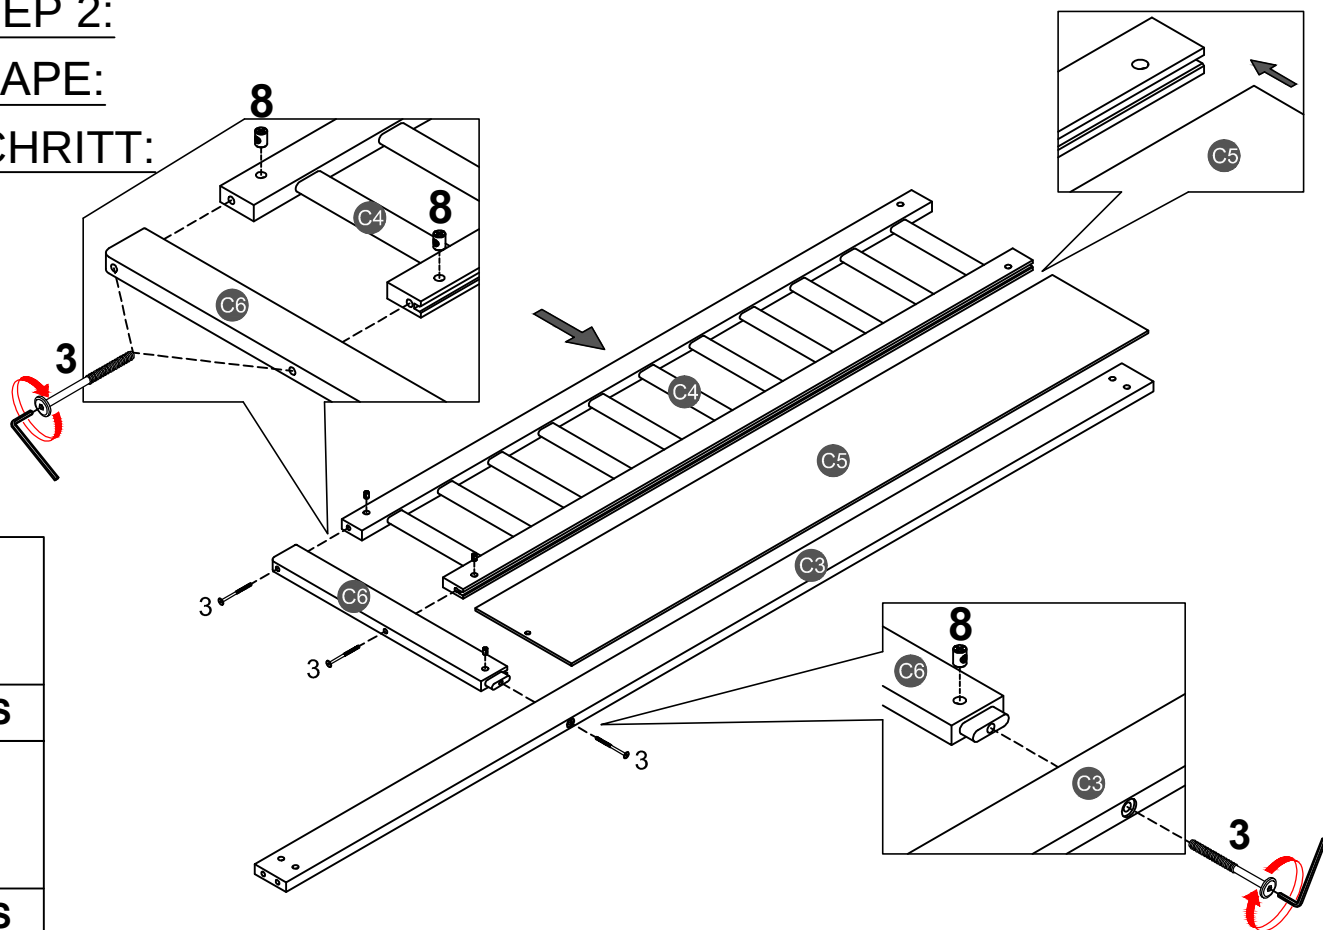SCHRITT:




3	
3PCS	
8	
3PCS	

STEP 3:

ÉTAPE:

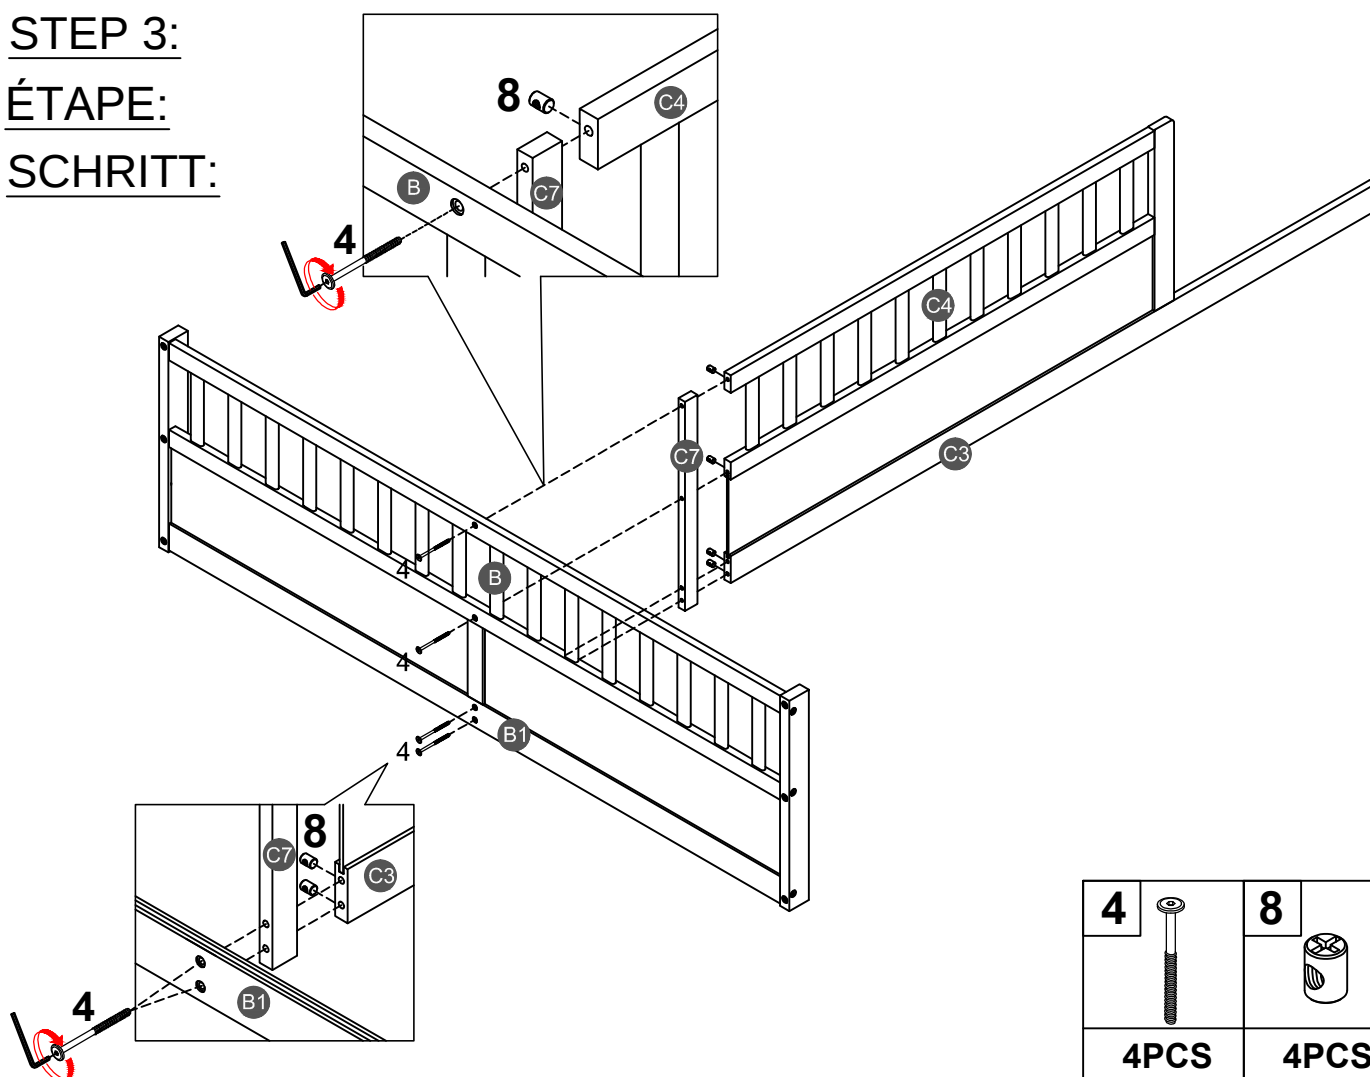SCHRITT:





4		8	
4PCS		4PCS	

STEP 4:

ÉTAPE:

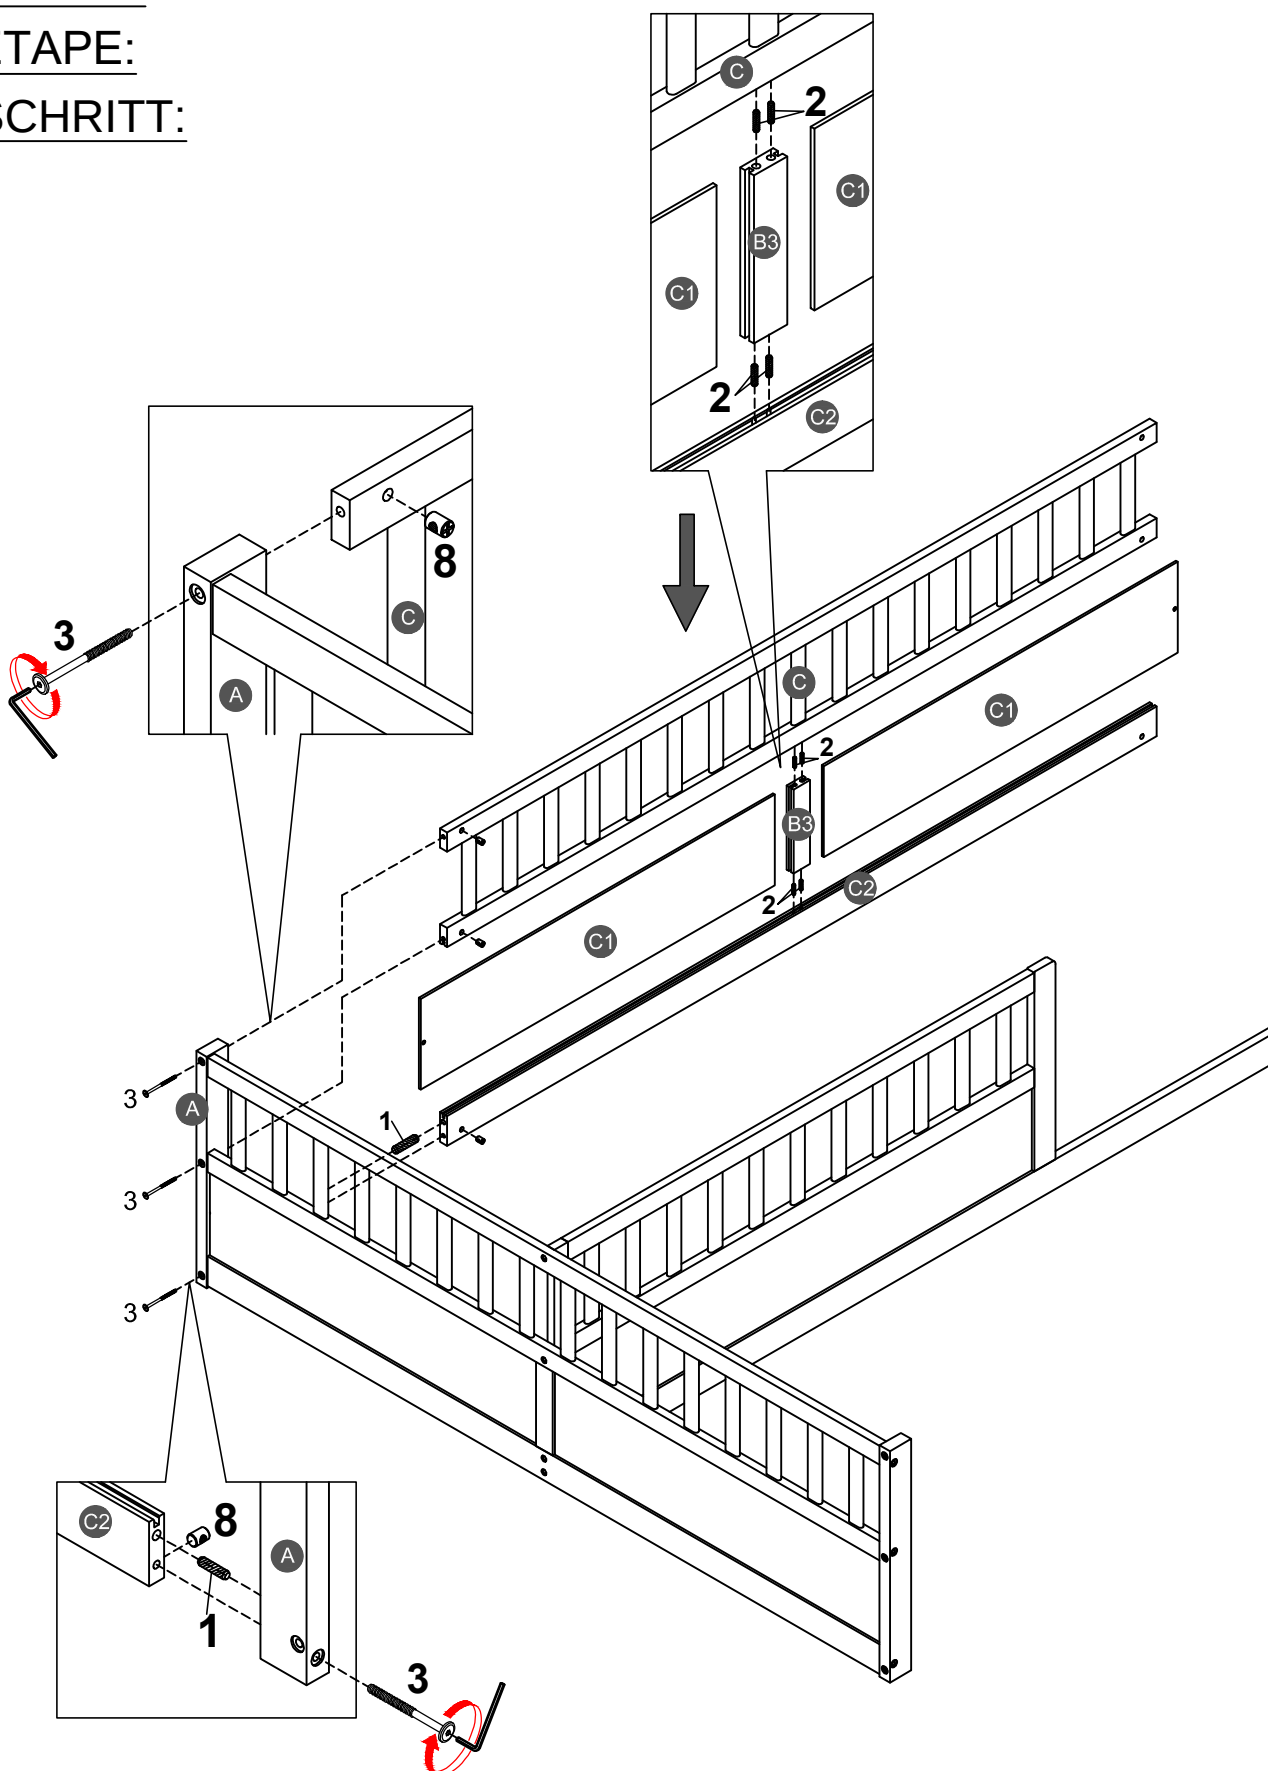
SCHRITT:




1	2	3	8
			
1PC	4PCS	3PCS	3PCS

STEP 5:
ÉTAPE:
SCHRITT:

1		2		3		8	
1PC		4PCS		3PCS		3PCS	

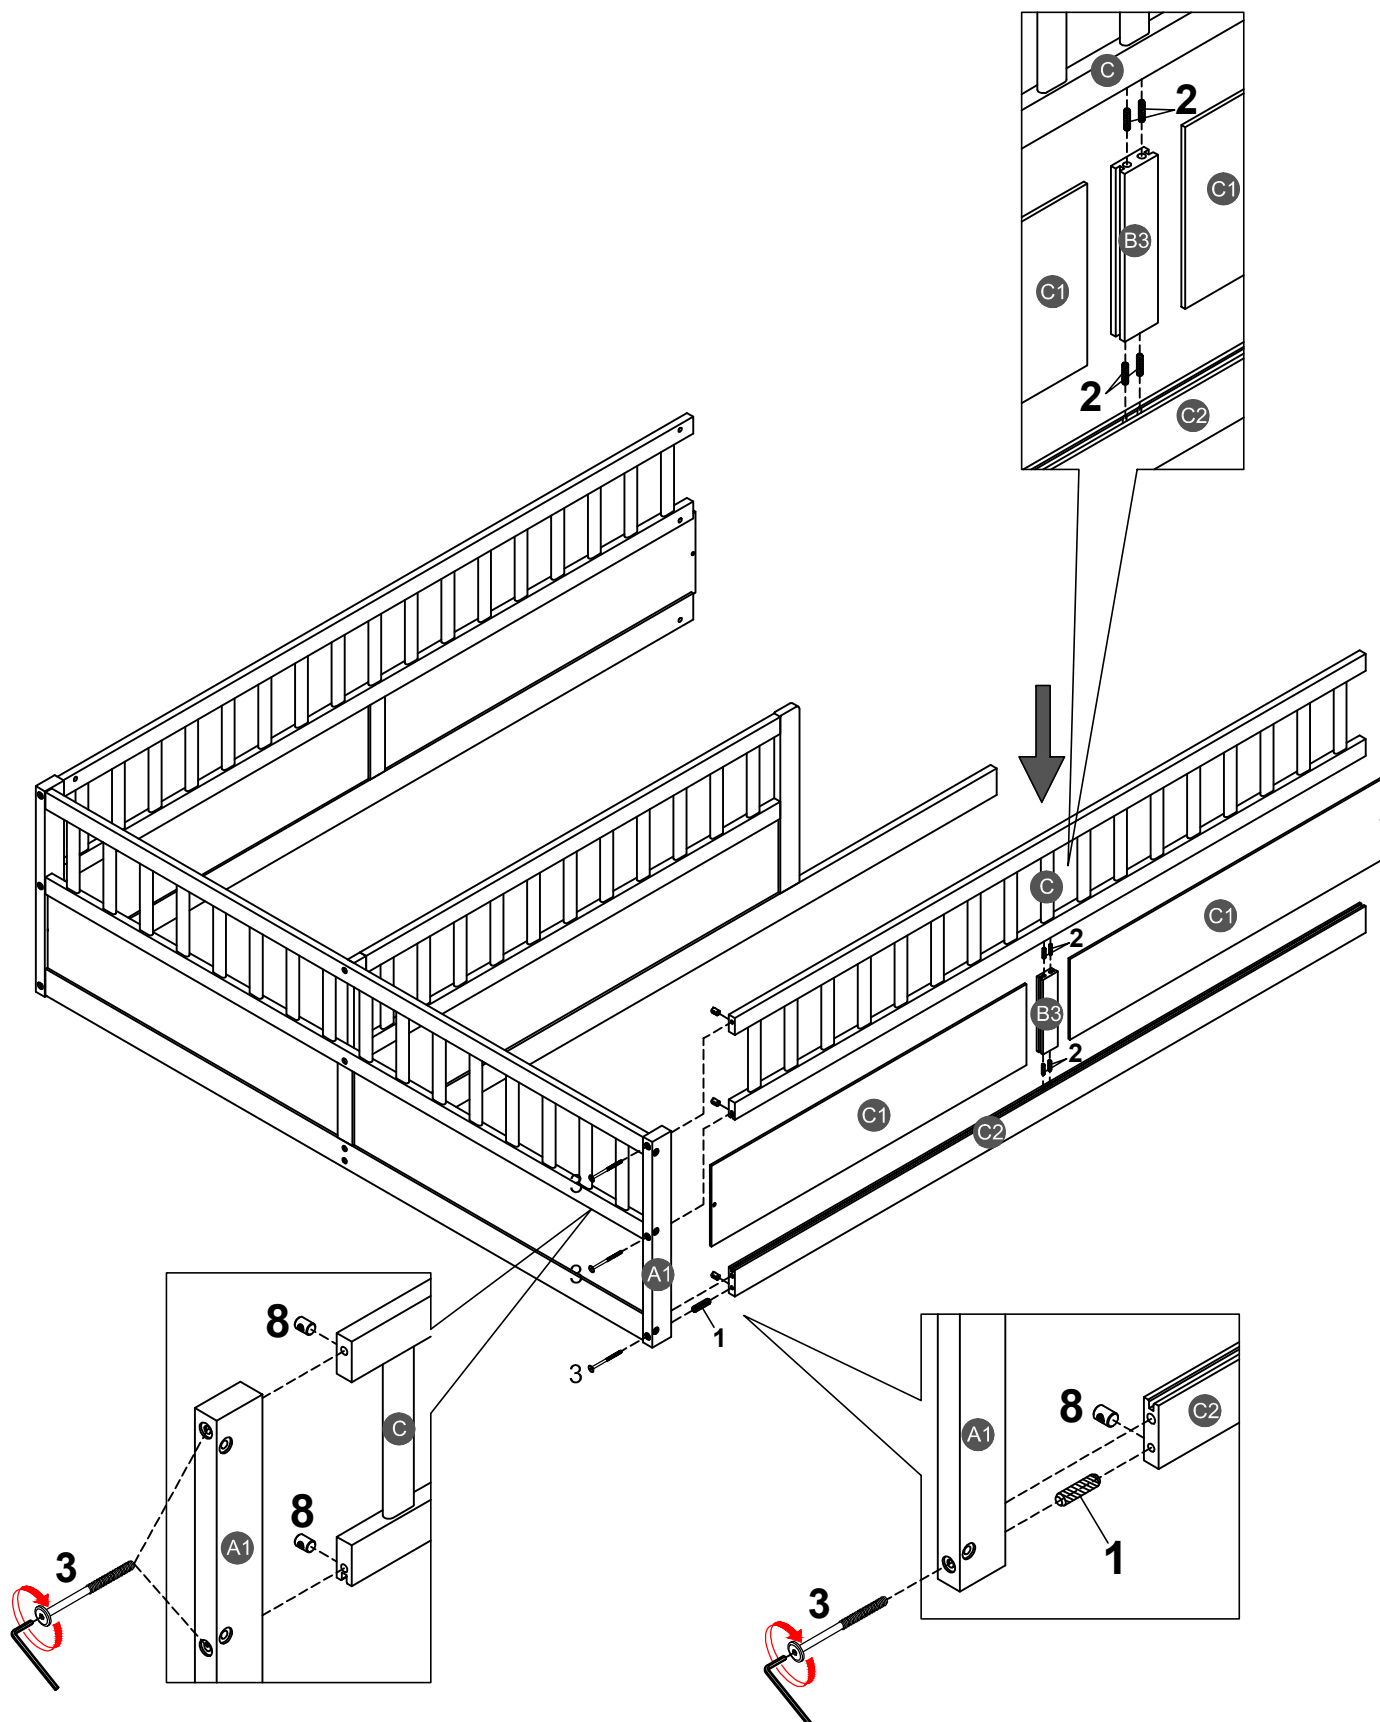


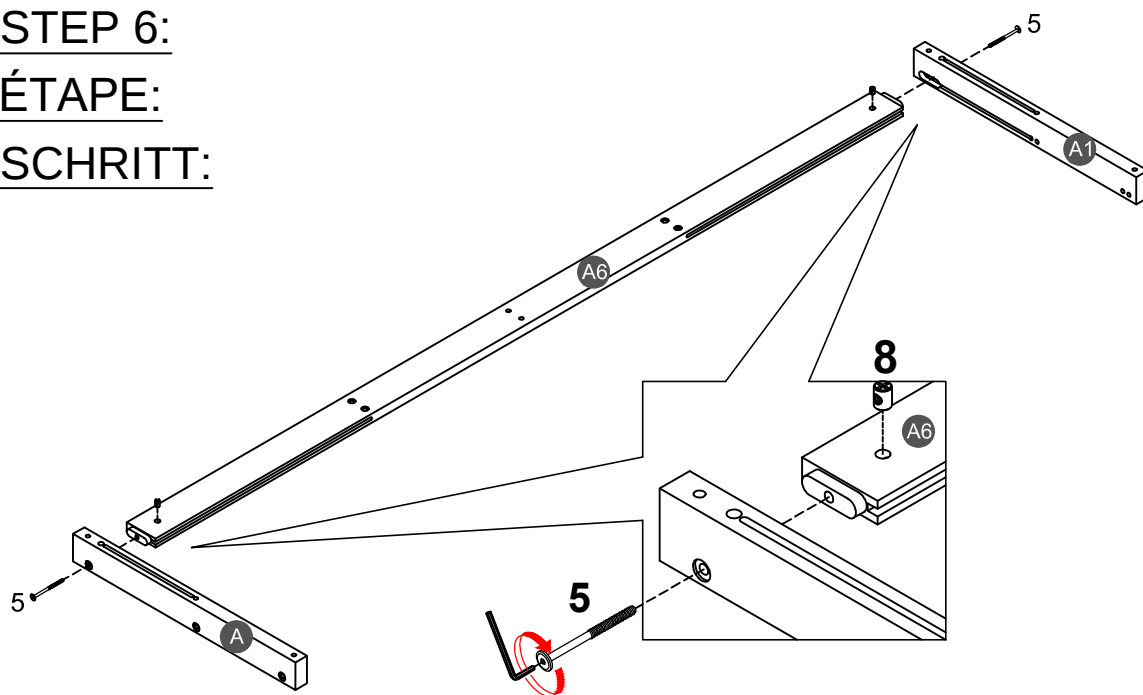STEP 6:
ÉTAPE:
SCHRITT:



5	
2PCS	
8	
2PCS	

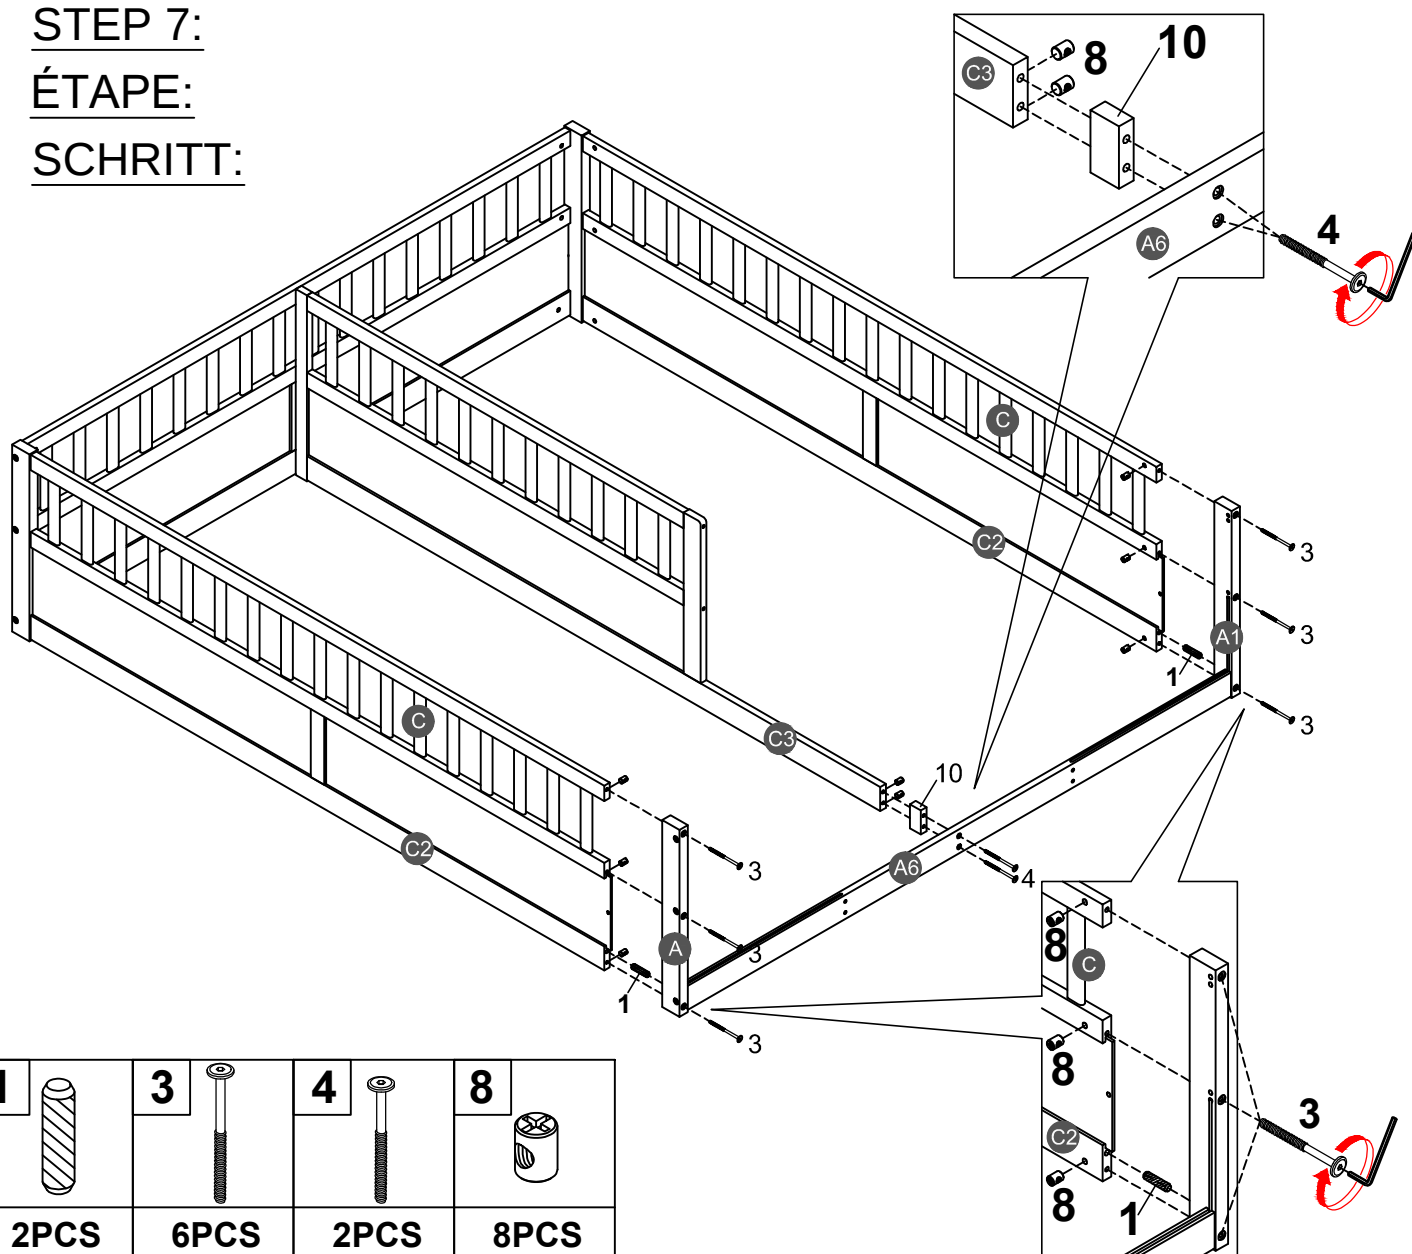
STEP 7:
ÉTAPE:
SCHRITT:



1		3		4		8	
2PCS		6PCS		2PCS		8PCS	



STEP 8:
ÉTAPE:
SCHRITT:


6		8	
4PCS		4PCS	

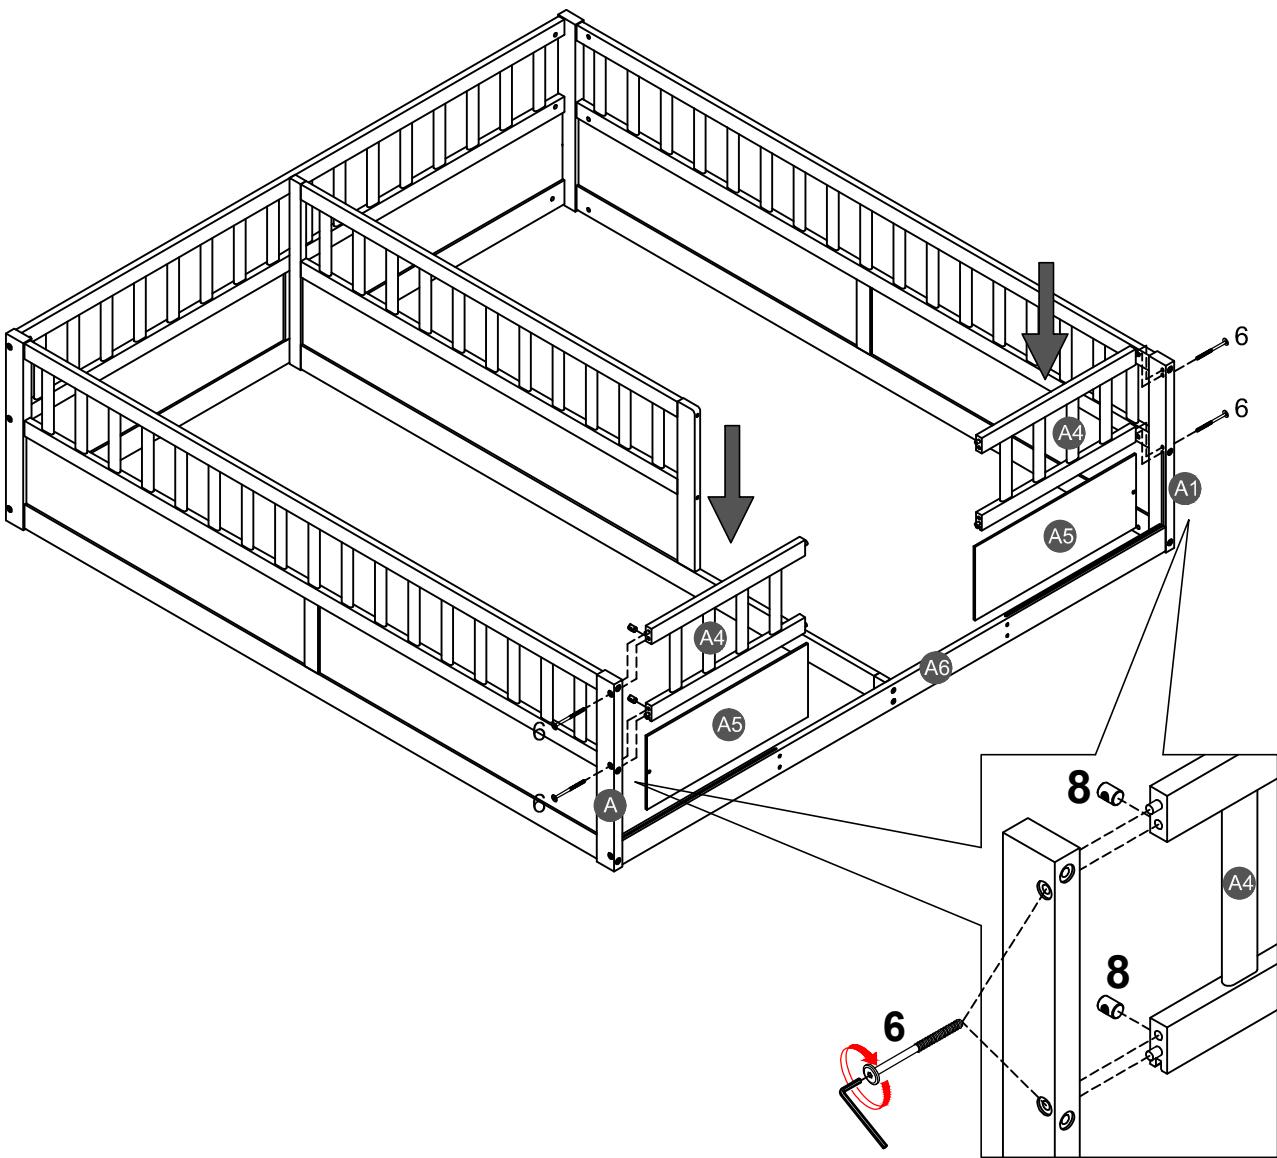

STEP 9:
ÉTAPE:
SCHRITT:

6		7		8	
4PCS		4PCS		4PCS	

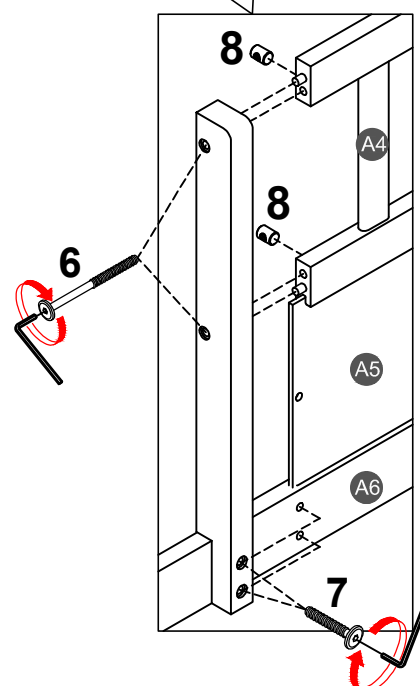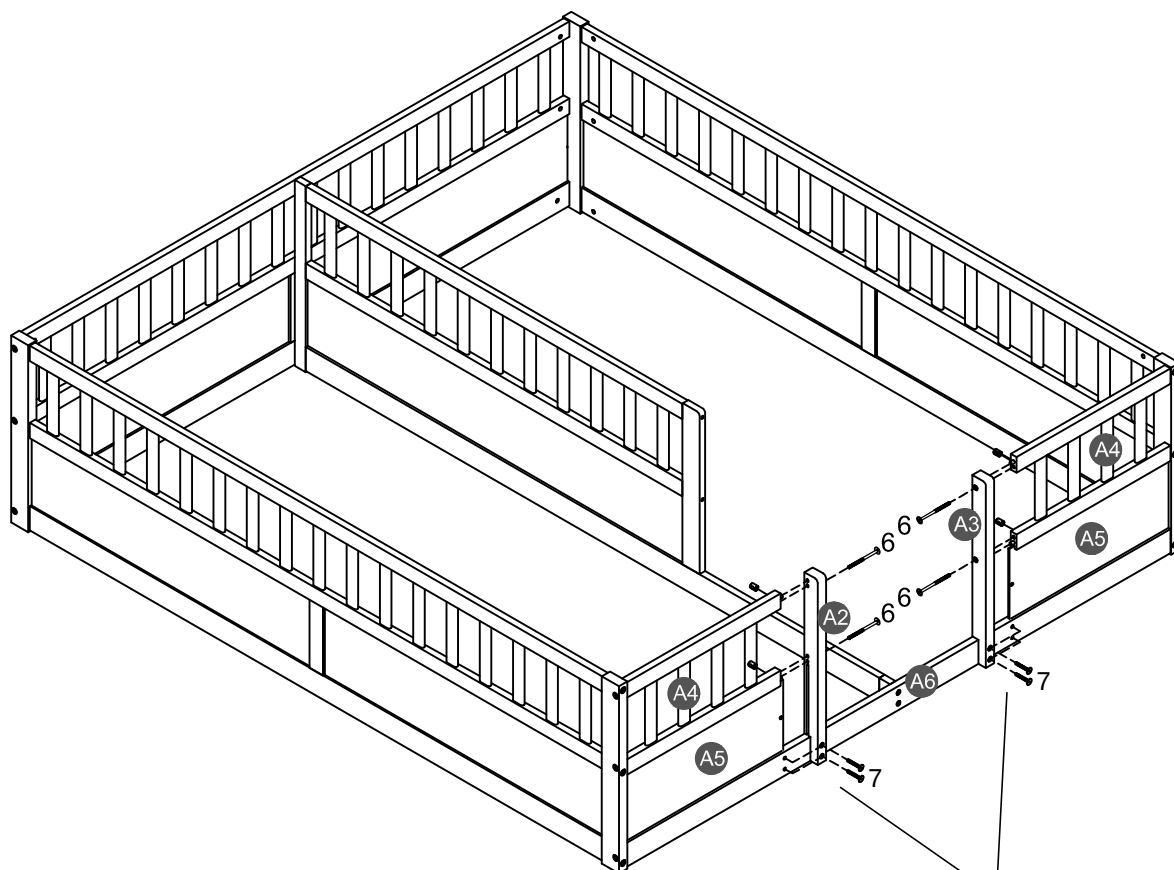

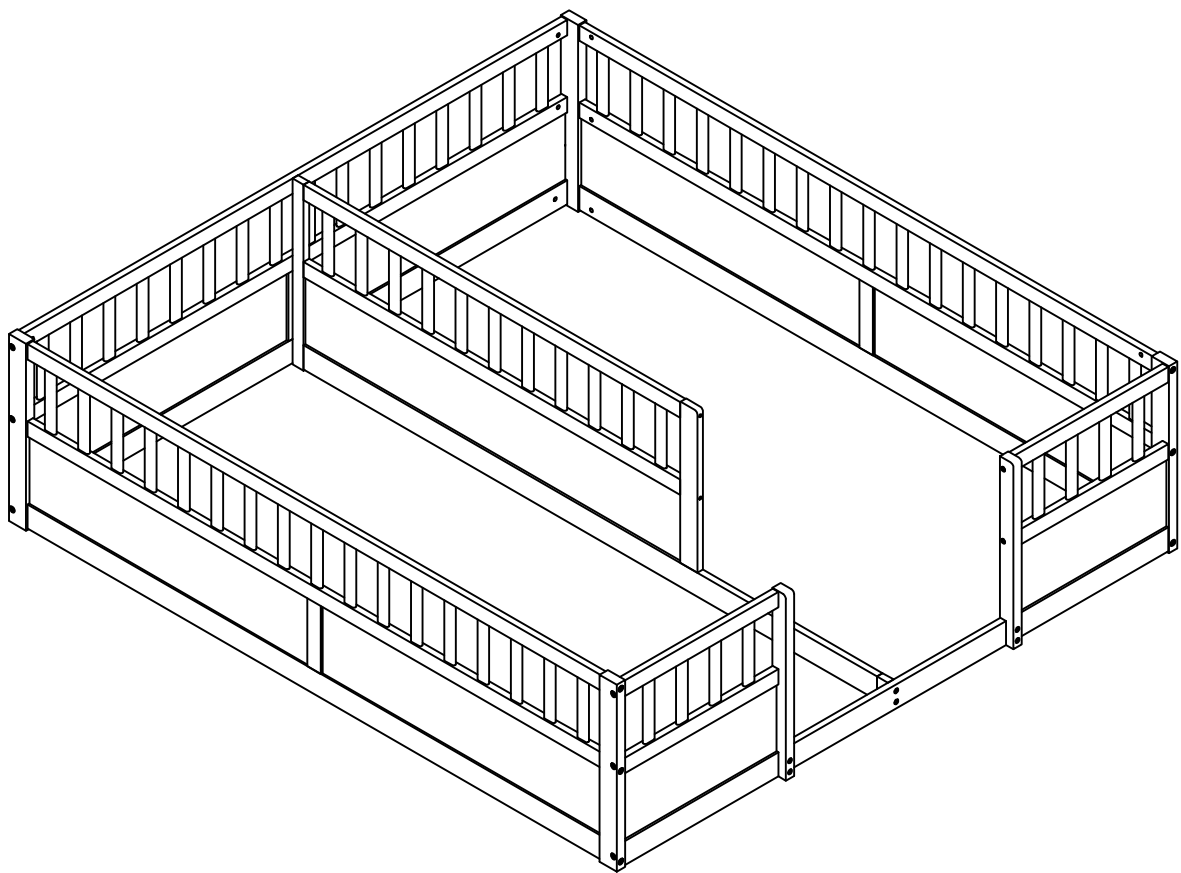

EN: Make sure to tighten all the screws of the bed.

FR: Assurez-vous de bien serrer toutes les vis du lit.

DE: Achten Sie darauf, alle Schrauben des Bettes festzuziehen.