
ASSEMBLY INSTRUCTION


Item Number: WF304708 / WF304711


Upholstered Bed 140x200

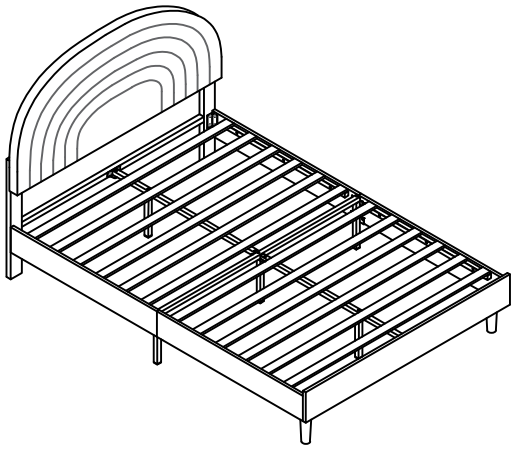

TIPS

1. This product is divided into 2 parcels for delivery. They may not arrive at the same time. Please wait patiently.
2. Please read the instructions fully before assembly. These instructions include important information which could ensure correct assembly. We have been working on providing high quality products for you. However, in the rare instance that your product is defective, missing parts or there are some issues, please don't hesitate to contact our customer service to submit parts requirements, assembly suggestion, or warranty claims, and we will give the best solution as soon as possible. If necessary, we need you to provide some more clear pictures of the issue.
3. Insert the screws in holes and tighten the screws, but not too tight, 70%~80% is ok, finally tighten all the screws. If some issues happened that some screws can not target to the hole or some parts are difficult to install, please adjust the tightness of the screws.
4. 2 people are recommended to finish

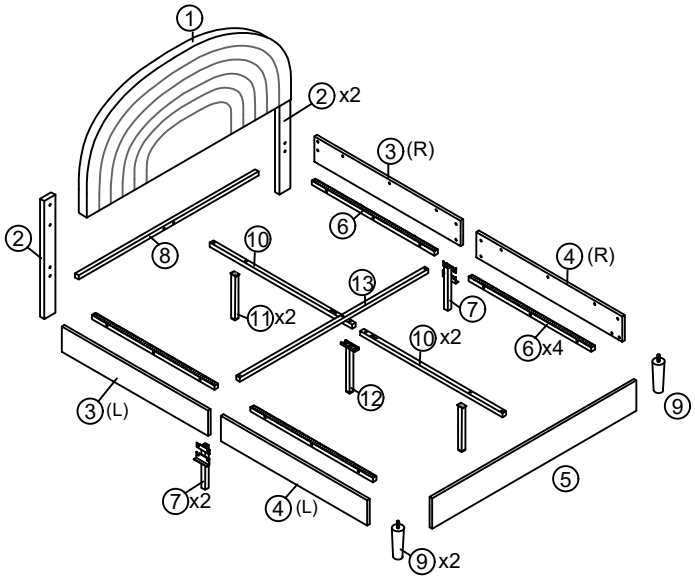


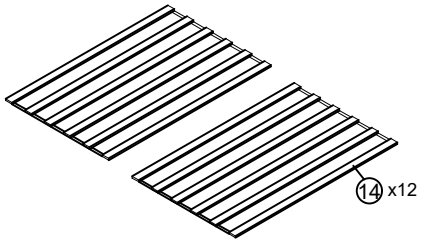










Parts List			Hardware List		
NO	ITEM	QTY	NO	ITEM	QTY
1	Head board	1	A	Allen Key	1
2	Head board legs	2	B	Bolts (M8x45mm)	4
3	Siderails	2	C	Two hole iron	2
4	Siderails	2	D	Bolts (M8x18mm)	36
5	Foot board	1	E	Bolts (M8x40mm)	21
6	Side rails support bar	4	F	"7" Connector	2
7	Side rails support legs	2	G	Metal Corner	2
8	Head board cross bar	1	H	Little "7" Connector	2
9	Bed legs	2	I	Screw nut	2
10	Center support bar	2	J	Center support bar fittings	2
11	Middle support leg	2			
12	Connected support leg	1			
13	Cross bar	1			
14	Slats	12			

Part List

WF304708

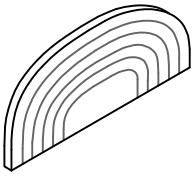1	 Head board-1pc


Hardware List+WF304711

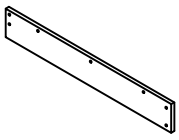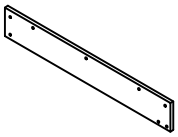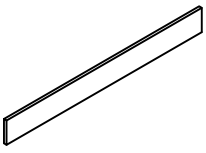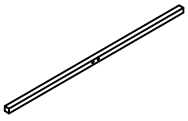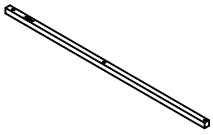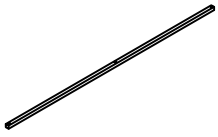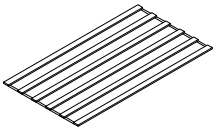2  Head board legs -2pcs	3  Side rails-2pcs	4  Side rails-2pcs
5  Foot board -1pc	6  Side rails support bar-4pcs	7  Side rails support legs-2pcs
8  Head board cross bar-1pc	9  Legs-2pcs	10  Center support bar-2pcs
11  Middle support leg-2pcs	12  Connected support leg-1pc	13  Cross bar-1pc
14  Slats-12pcs		

Attention: Do not tighten the screws before completing the entire installation. If you have any difficulty with the installation process, please feel free to contact us.

Step 1 x2


Fix the side headboard ② to the headboard ① with Bolts B by using Allen key A,you can chose the hole a and c,or b and d.

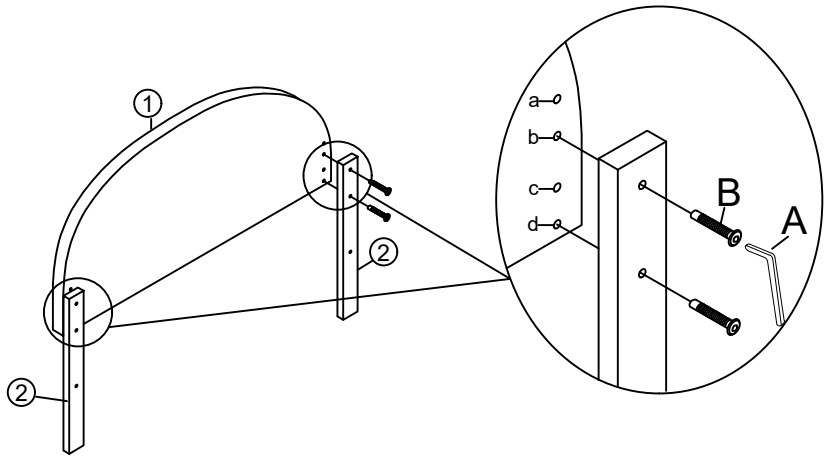

Allen Key	B Bolts x 4
	 M8X45mm

Step 2 x2


Fix the Headboard cross bar ⑧ to the Headboard legs ② with Bolt D and Two hole iron C by using Allen key A.

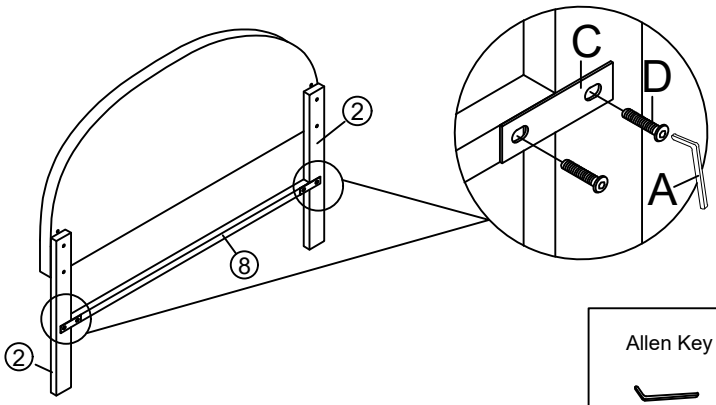

Allen Key	C Two hole iron x 2	D Bolts x 4
		 M8X18mm

Step 3 x2


Connect to Siderail support bar ⑥ Siderails ③ and ④ with Bolts E by using Allen key A.

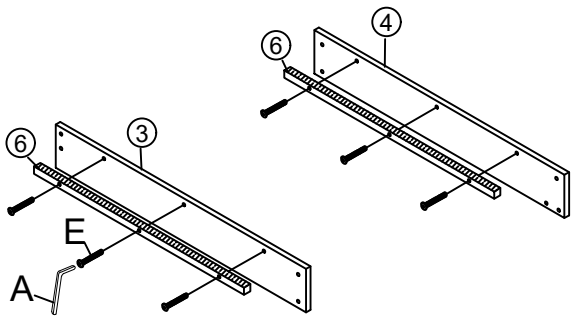

Allen Key	E Bolts x 12
	 M8X40mm

Step 4 x2


Fix the side rails support leg ⑦ to the assembled side rail with Bolts D by using Allen key A.

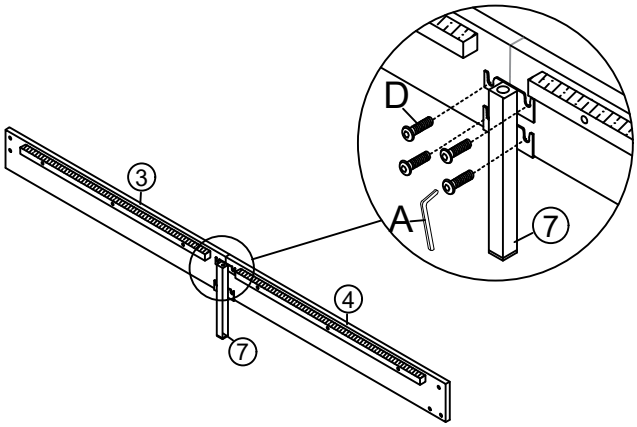

Allen Key	D Bolts x 8
	M8X18mm

Step 5 x2


Fix the assembled side rail to the Headboard legs ② with Bolts D and "7" Connector F by using Allen key A.

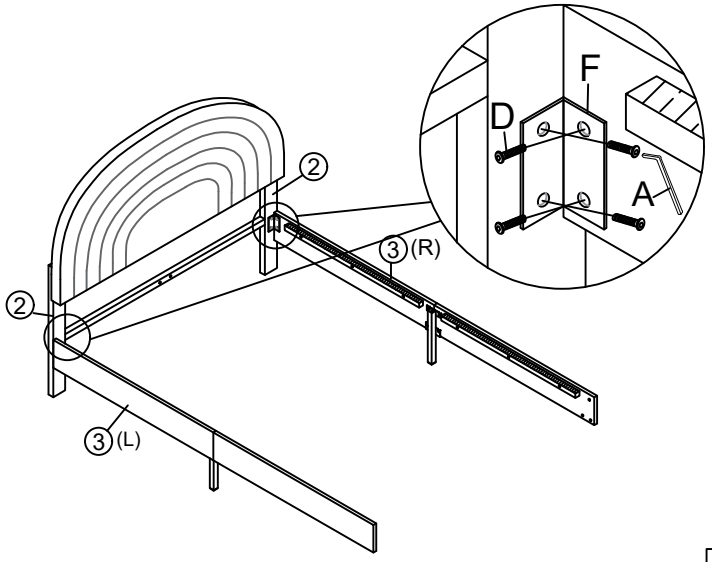

Allen Key	D Bolts x 8	F "7" Connectorx 2
	M8X18mm	

Step 6 x2


Fix the Siderails to the footboard ⑤ with Metal corner G,Little "7"Connector H and Bolt D by using Allen key A.

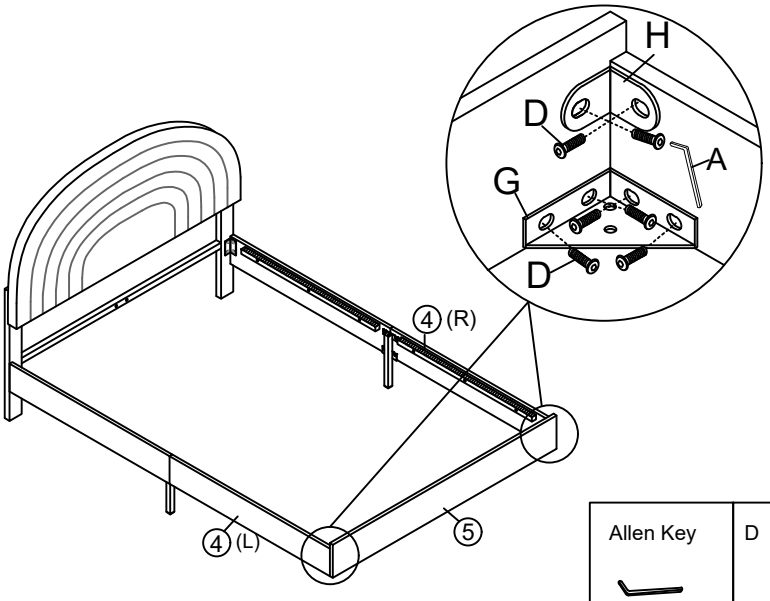

Allen Key	D Bolts x 12	H Little "7"Connectorx 2	G Metal Cornerx 2
	M8X18mm		

Step 7


Fix the legs ⑨ to the Metal corner G with Screw nut I .Please choose to install the bed legs near the inner hole.

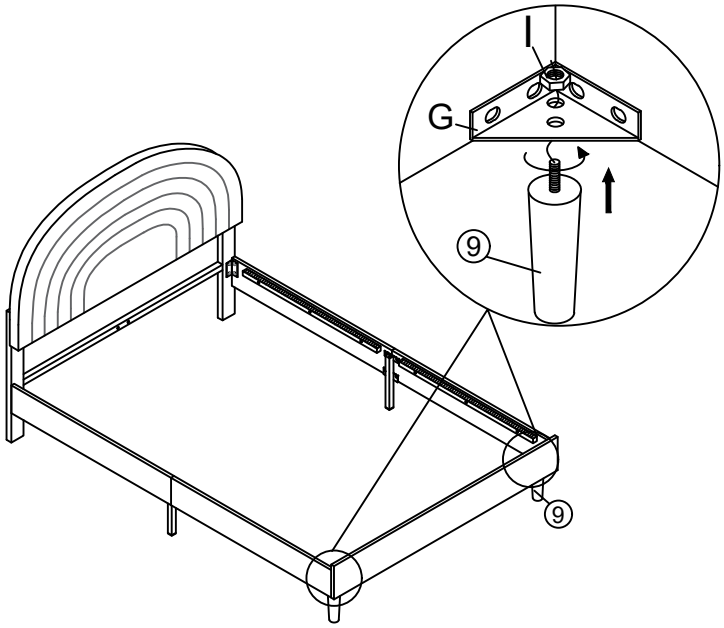

I Screw nut x 2
 M8

Step 8


Fix the Center support bar fittings J to the Headboard cross bar ⑧ and foot boart ⑤ with Bolts D by using Allen key A

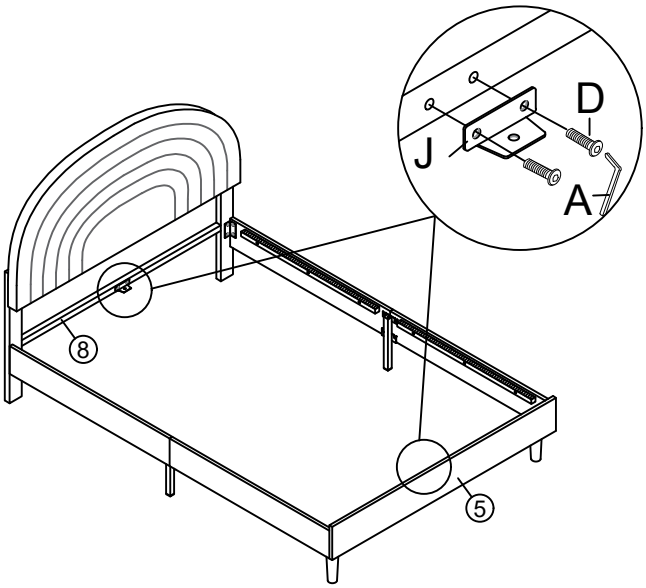

Allen Key	D Bolts x 4	J Center support bar fittings x2
	 M8X18mm	

Step 9


Fix the middle support leg ⑪ to the center support bar ⑩ with Bolts E by using Allen key A.Fix the connected support leg ⑫ to the center support bar with Bolts E by using Allen key A

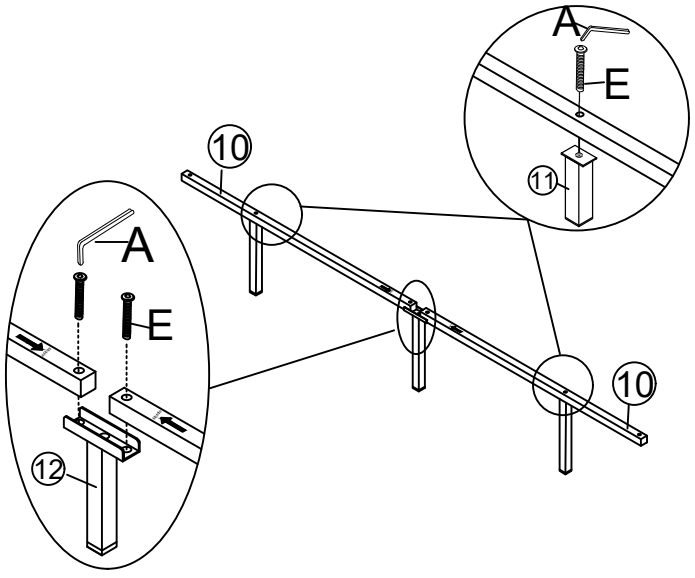

Allen Key	E Bolts x 4
	 M8X40mm

Step 10


Fix the Center support bar ⑩ to the headboard cross bar ⑧ and foot board ⑤ with Bolts E by using Allen key A

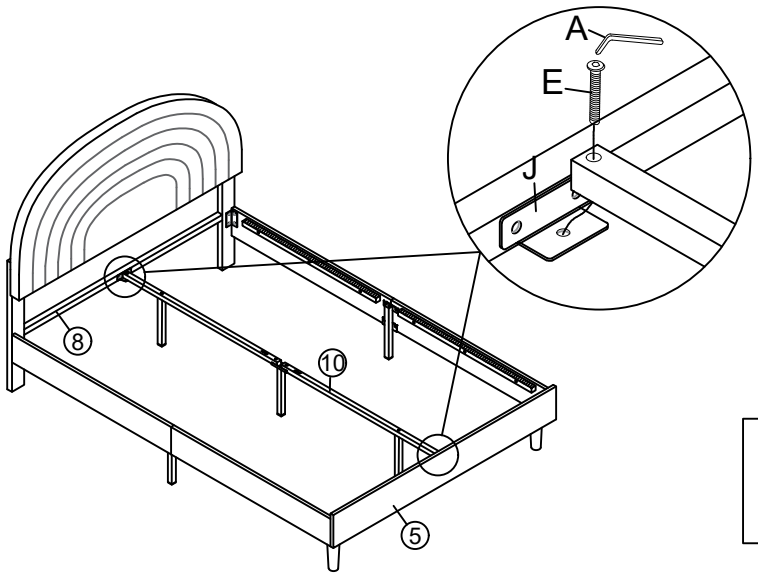

Allen Key	E Bolts x 2
	M8X40mm

Step 11

Fix the cross bar ⑬ to the side rails support legs ⑦ and Connected support legs ⑫ with Bolts E by using Allen key A

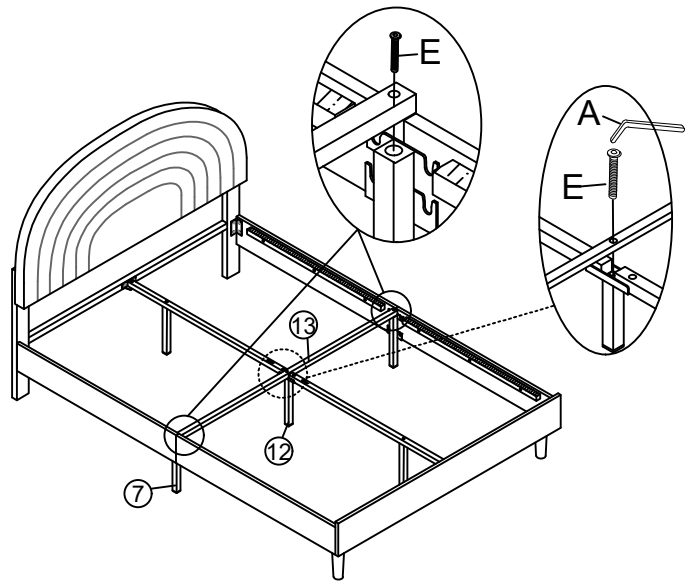

Allen Key	E Bolts x 3
	M8X40mm

Step 12

Fix the slats ⑭ to the side support bar ⑥ ,then assemble is finished,now please tighten all hardware and enjoy the bed.

