



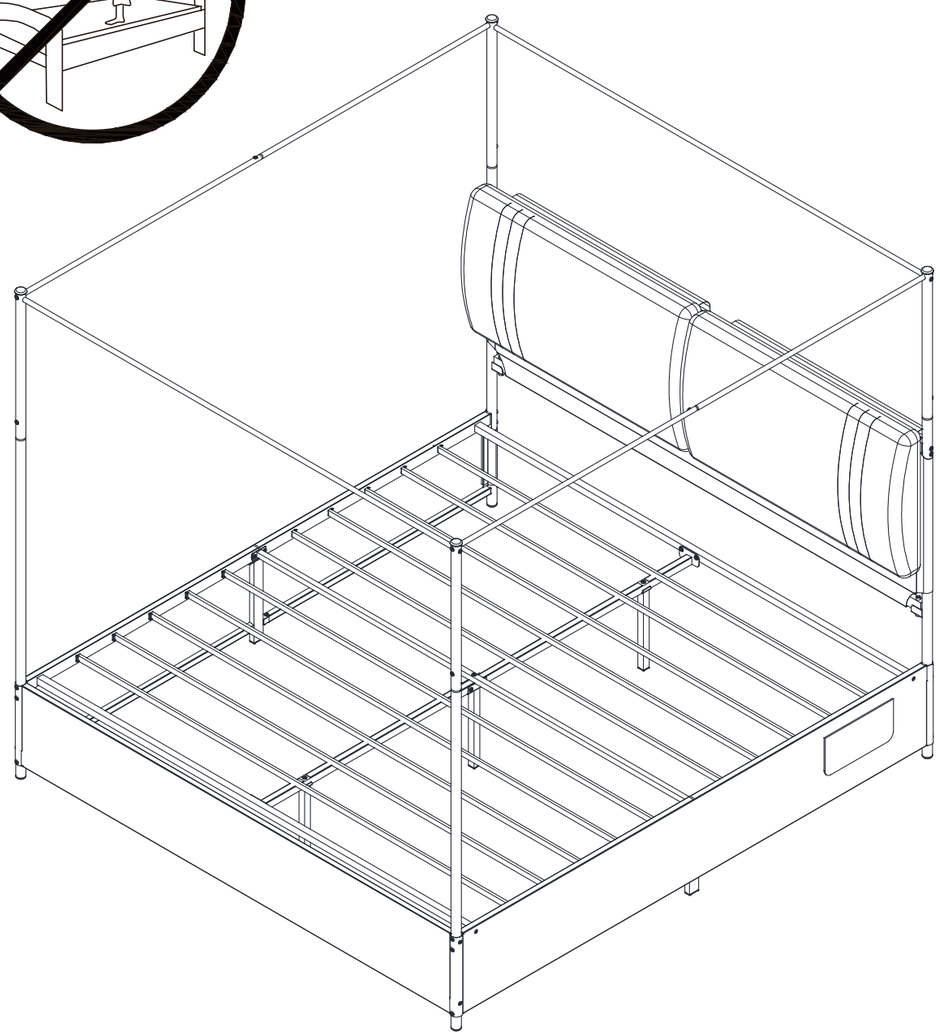


Finish

BED FRAME

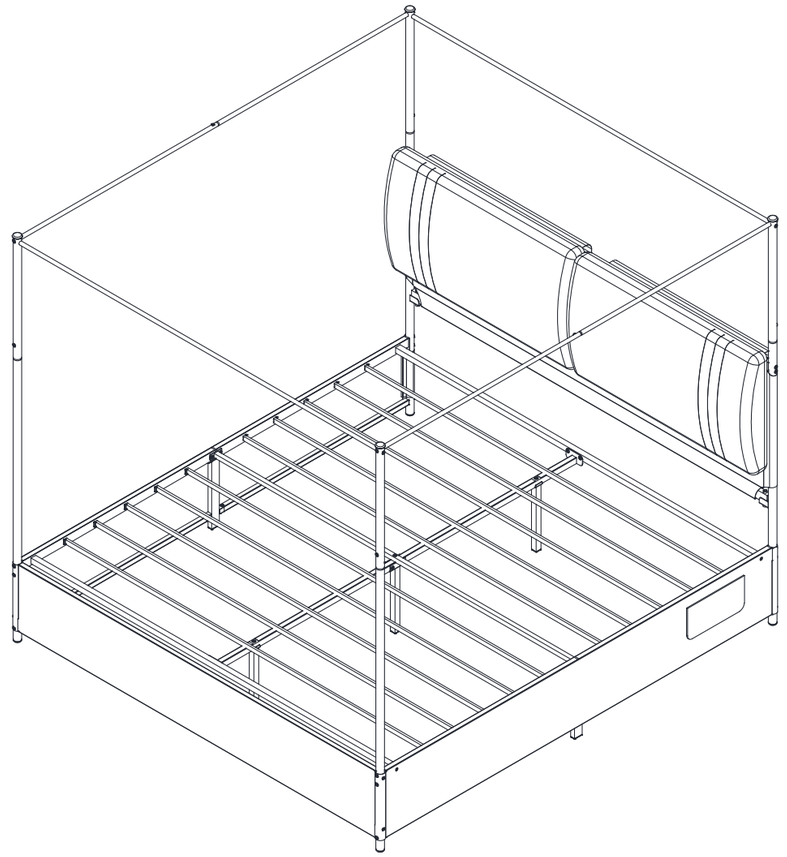

Thank you for choosing our products, please assemble and use it following the instructions.


Assembly Instruction

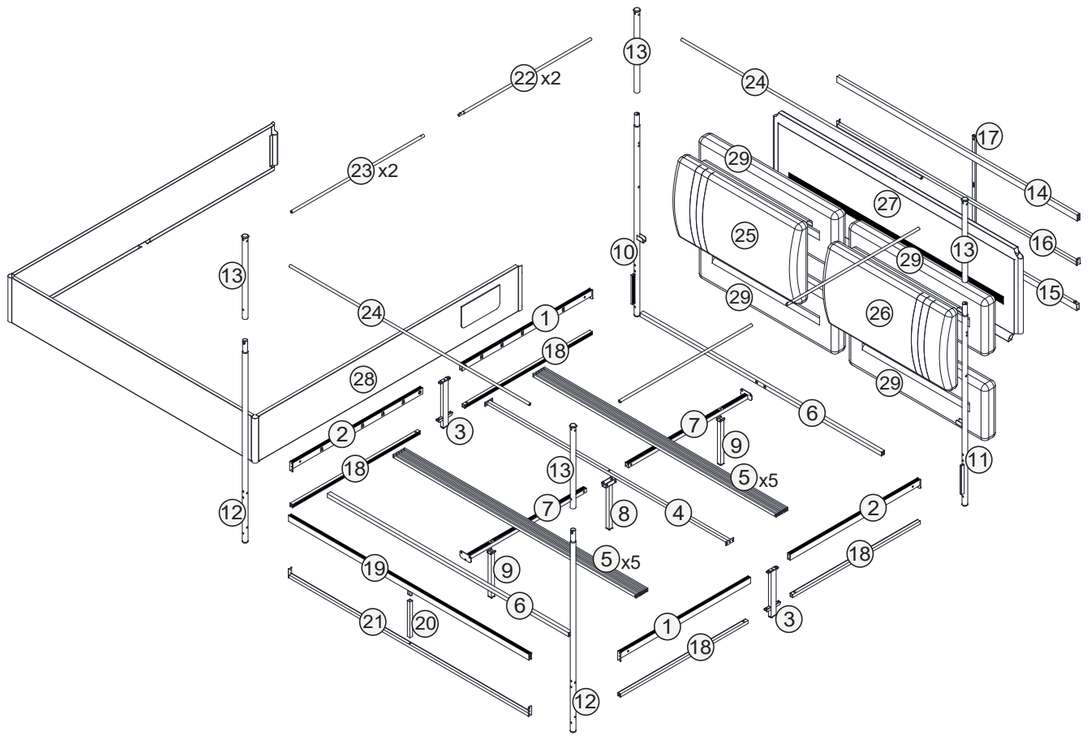


B704-1400/1600/1800 **Important Note**

HARDWARE NOTE :
1.Two or more people are required for assembly
2.Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.

21

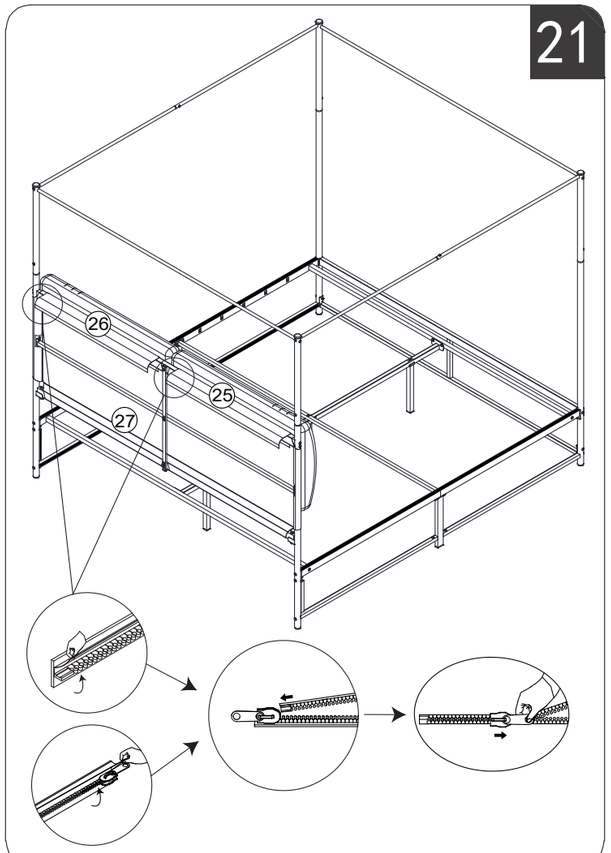


22

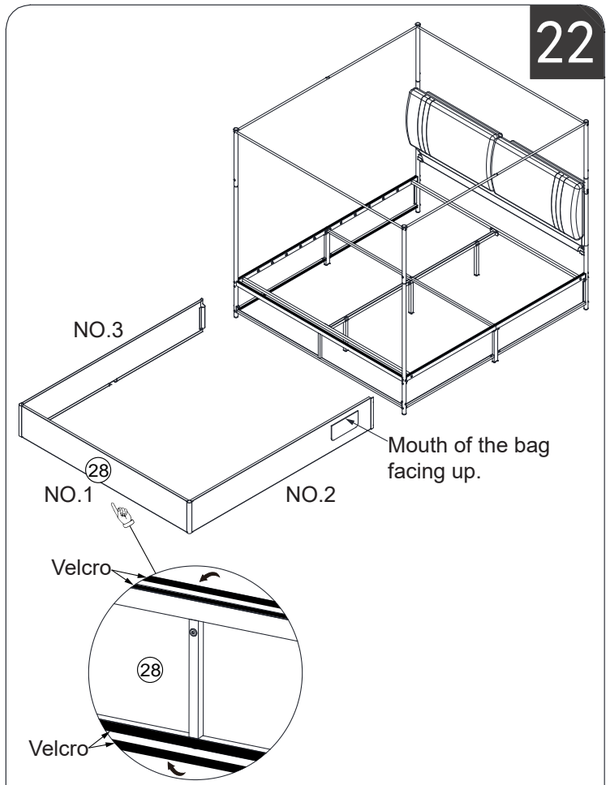


Attach part 28 to Velcro from top to bottom in the order shown in the drawing.

23

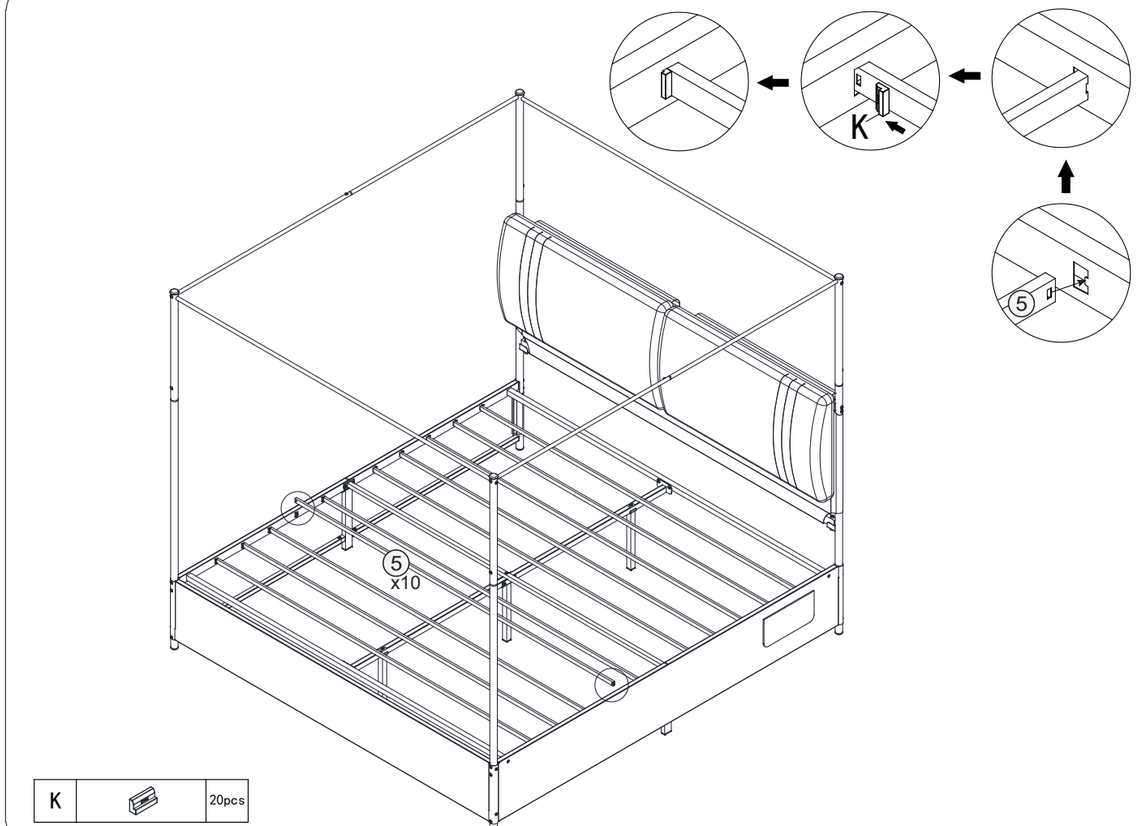


K		20pcs


17

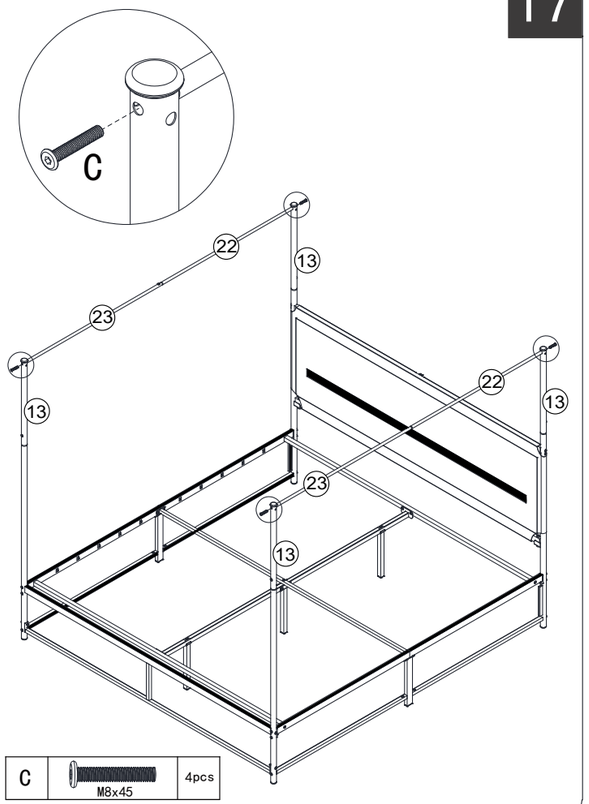


18

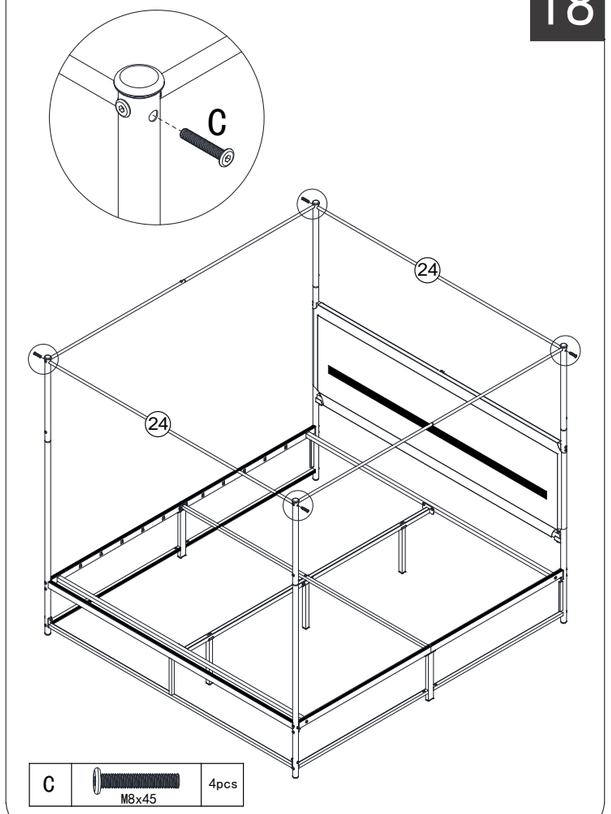


Components

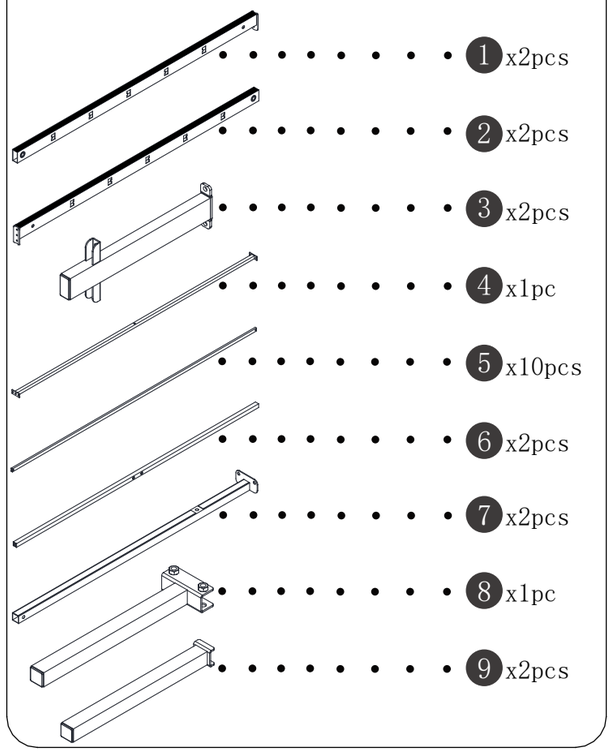

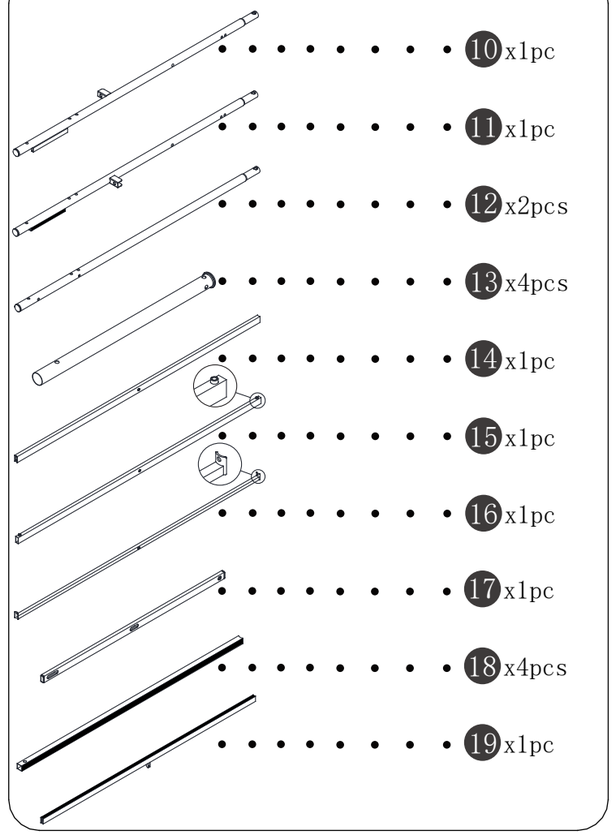


19

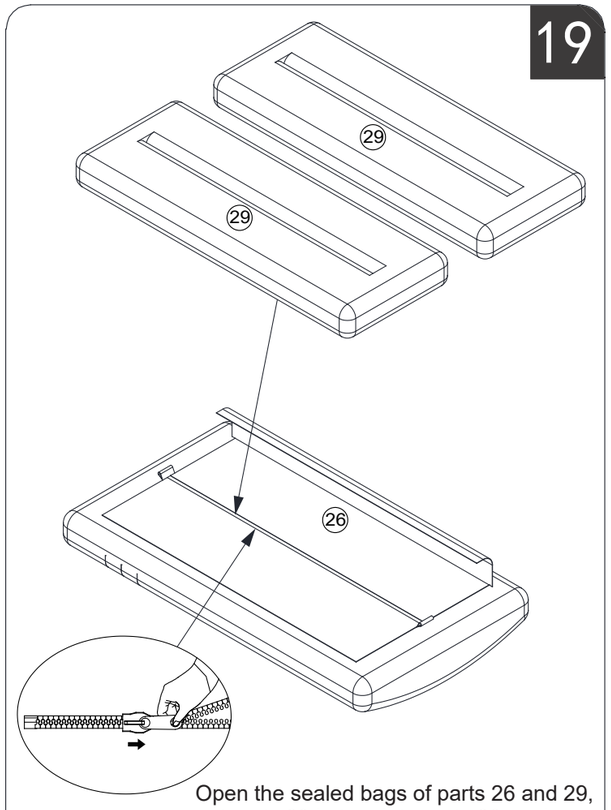



Open the sealed bags of parts 26 and 29, put parts 29 in turn into parts 26, and finally tighten the zipper.

20

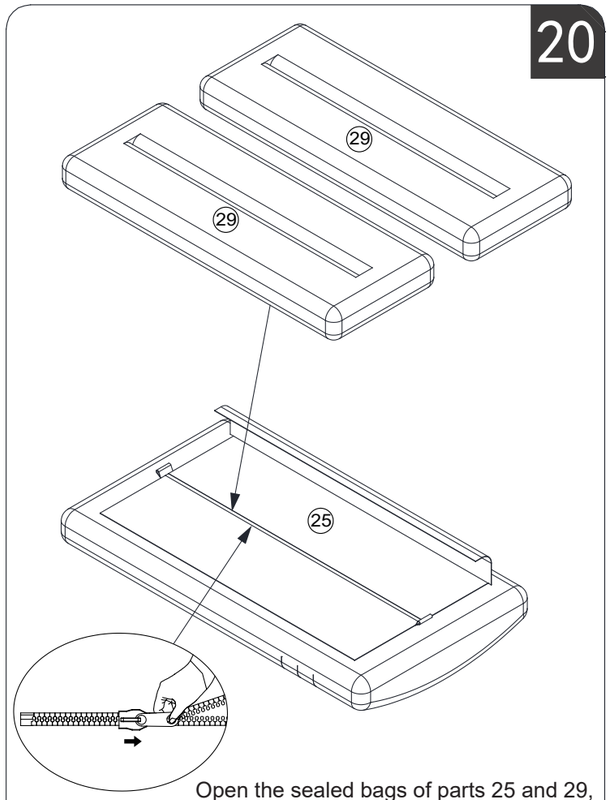


Open the sealed bags of parts 25 and 29, put parts 29 in turn into parts 25, and finally tighten the zipper.

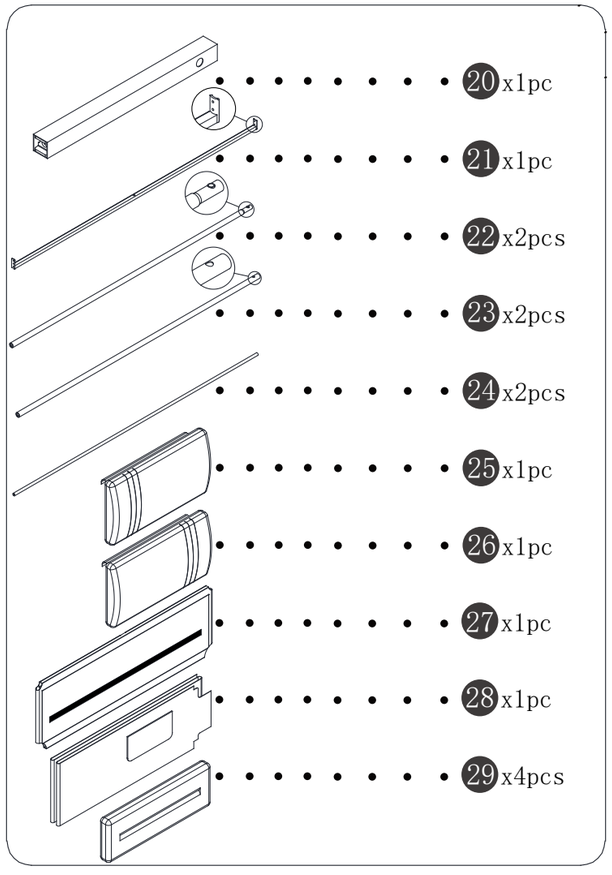


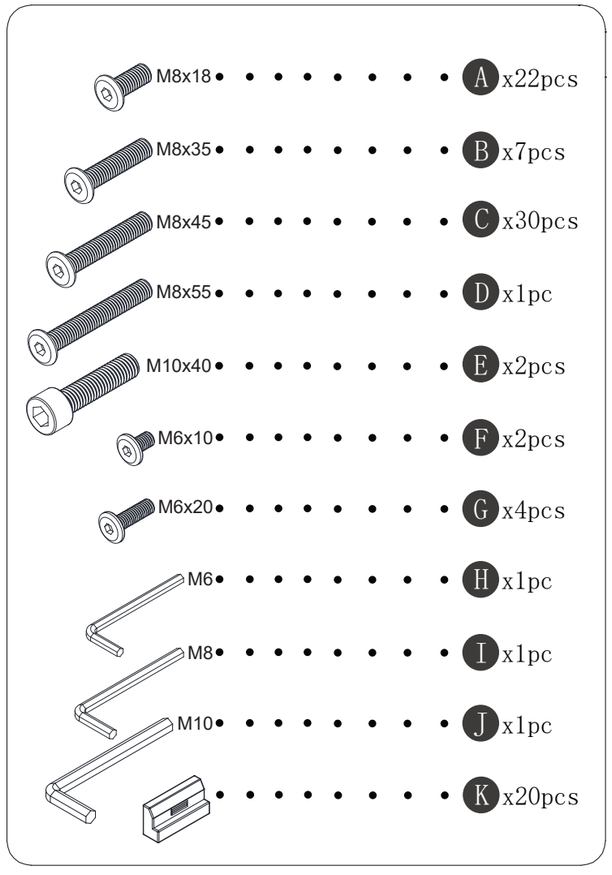

1

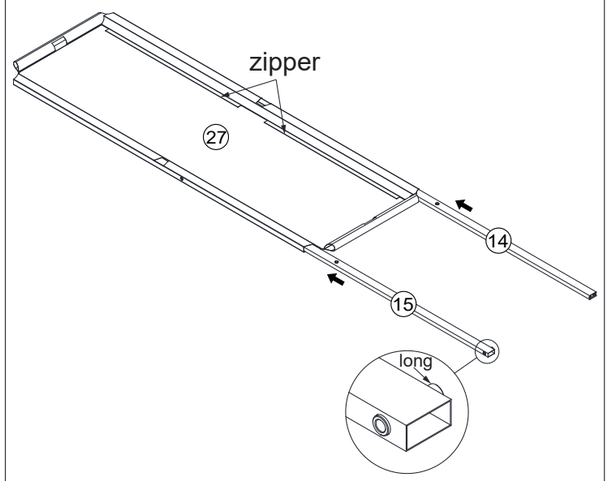


2

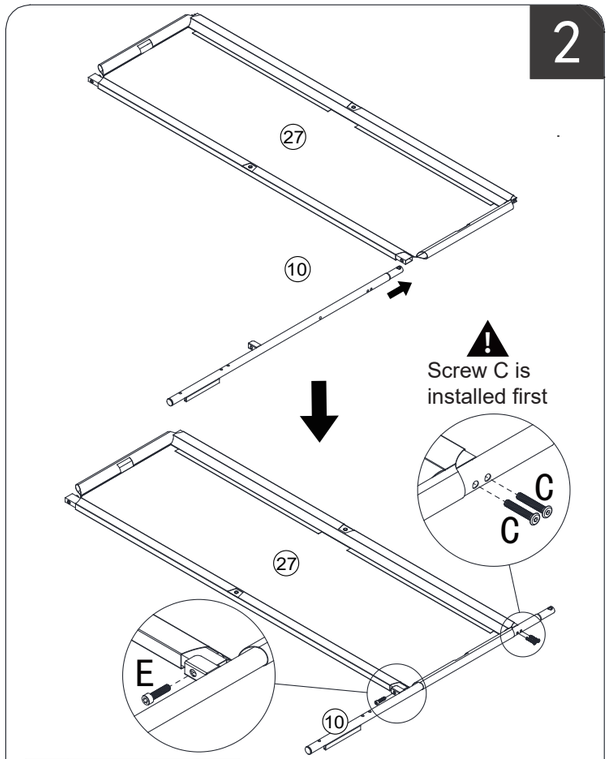

C	M8x45	2pcs
E	M10x40	1pc


Do not fully tighten the screws yet.

13

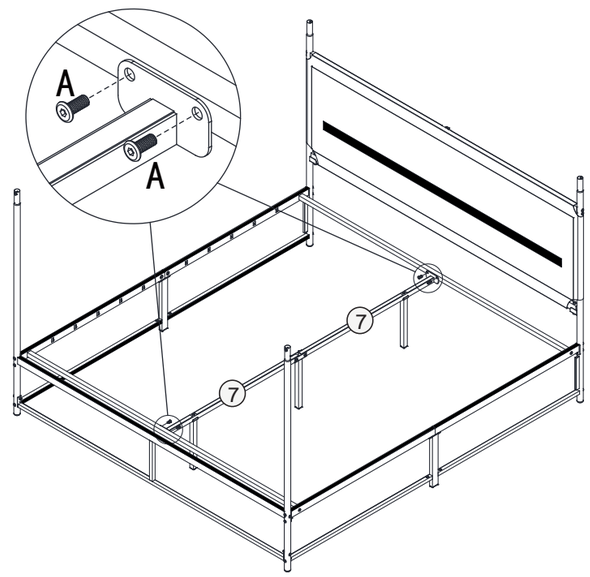


A	M8x18	4pcs

14

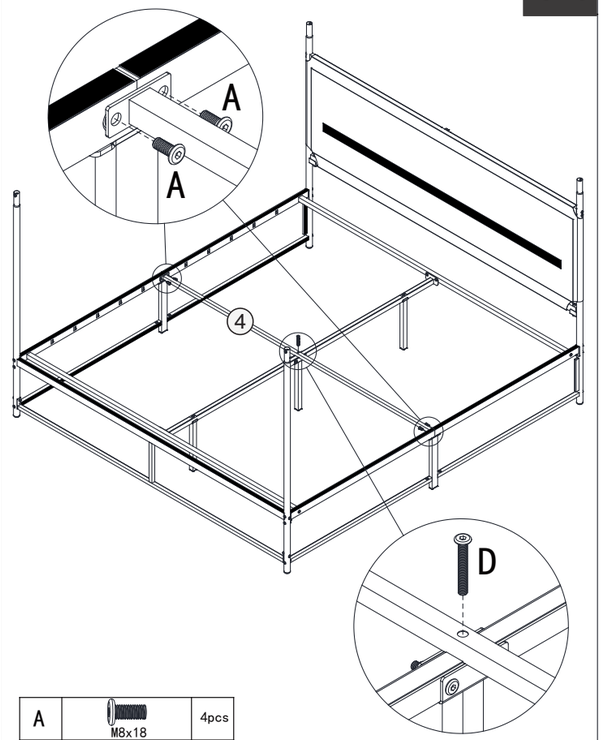

A	M8x18	4pcs
D	M8x55	1pc


3

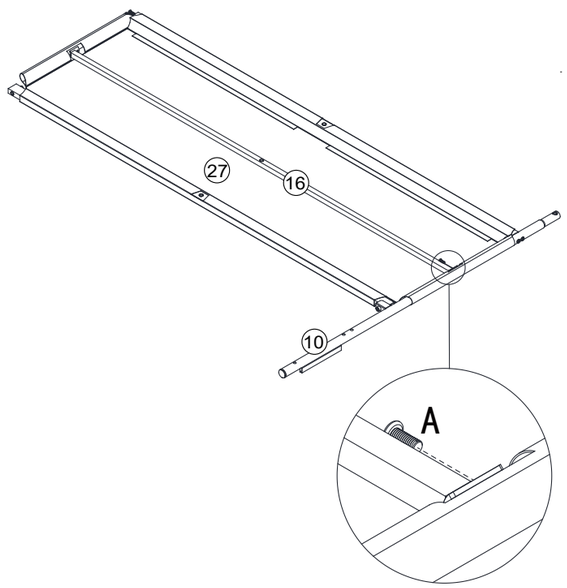

Do not fully tighten the screws yet.

A	M8x18	1pc


4

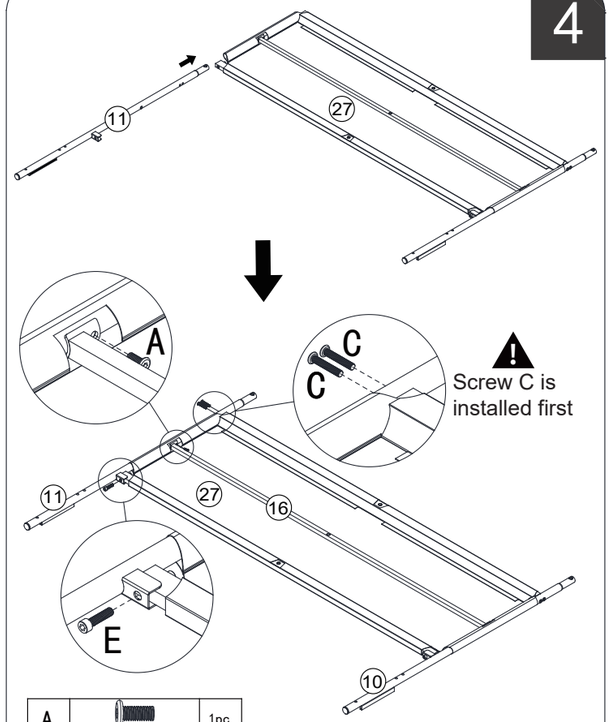

A	M8x18	1pc
C	M8x45	2pcs
E	M10x40	1pc

Fully tighten all the screws.


15

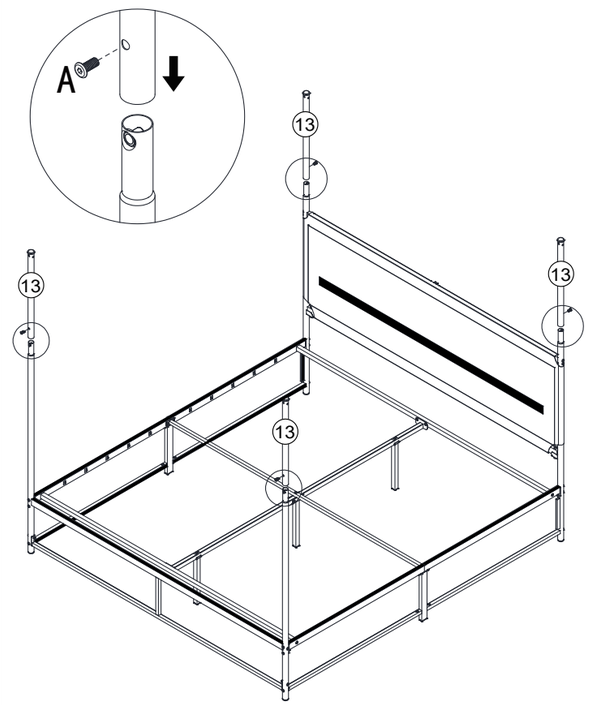

A	M8x18	4pcs


16

x2

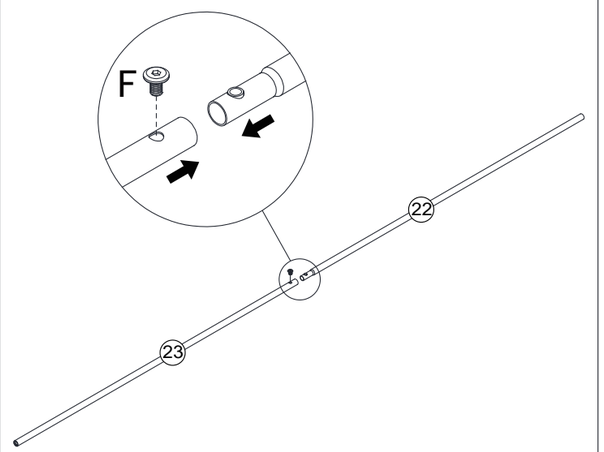


F	M6x10	2pcs

9

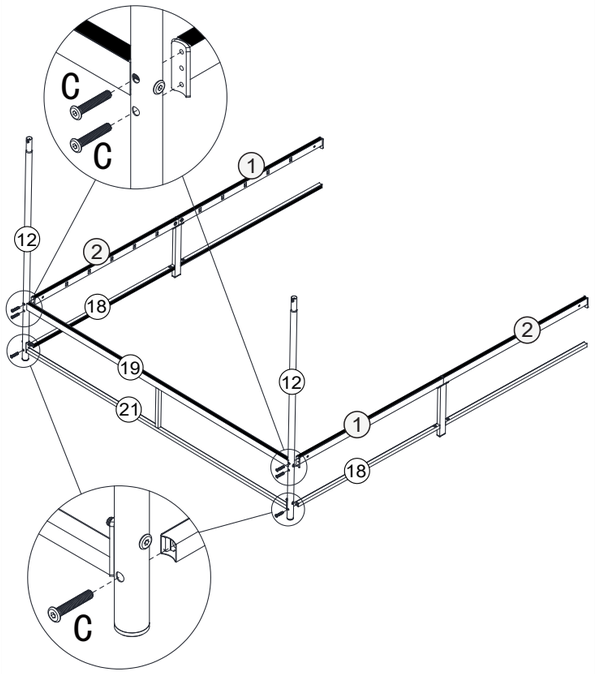


C	M8x45	6pcs

10

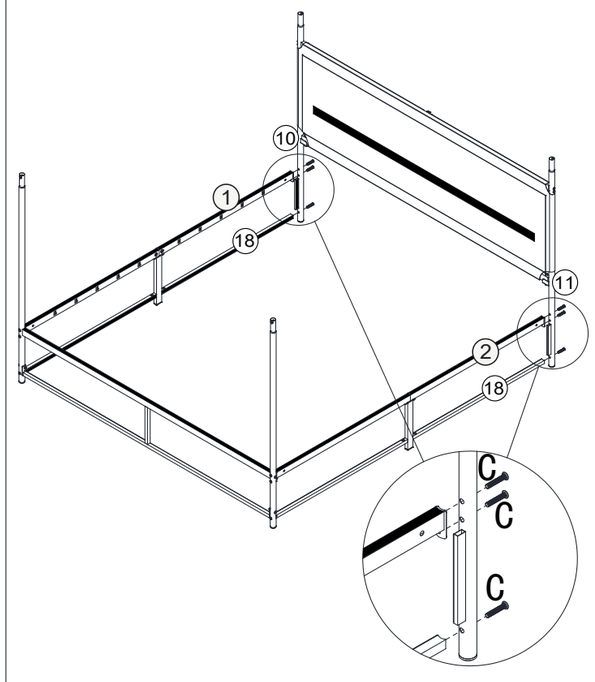

C	M8x45	6pcs


5

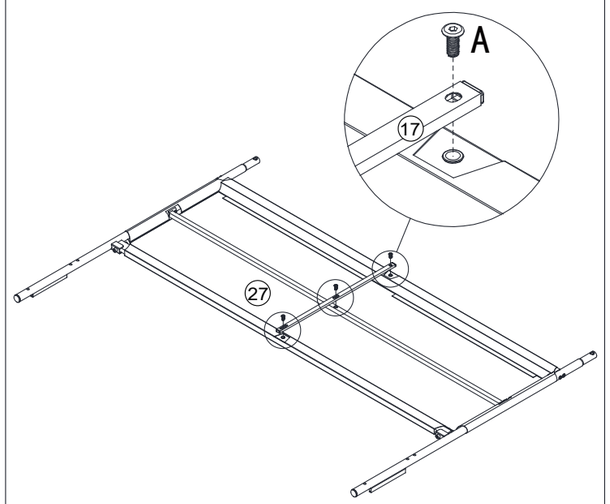

A	M8x18	3pcs


⚠ Fully tighten all the screws.

6

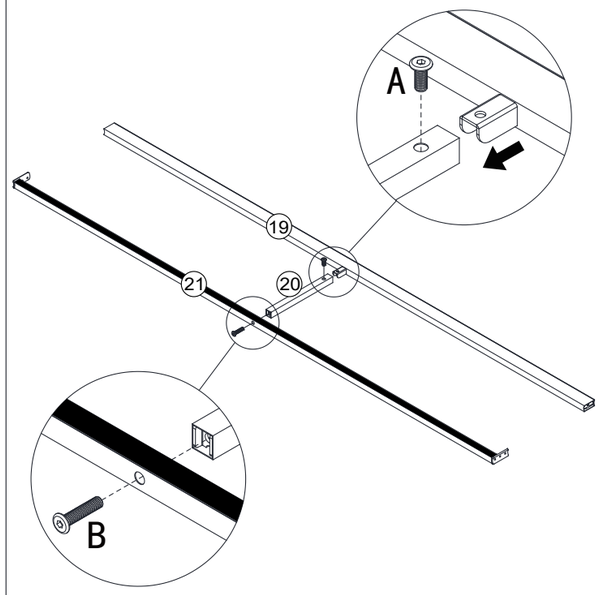


A	M8x18	1pc
B	M8x35	1pc

11

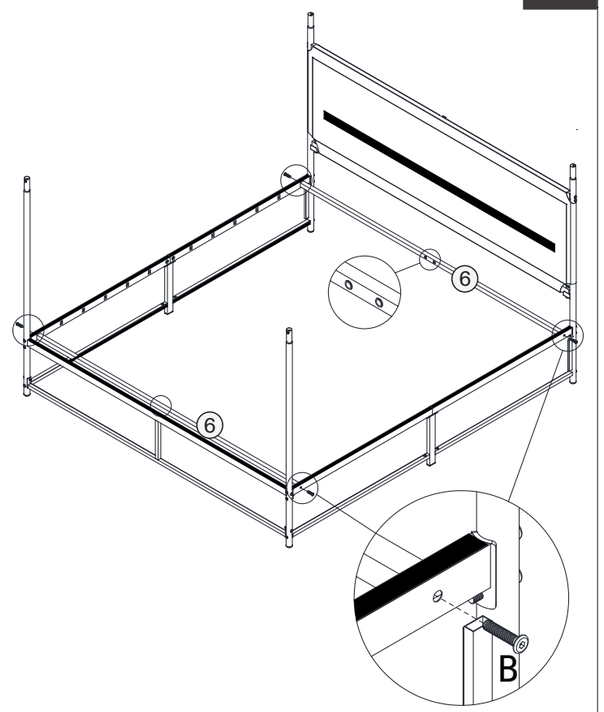


B	M8x35	4pcs

12

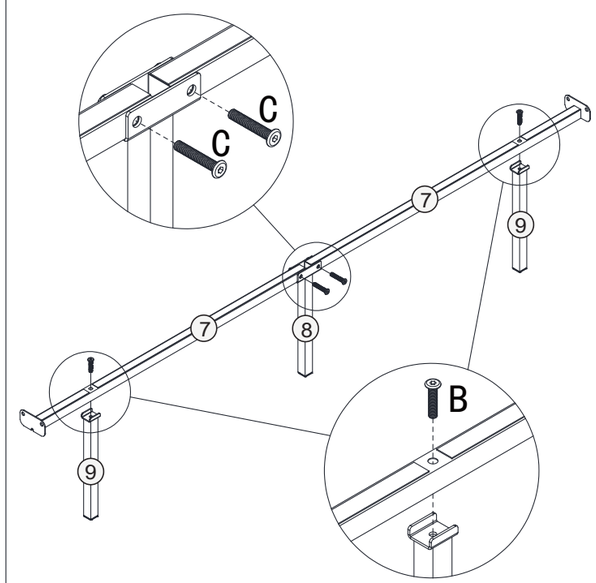

B	M8x35	2pcs
C	M8x45	2pcs


7

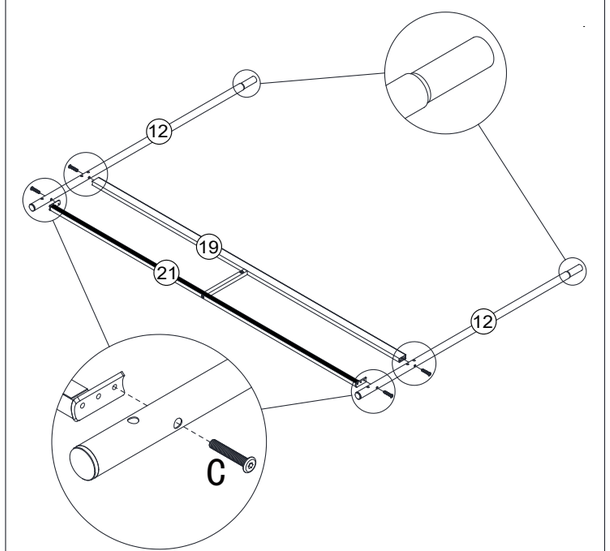

C	M8x45	4pcs

8

x2

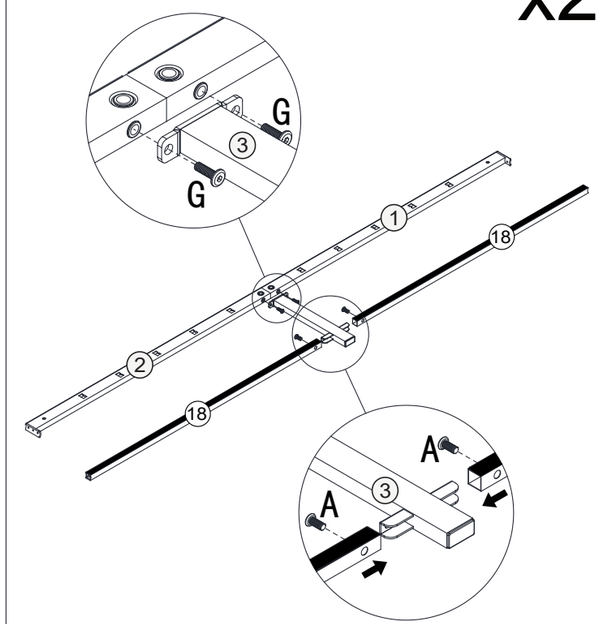

A	M8x18	4pcs
G	M6x20	4pcs