

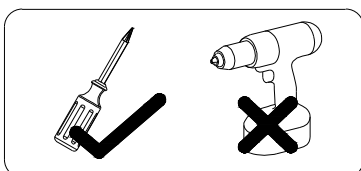
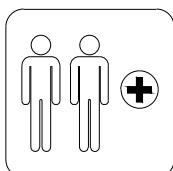



HYSC-008/HYSC-009

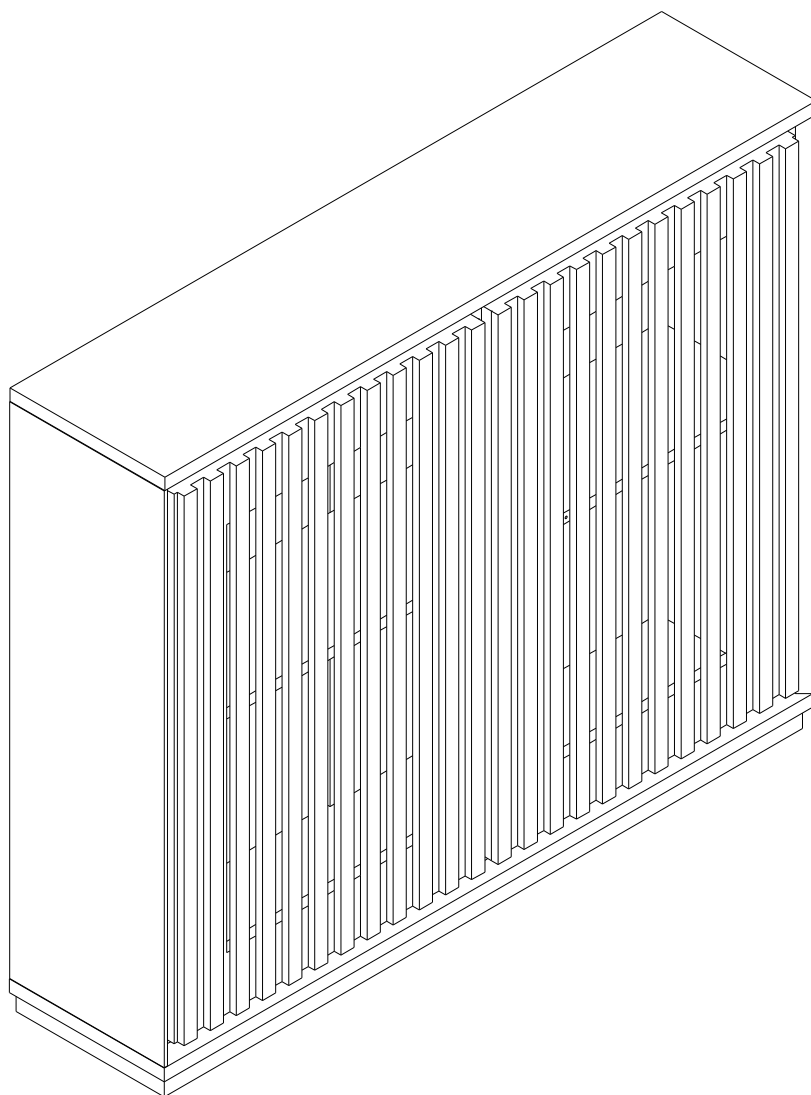

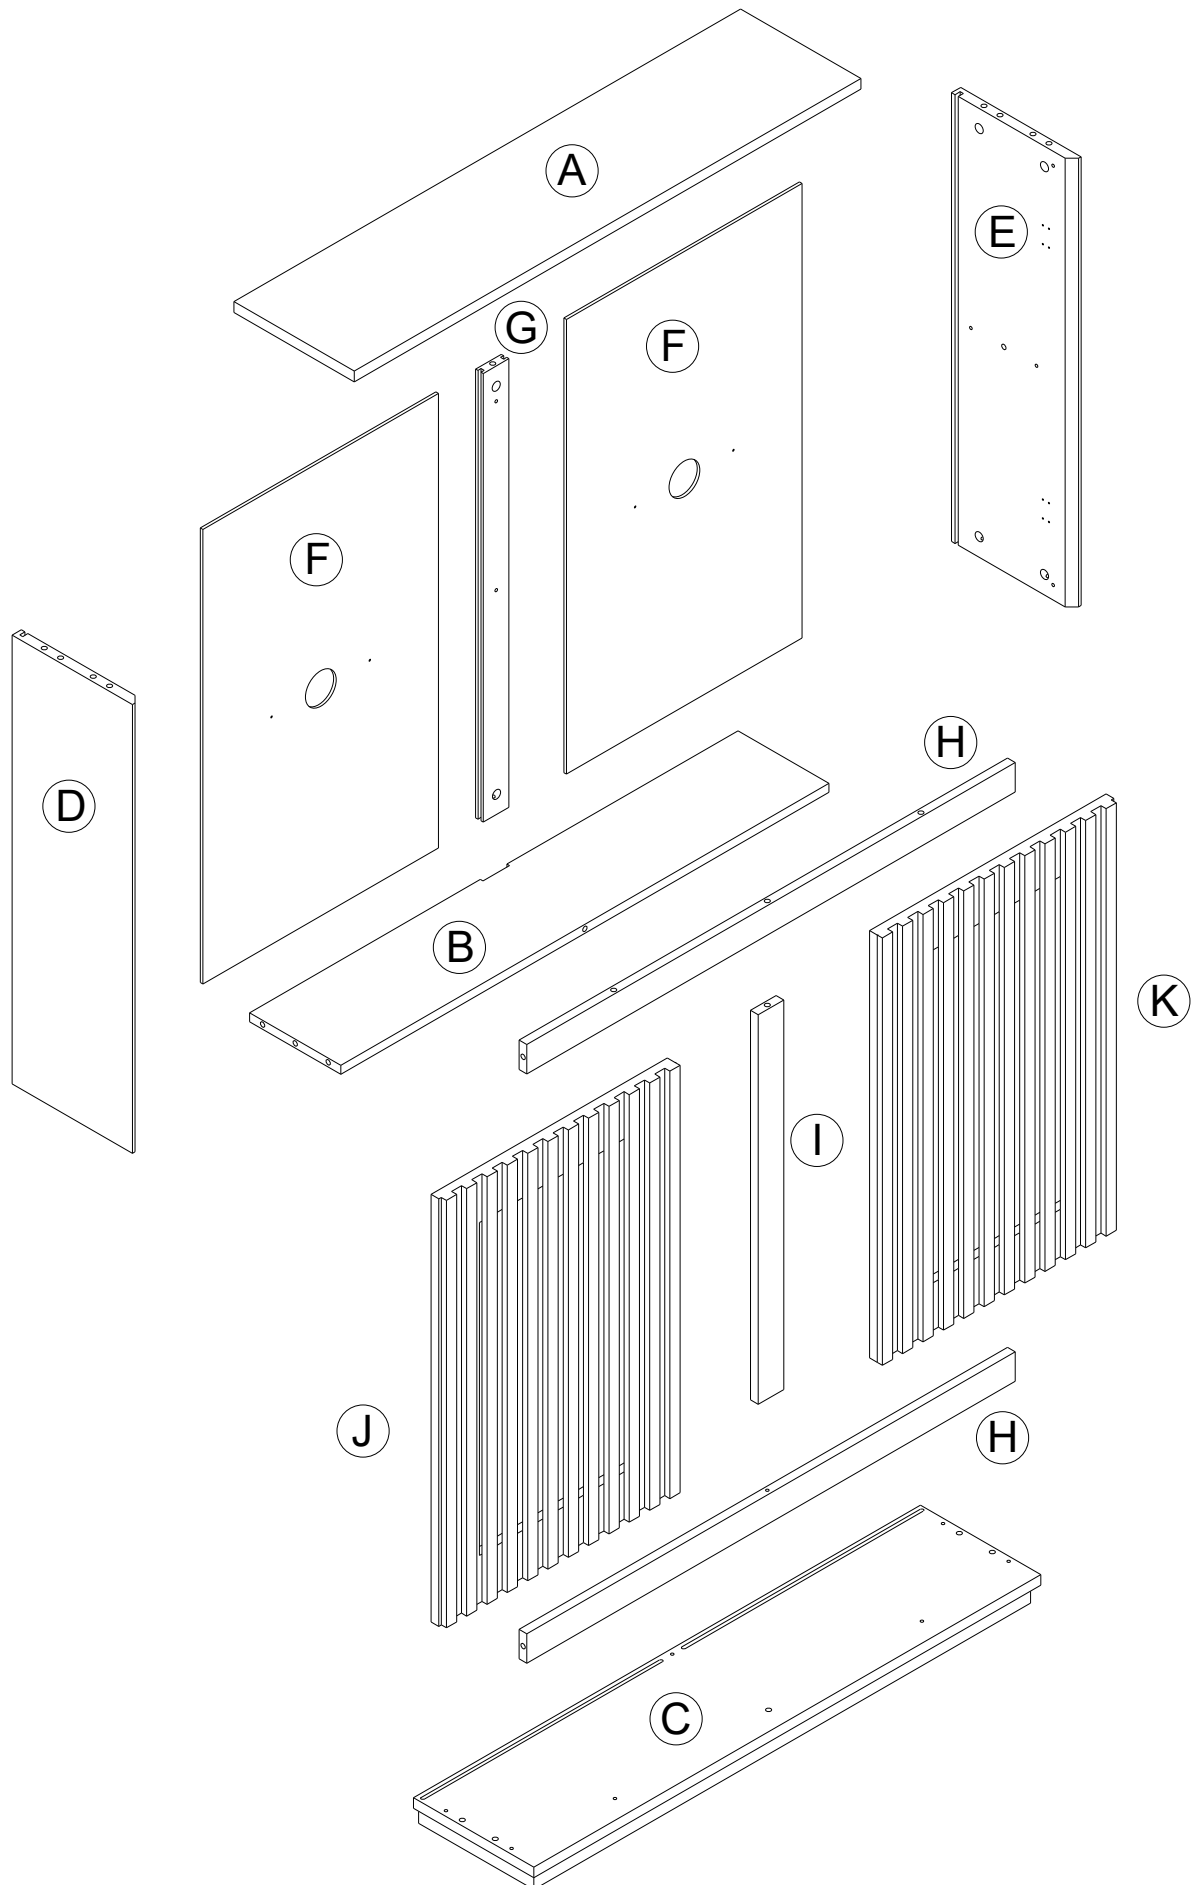


PARTS


A x1

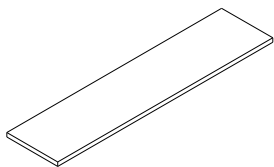


B x1

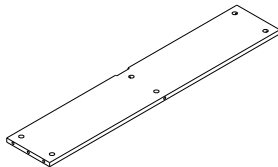


C x1

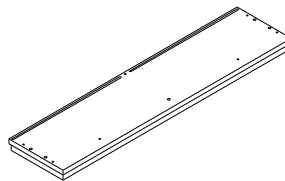


D x1

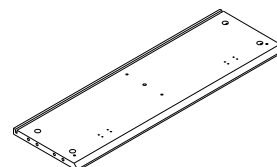


E x1

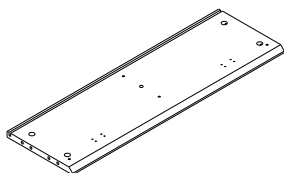


F x2

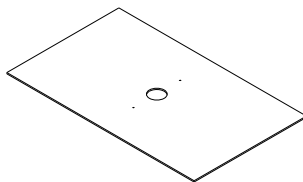


G x1

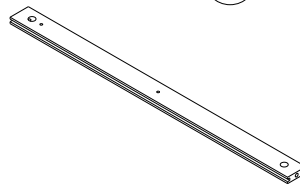


H x2

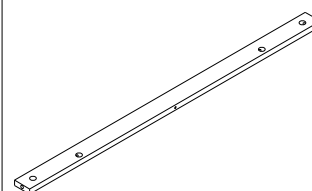


I x1

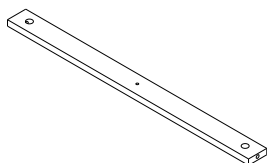

J x1

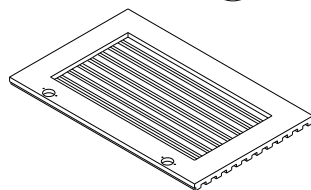


K x1

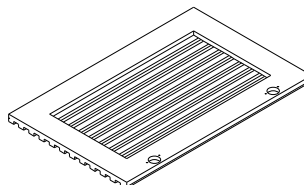


HARDWARE


1 x12+1
ø8x30mm



2 x26+2




3 x26+2




4 x24+2
ø3x12mm



5 x4



6 x4




7 x4
ø3x15mm





8 x2



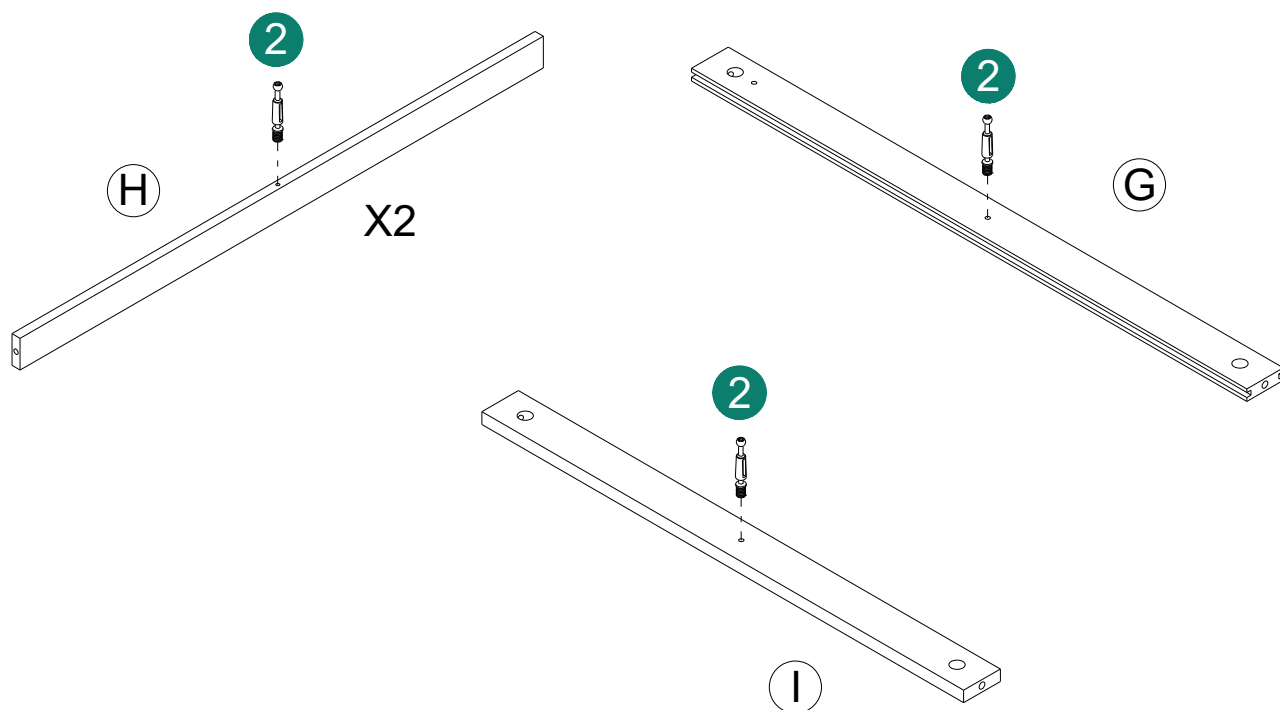


2x4

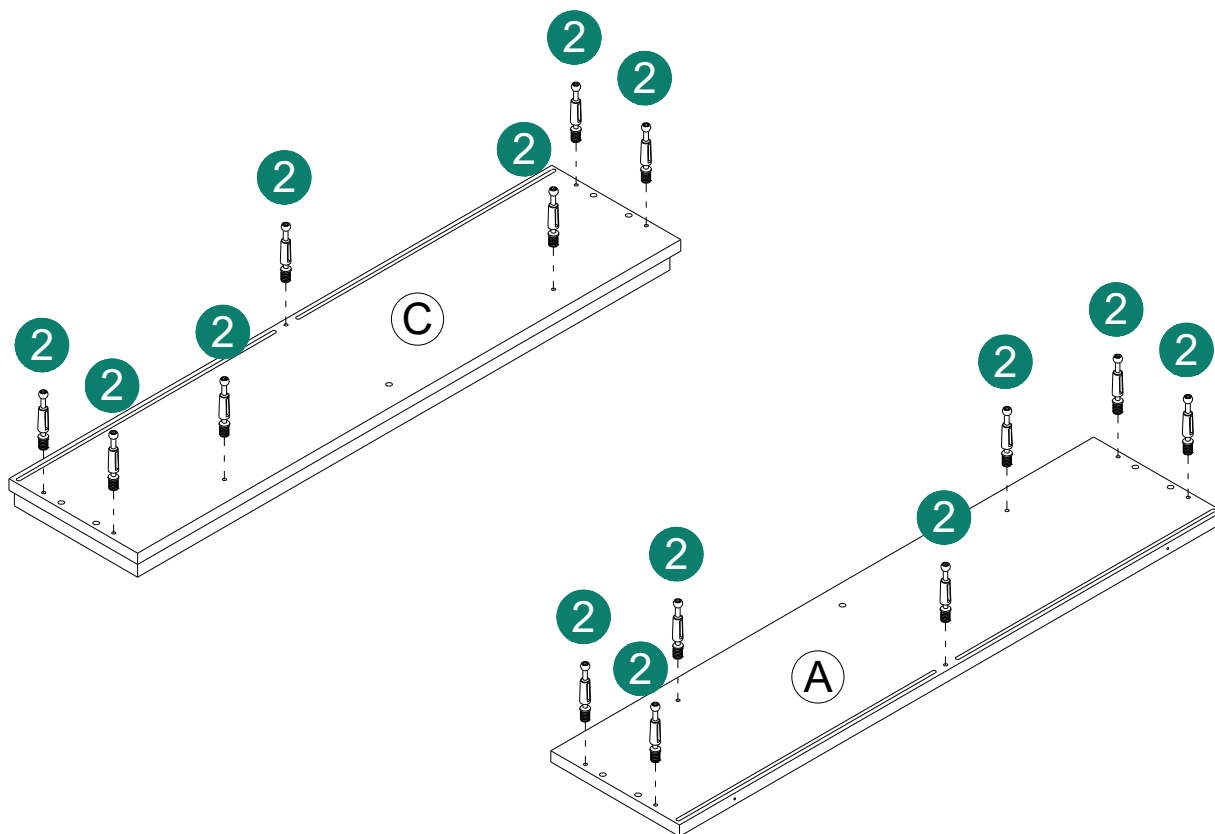



2x14



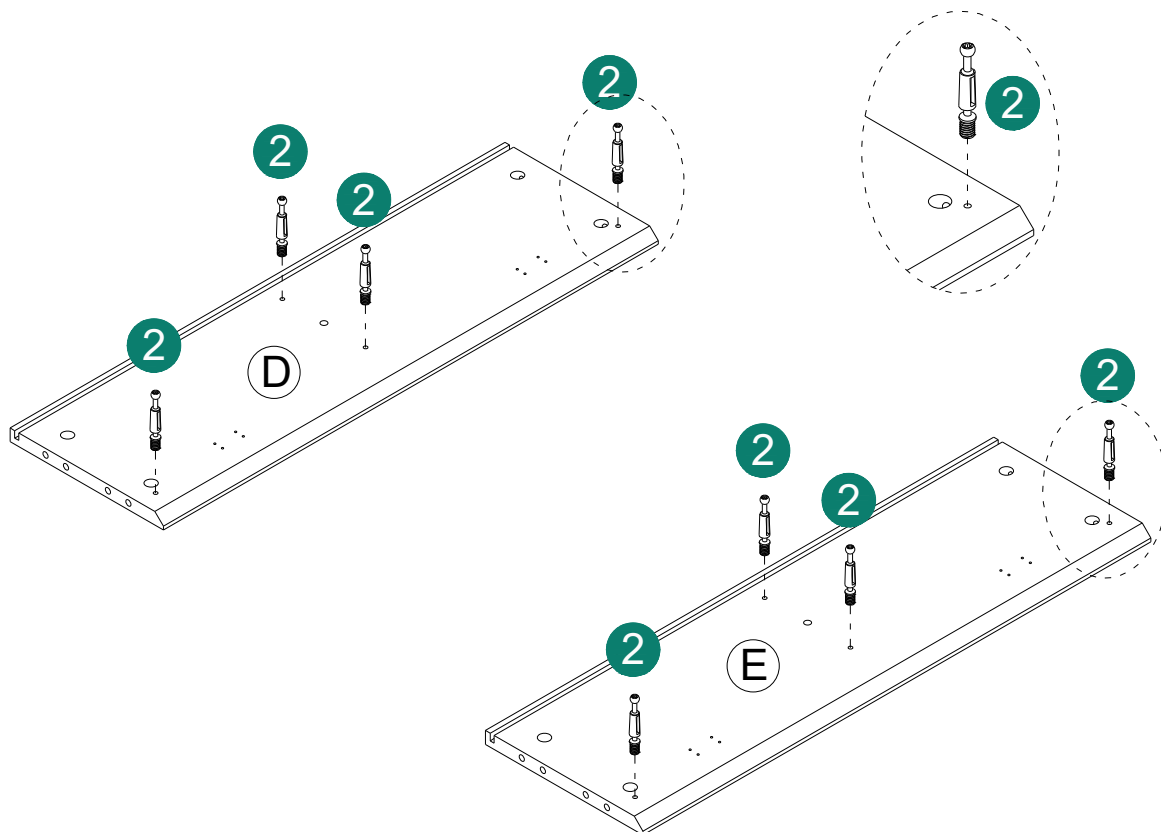


2x8

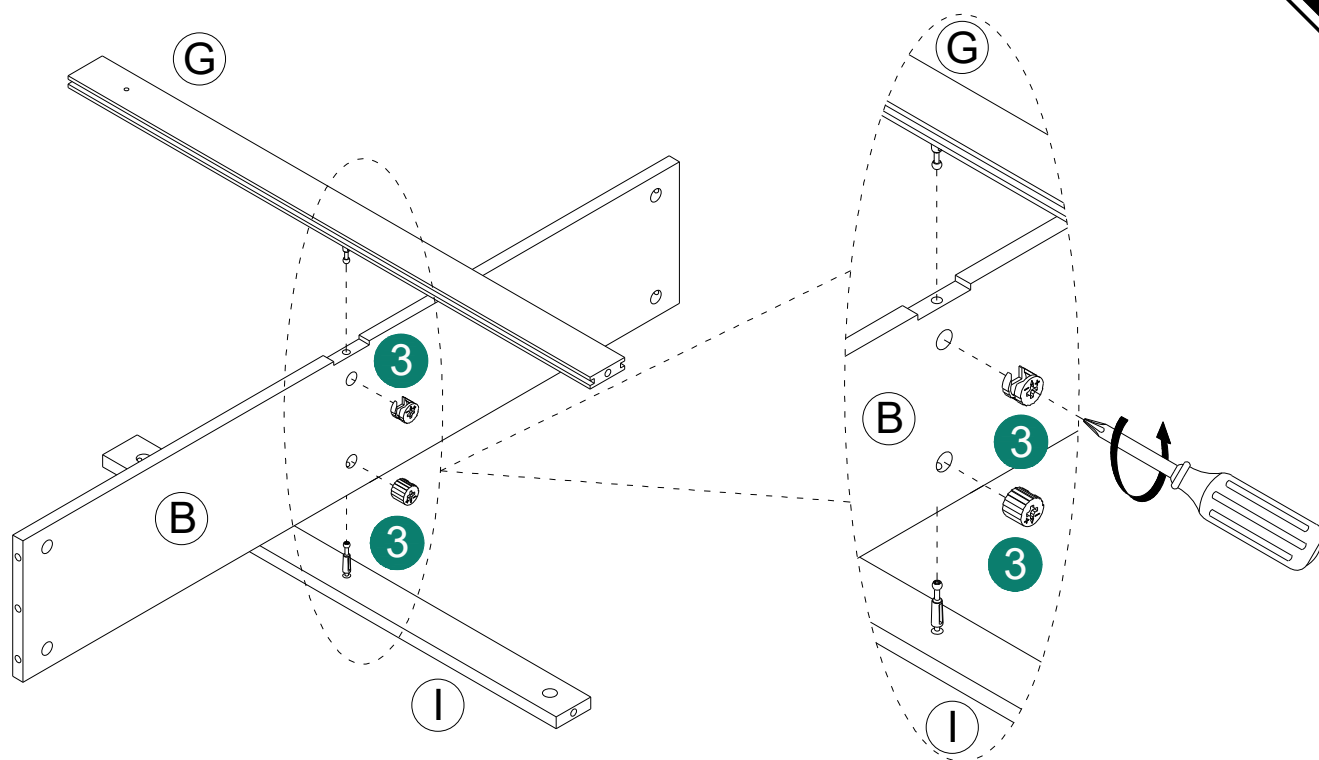


3x2



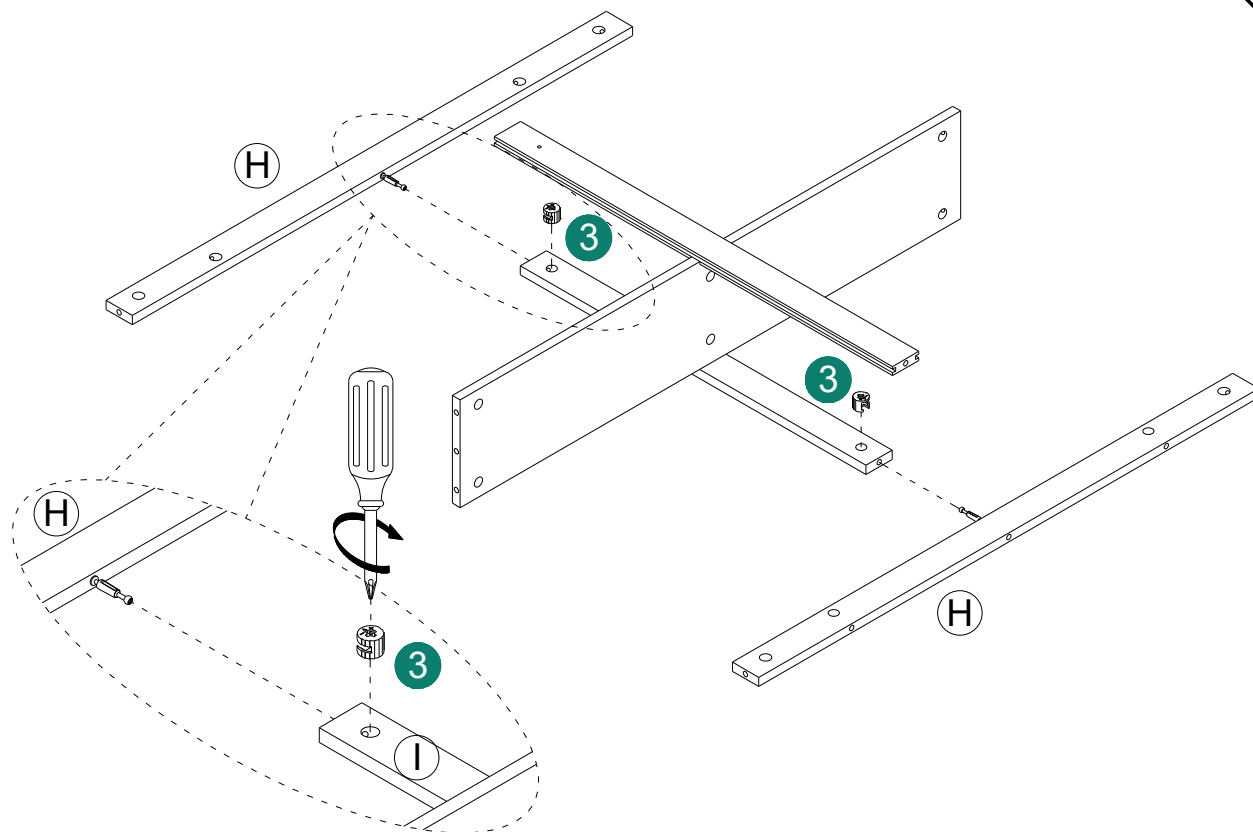


3x2

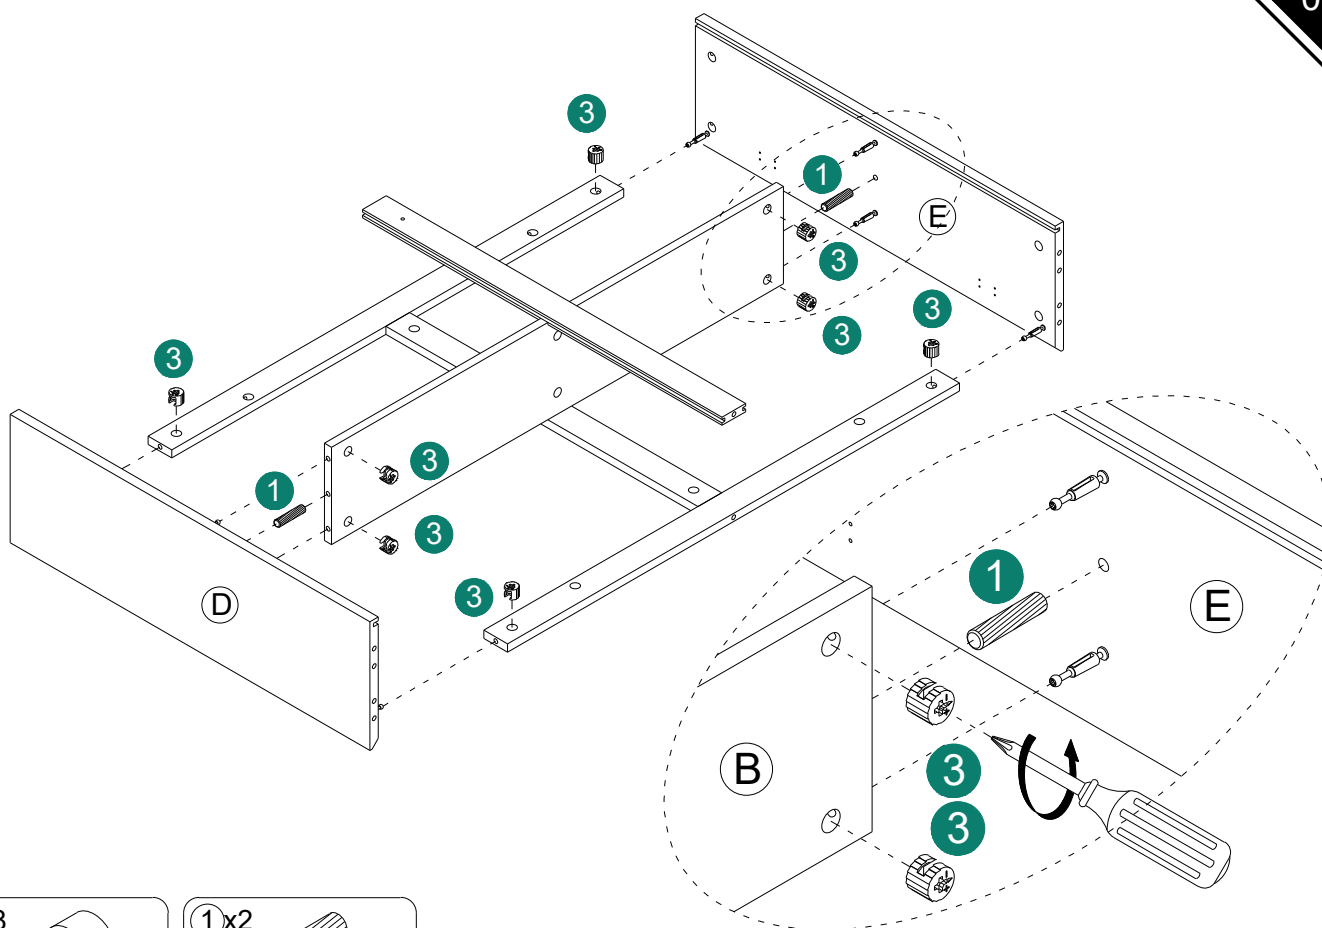


3x8



1x2



 $\phi 8 \times 30 \text{ mm}$

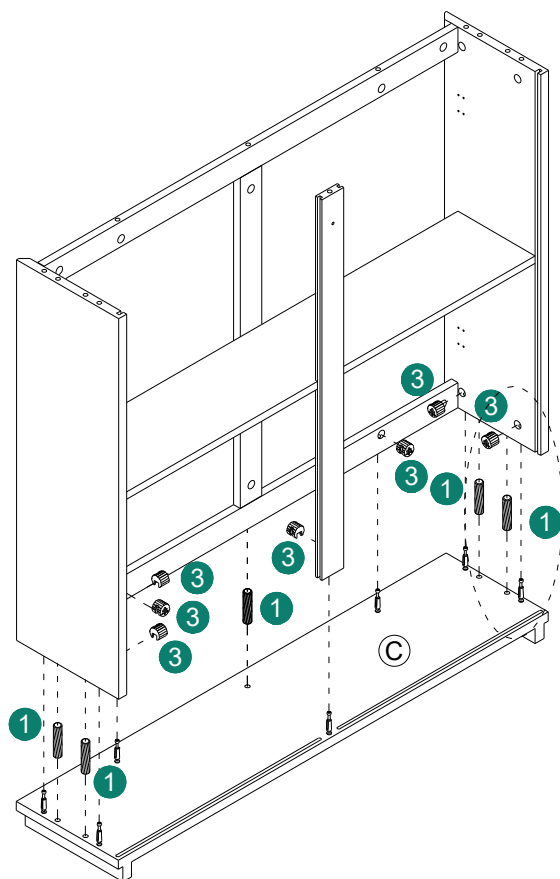




3x7




1x5



ø8x30mm

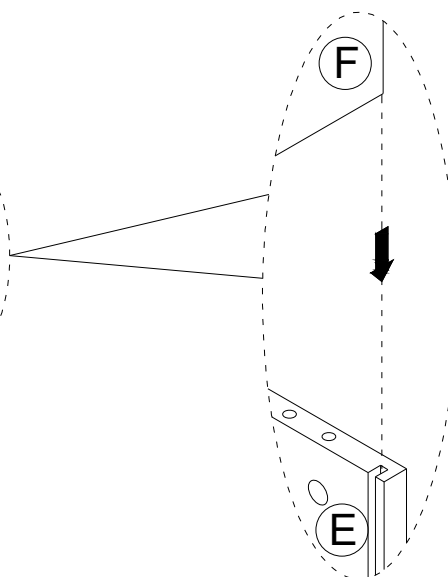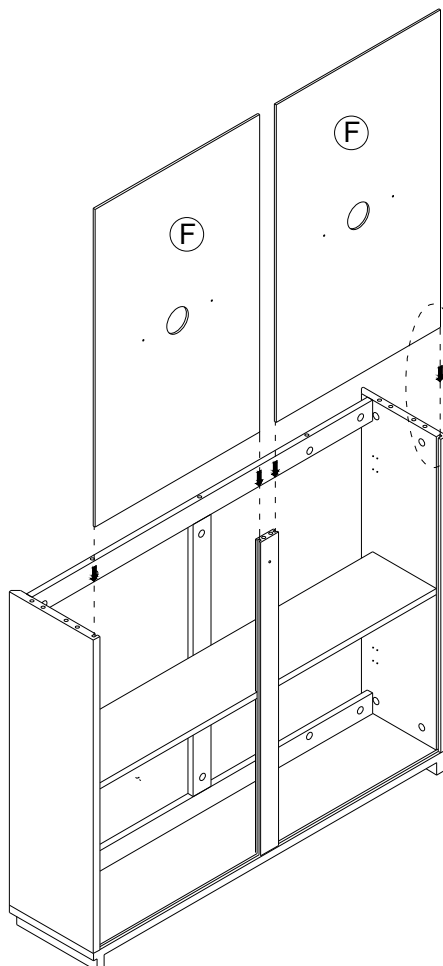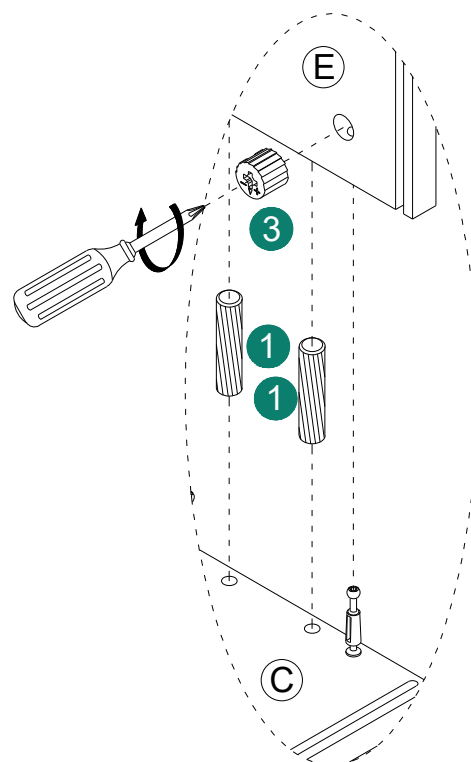


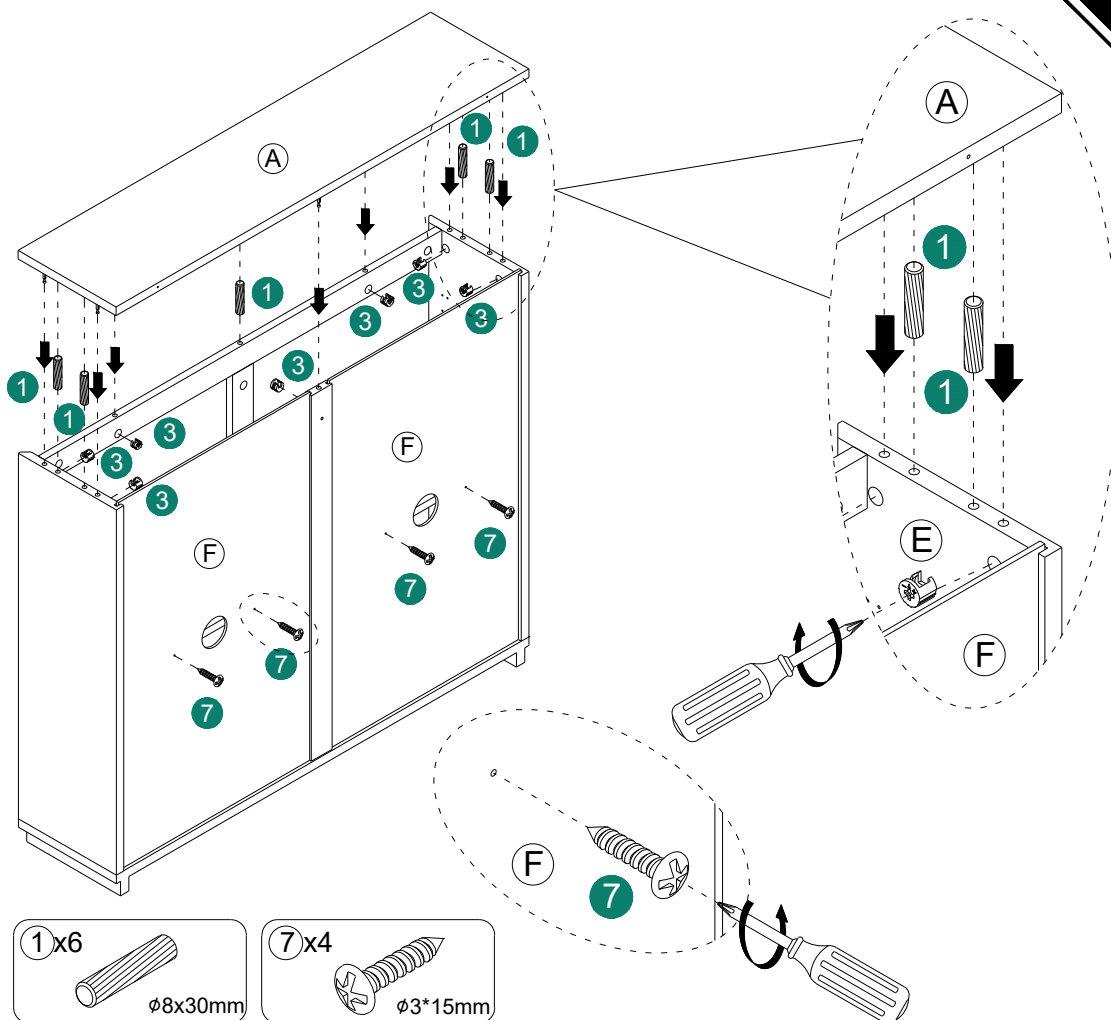

3x7



1x6




ø8x30mm


7x4



ø3*15mm

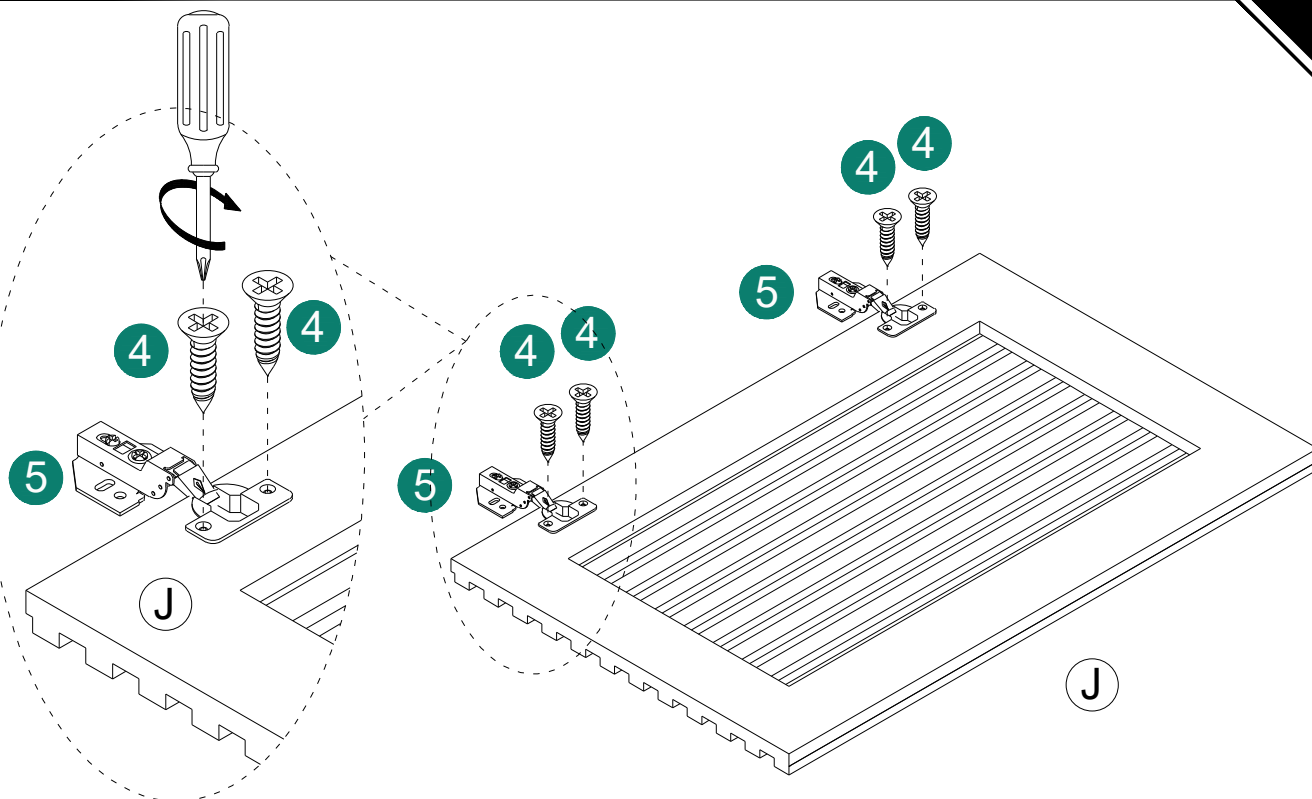







5x2





4x4



ø3*14mm

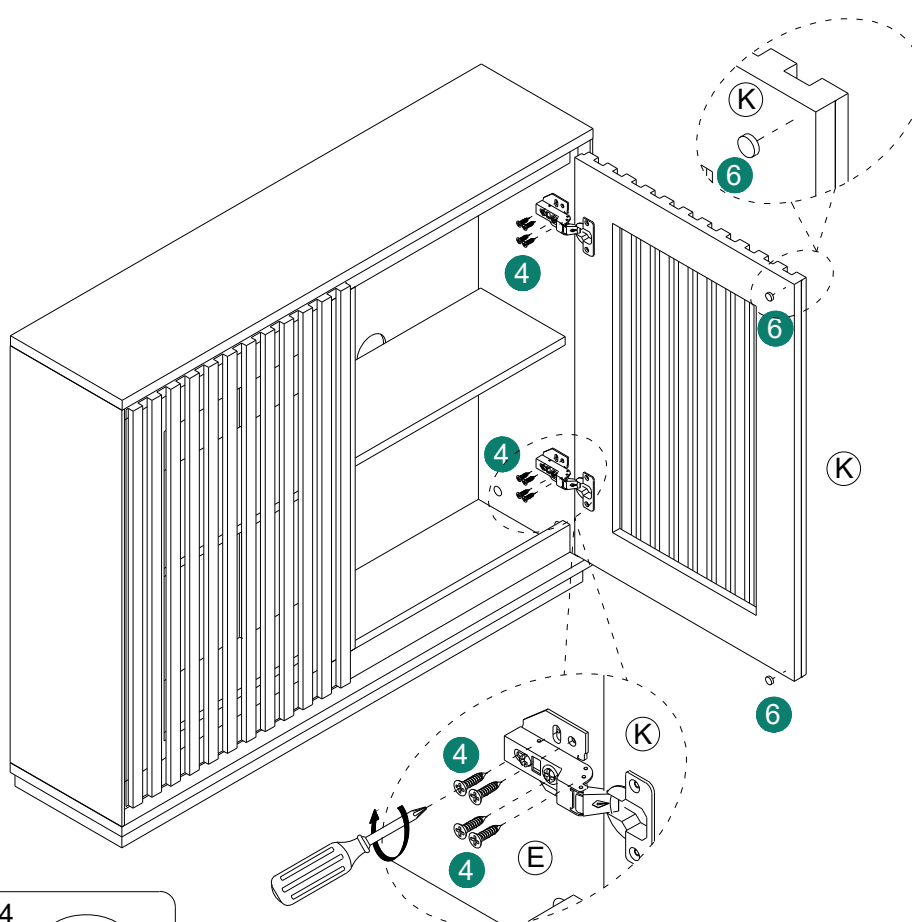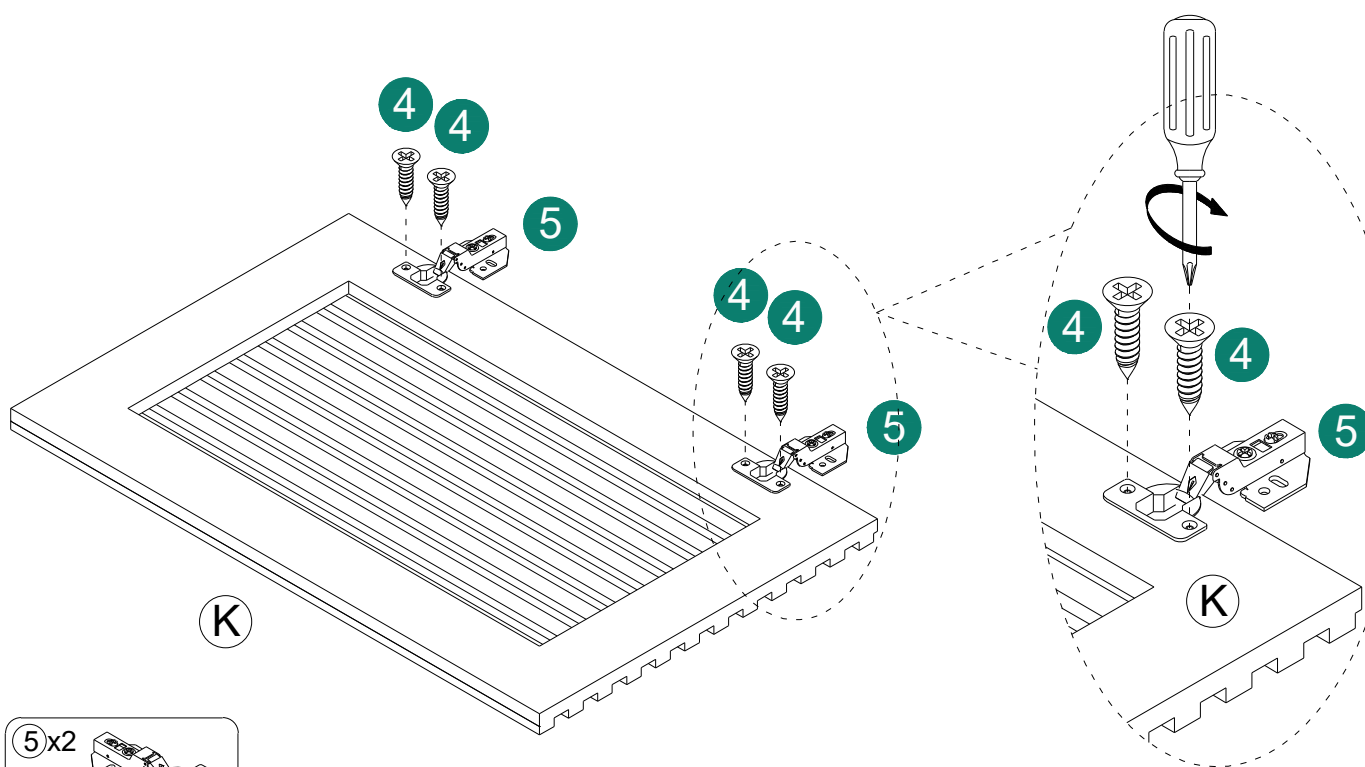

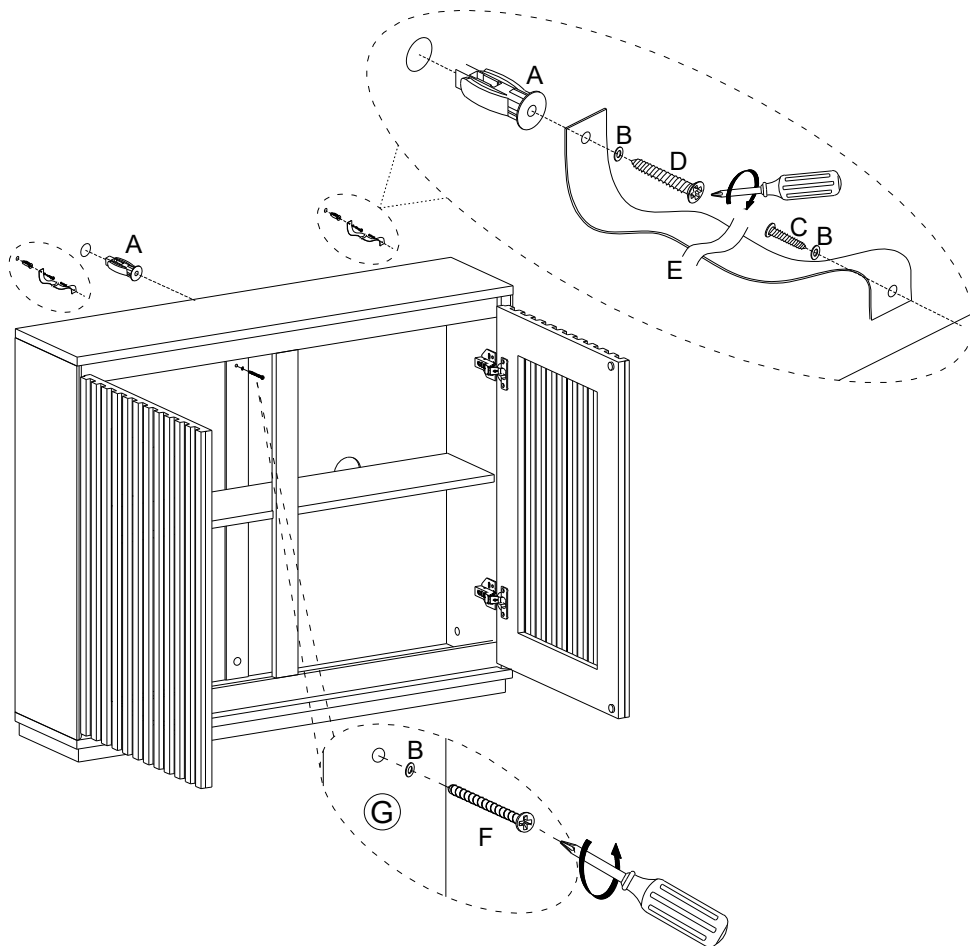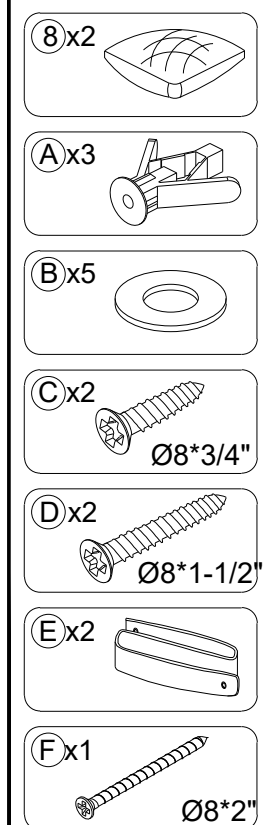

EN If it is a solid wall, please use expansion and self-tapping screws, if it is a wooden wall, only use self-tapping screws, please do not overtighten the screws

FR Si le mur est massif, veuillez utiliser des chevilles à expansion et des vis autotaraudeuses, mais s'ils s'agit d'un mur en bois, utilisez uniquement des vis autotaraudeuses et ne serrez pas trop les vis.

ES Para una pared sólida, utilice los tornillos de expansión y autorroscantes. Para una pared de madera, utilice exclusivamente los tornillos autorroscantes, no los apriete demasiado.

DE Wenn es sich um eine Massivwand handelt, verwenden Sie bitte Dehnungs- und selbstschneidende Schrauben. Wenn es sich um eine Holzwand handelt, verwenden Sie nur selbstschneidende Schrauben, bitte ziehen Sie die Schrauben nicht zu fest an.

IT Se si tratta di un muro solido, utilizzare sia viti ad espansione che autofilettanti. Se si tratta di una parete in legno, utilizzare solo viti autofilettanti, non stringere eccessivamente le viti.