










ASSEMBLY DIAGRAM

LF-244 -1.8

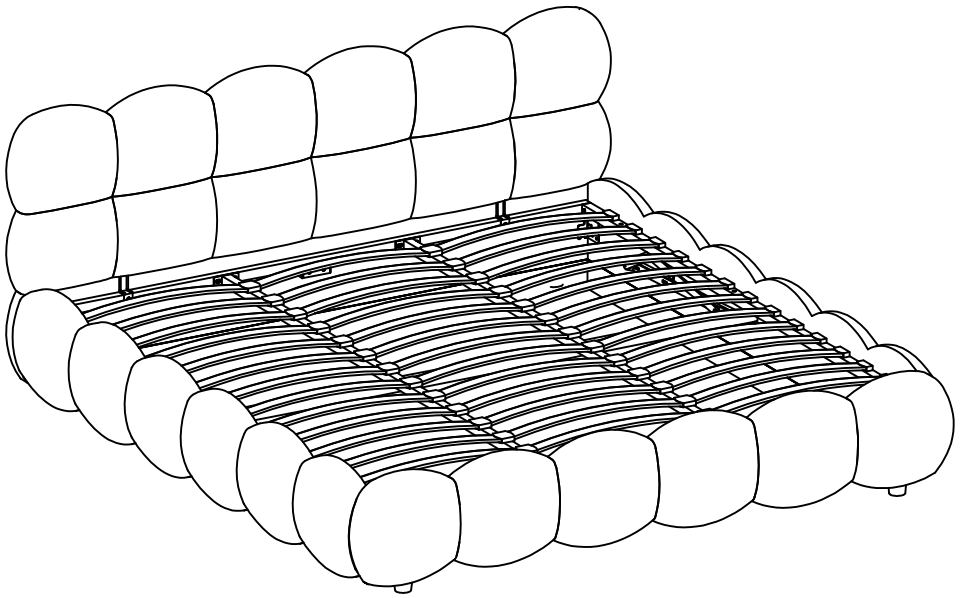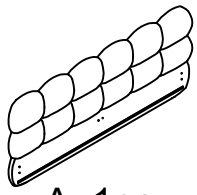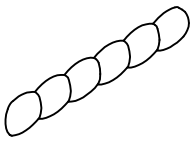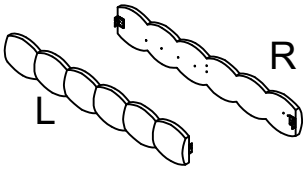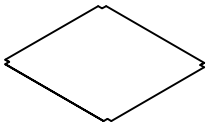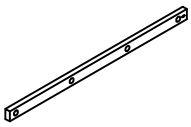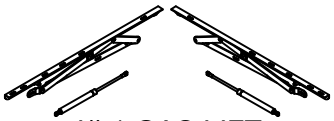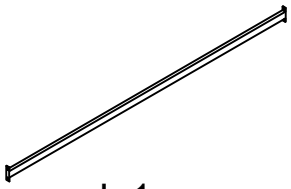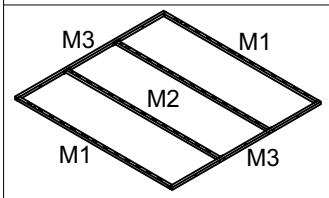

Parts List

 A: 1pc	 B: 1pc	 C: 4pcs	 D: 2pcs
 E: 1pc	 F: 2pcs	 CORNER BRACKET G: 2pcs	 H: 2pcs
 I#-1:GAS LIFT I: 2pcs	 J: 1pc	 K: 26pcs	 L: 26pcs
 M: 1Set	 N: 39pcs	 O: 1pc	 P: 2pcs

Hardware List

 M8*50mm 1: 18pcs	 M8*30mm 2: 8pcs	 M6*50mm 3: 4pcs	 M6*40mm 4: 8pcs	 M6*20mm 5: 12pcs
 M8 6: 18pcs	 M8 7: 26pcs	 M8 8: 26pcs	 M8 9: 1pc	 M8 10: 1pc
 M6 11: 24pcs	 M6 12: 1pc	 13: 6pcs	 14: 1pc	


STEP :Packing Details






C: 4pcs

F: 2pcs



CORNER BRACKET

G: 2pcs

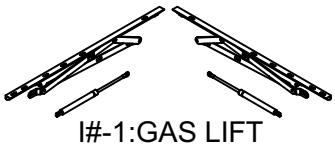

I#-1:GAS LIFT

I: 2pcs



K: 26pcs



L: 13pcs



N: 26pcs




O: 1pc




P: 2pcs

HARDWARE LIST


STEP 1

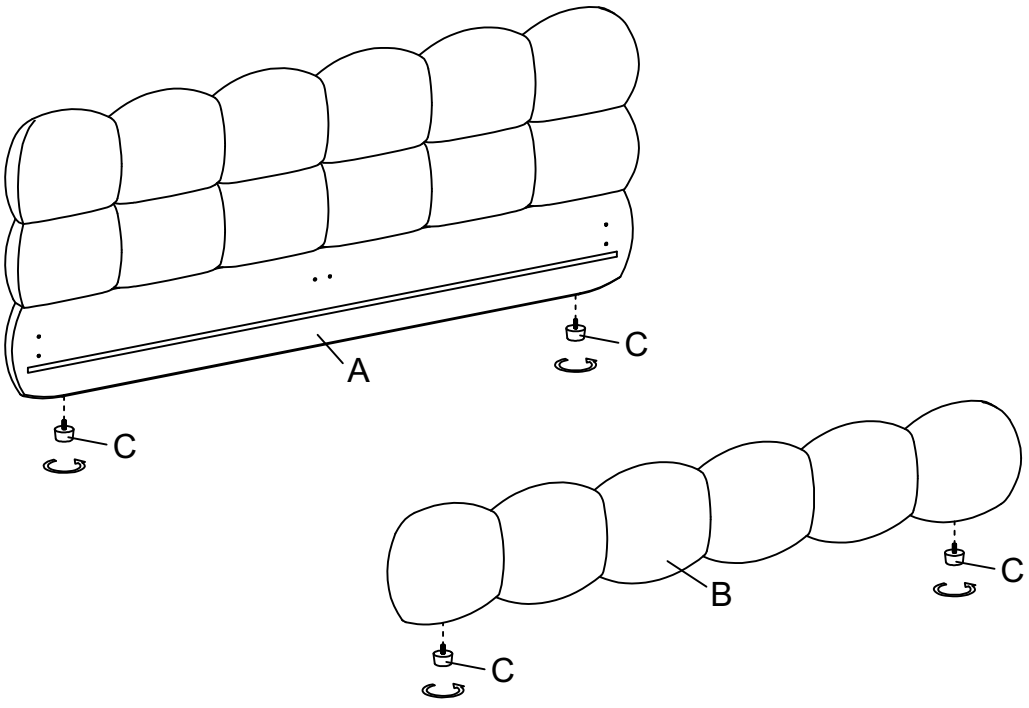

STEP 2

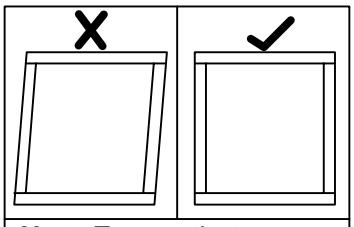

Note:Ensure that footboard,headboard and side rail sare square.

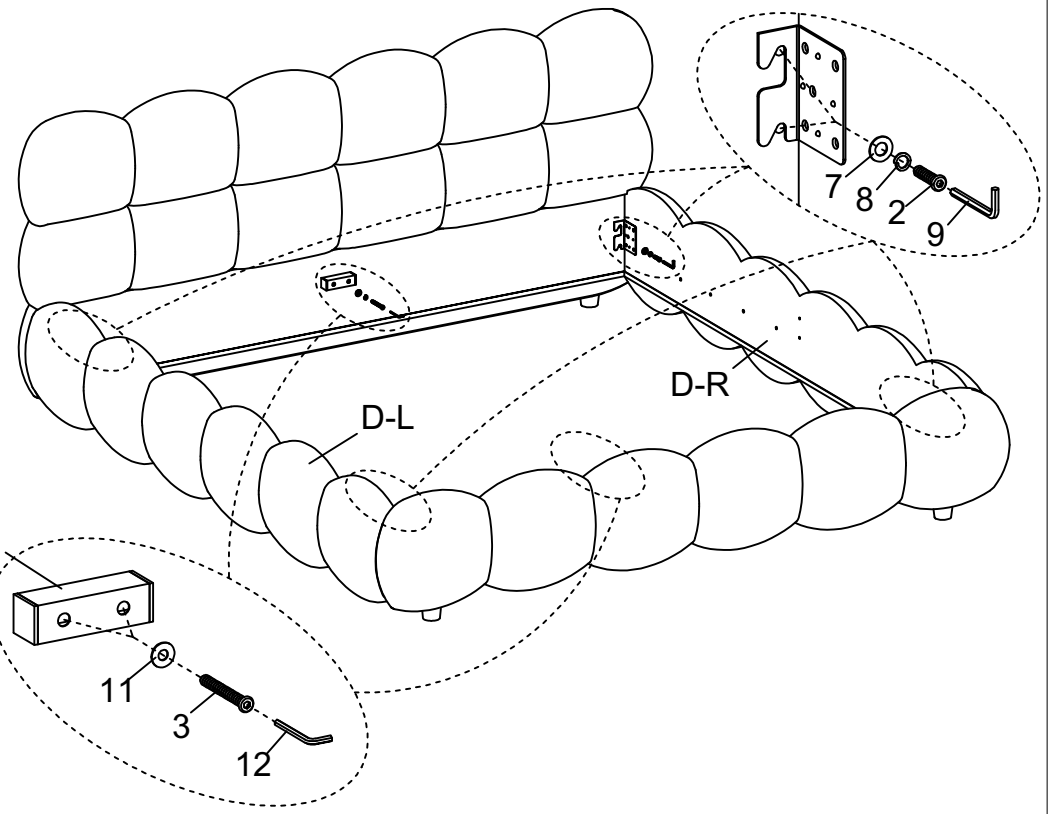


	2: 8PCS
	3: 4PCS
	7: 8PCS
	8: 8PCS
	9: 1PC
	11: 4PCS
	12: 1PC

STEP 3


E ◇ 1PC

Assembly Instructions

Attach woven fabric Turn the bed on its side and attach woven fabric (E) to the lower inner part of the bed.

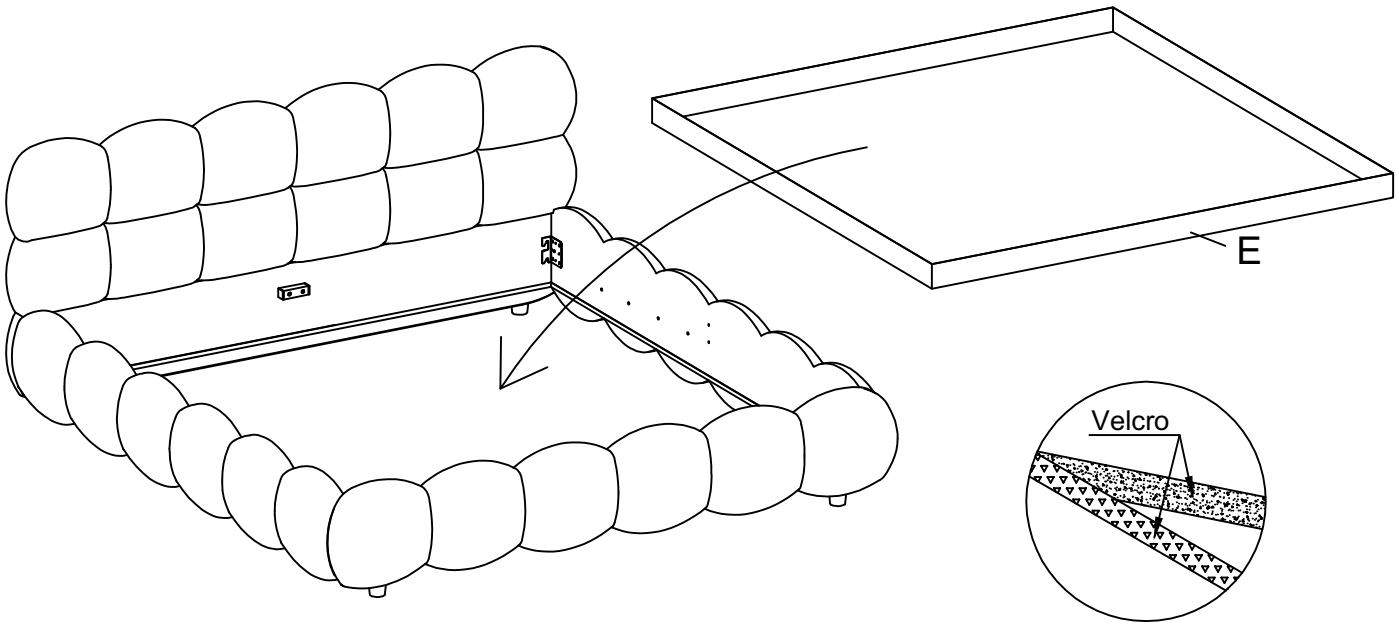


STEP 4

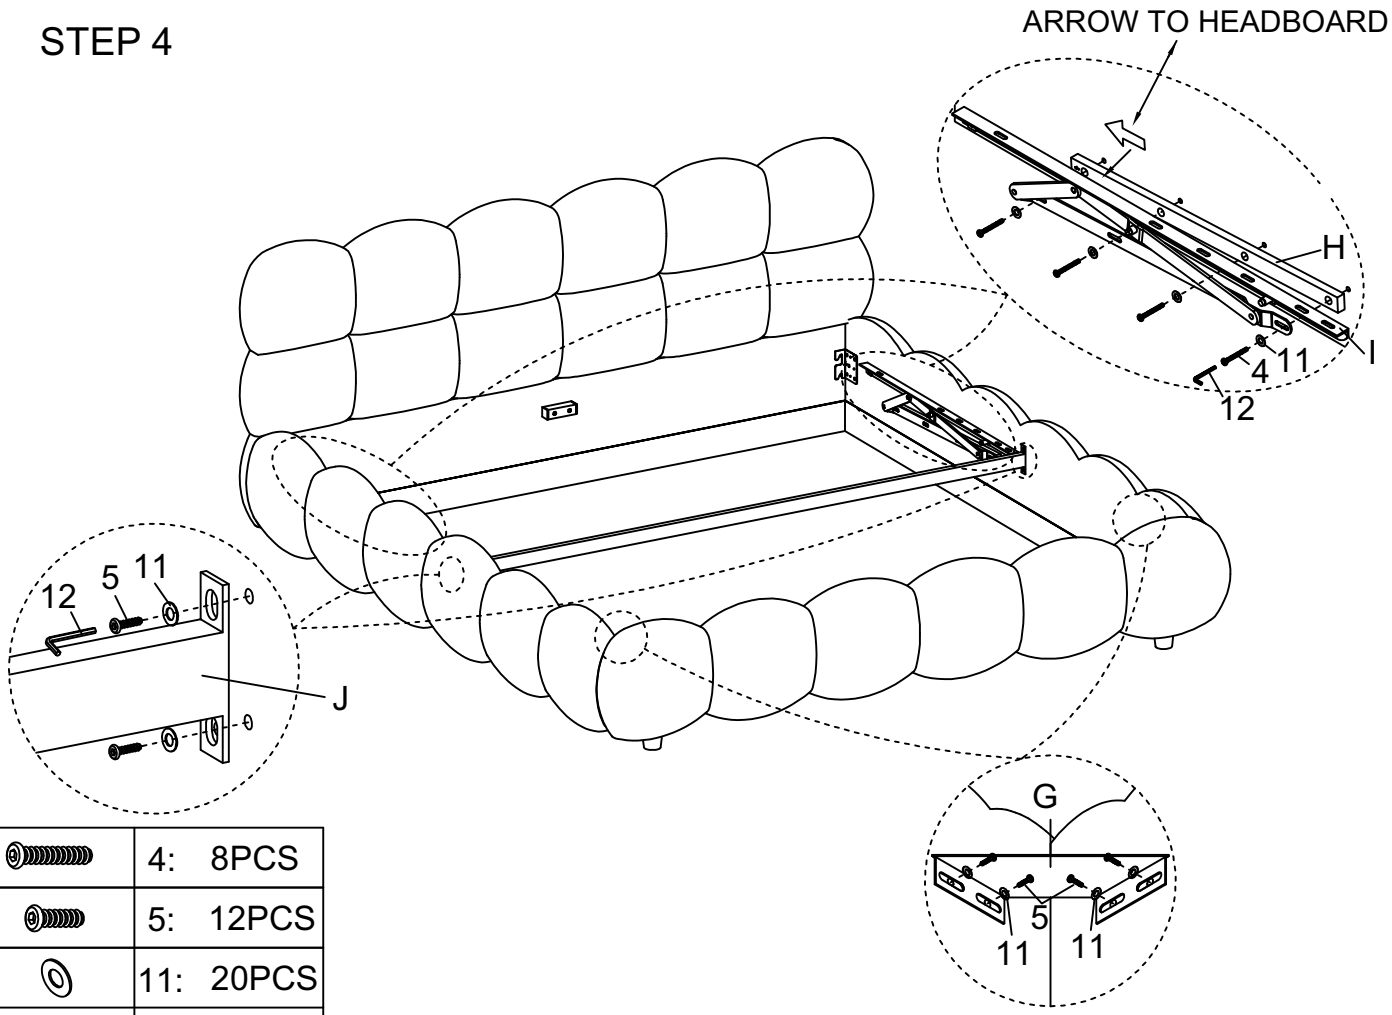


	4: 8PCS
	5: 12PCS
	11: 20PCS
	12: 1PC

STEP 5

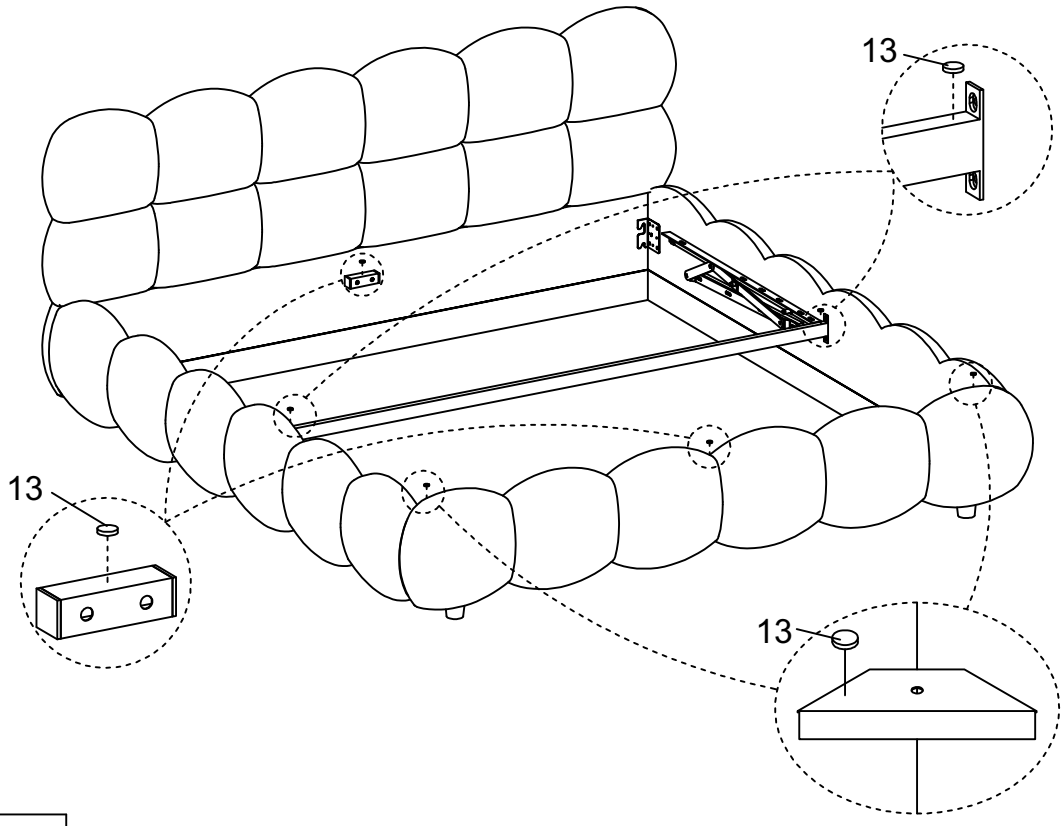


	13: 6PCS

STEP 6

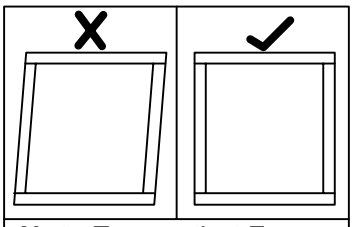


Note:Ensure that Frame assembly sare square.

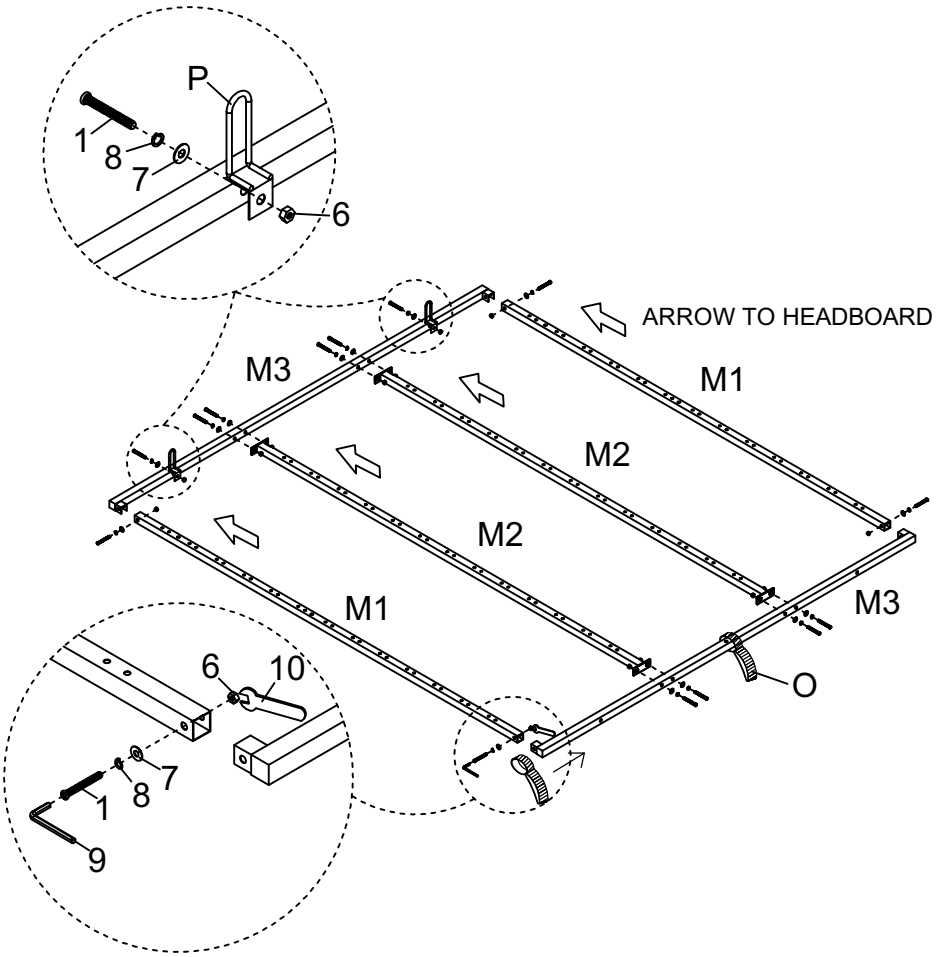


	1: 14PCS
	6: 14PCS
	7: 14PCS
	8: 14PCS
	9: 1PC
	10: 1PC

STEP 7

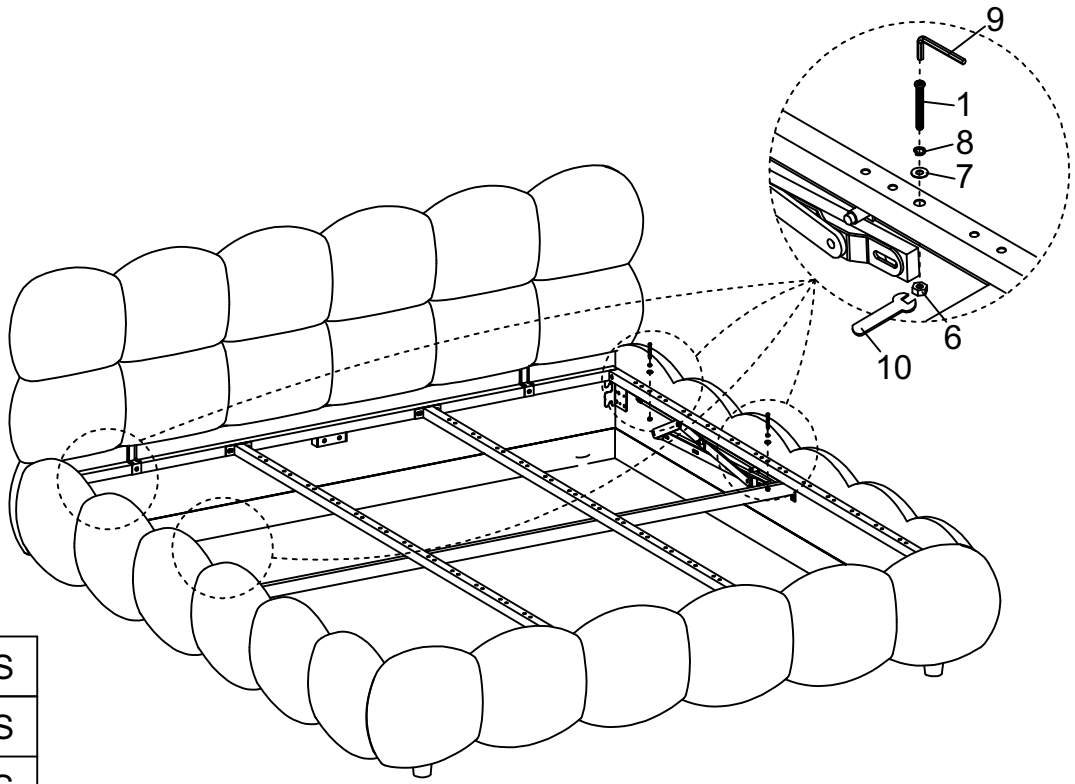


	1: 4PCS
	6: 4PCS
	7: 4PCS
	8: 4PCS
	9: 1PC
	10: 1PC


STEP 8

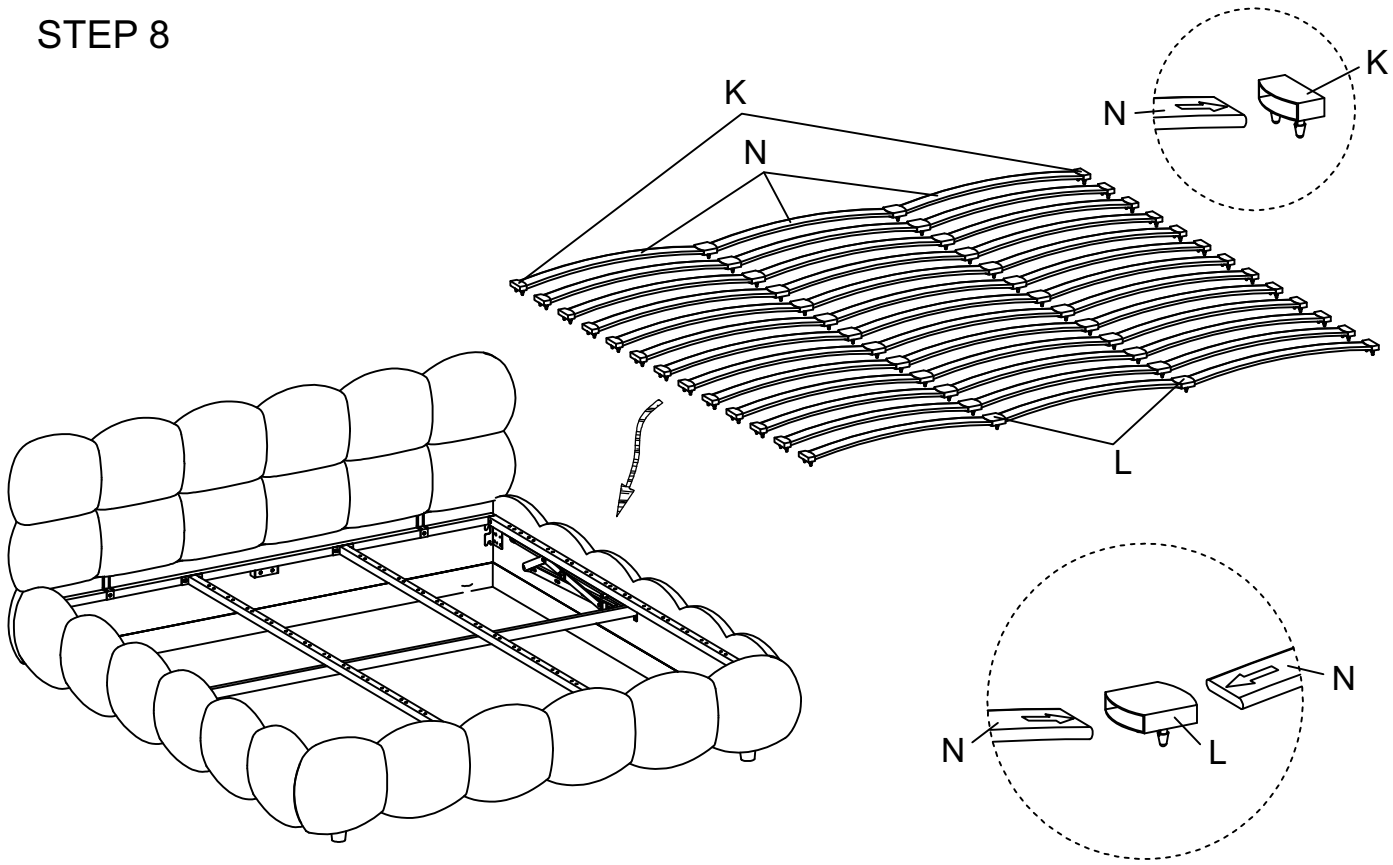


STEP 9

Assembly Instructions
Please ensure the pneumatic arm is the correct orientation.The thinner section should be attached to the side rail.
and the thicker part is connected to the slat frame.
secure the pneumatic lifting mechanisms on the side rails place by using flange nuts as shown.
Do not overtighten the nuts.

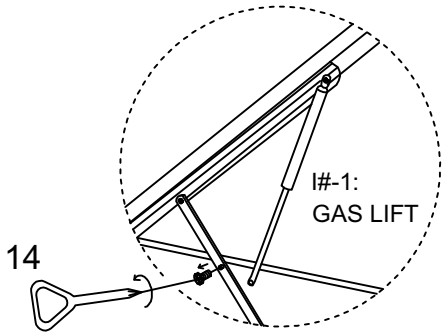

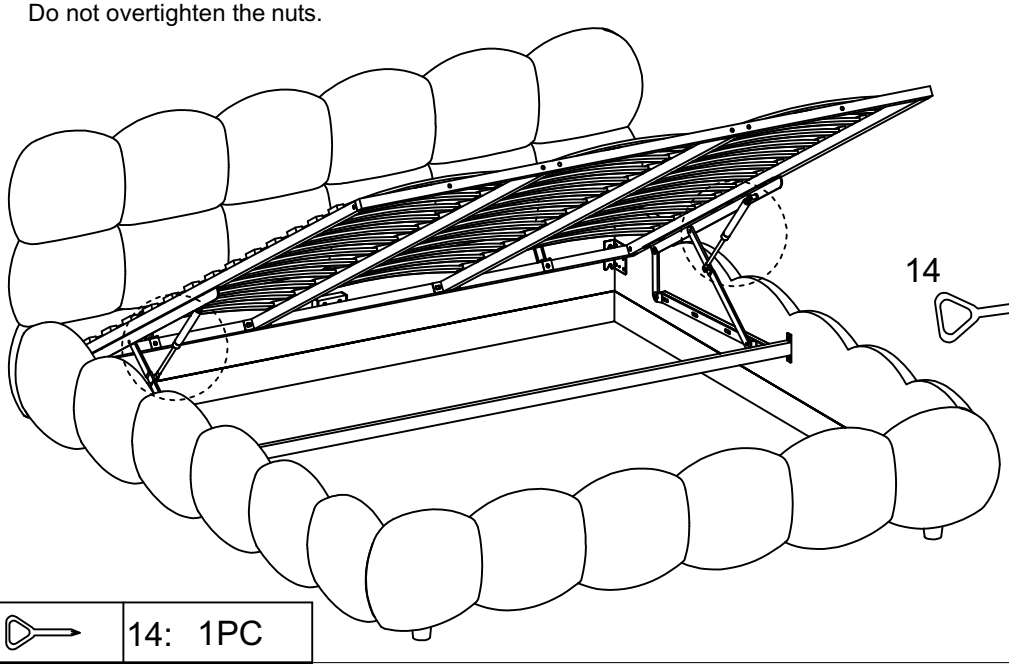

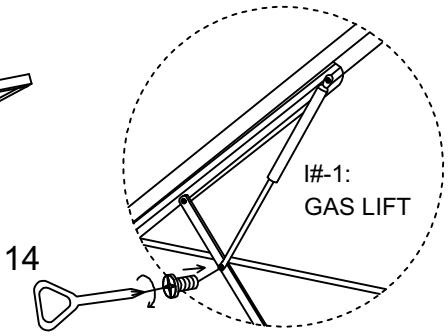

	14: 1PC